

HISTORY INFORMATION FOR THE FOLLOWING MANUAL:

SERVICE MANUAL

BA-6 CHASSIS

<u>MODEL NAME</u>	<u>REMOTE COMMANDER</u>	<u>DESTINATION</u>	<u>CHASSIS NO.</u>
KV-27FS120	RM-Y195	US	SCC-S61N-A
KV-27FS120	RM-Y195	CANADA	SCC-S59J-A
KV-29FA310	RM-Y180	LATIN NORTH	SCC-S60V-A
KV-29FA310	RM-Y180	LATIN SOUTH	SCC-S60W-A
KV-29FS120	RM-Y195	LATIN NORTH	SCC-S73D-A
KV-29FS120	RM-Y195	LATIN SOUTH	SCC-S73E-A

ORIGINAL MANUAL ISSUE DATE: 3/2004

REVISION DATE

SUBJECT

3/2004

No revisions or updates are applicable at this time.

TRINITRON® COLOR TELEVISION

SONY®

9-965-960-01

SERVICE MANUAL

BA-6 CHASSIS

<u>MODEL NAME</u>	<u>REMOTE COMMANDER</u>	<u>DESTINATION</u>	<u>CHASSIS NO.</u>
KV-27FS120	RM-Y195	US	SCC-S61N-A
KV-27FS120	RM-Y195	CANADA	SCC-S59J-A
KV-29FA310	RM-Y180	LATIN NORTH	SCC-S60V-A
KV-29FA310	RM-Y180	LATIN SOUTH	SCC-S60W-A
KV-29FS120	RM-Y195	LATIN NORTH	SCC-S73D-A
KV-29FS120	RM-Y195	LATIN SOUTH	SCC-S73E-A



KV-27FS120



KV-29FA310

TRINITRON® COLOR TELEVISION

SONY®

TABLE OF CONTENTS

SECTION TITLE	PAGE
Specifications	4
Warnings and Cautions	5
Safety Check-Out	6
Self-Diagnostic Function.....	7
SECTION 1: DISASSEMBLY.....	9
1-1. Rear Cover Removal (All Except KV-29FA310).....	9
1-2. Rear Cover Removal (KV-29FA310 Only).....	9
1-3. Chassis Assembly Removal (All Except KV-29FA310).....	10
1-4. Chassis Assembly Removal (KV-29FA310 Only).....	10
1-5. Service Position (All Except KV-29FA310).....	11
1-6. Service Position (KV-29FA310 Only).....	11
1-7. Picture Tube Removal.....	12
Anode Cap Removal Procedure.....	12
SECTION 2: SET-UP ADJUSTMENTS.....	13
2-1. Beam Landing.....	13
2-2. Convergence.....	14
2-3. Focus.....	15
2-4. Screen (G2).....	16
2-5. Method of Setting the Service Adjustment Mode.....	16
2-6. White Balance Adjustments.....	16
SECTION 3: SAFETY RELATED ADJUSTMENTS.....	17
3-1. <input checked="" type="checkbox"/> R564 Confirmation Method (HV Hold-Down Confirmation) and Readjustments.....	17
3-2. B+ Voltage Confirmation and Adjustment.....	17
SECTION 4: CIRCUIT ADJUSTMENTS.....	19
4-1. Setting the Service Adjustment Mode.....	19
4-2. Memory Write Confirmation Method.....	19
4-3. Remote Adjustment Buttons and Indicators.....	19
4-4. Service Data Lists.....	20
4-4. ID Map Table.....	32
4-5. A Board Adjustments.....	32
SECTION 5: DIAGRAMS.....	35
5-1. Circuit Boards Location.....	35
5-2. Printed Wiring Board and Schematic Diagram Information.....	35
5.3. Block Diagram and Schematics.....	36
A Board Schematic Diagram.....	37
CW Board Schematic Diagram.....	39
D Board Schematic Diagram (All Except KV-29FA310).....	40
HS Board Schematic Diagram (All Except KV-29FA310).....	41
V Board Schematic Diagram.....	41
GD Board Schematic Diagram (KV-29FA310 Only).....	44
HR Board Schematic Diagram (KV-29FA310 Only).....	47
HU Board Schematic Diagram (KV-29FA310 Only).....	49
K Board Schematic Diagram (KV-29FA310 Only).....	52
5-4. Semiconductors.....	53
SECTION 6: EXPLODED VIEWS.....	54
6-1. Picture Tube (KV-27FS120/29FS120 Only).....	54
6-2. Chassis (KV-27FS120/29FS120 Only).....	55
6-3. Picture Tube (KV-29FA310 Only).....	56
6-4. Chassis (KV-29FA310 Only).....	57
SECTION 7: ELECTRICAL PARTS LIST.....	58

SPECIFICATIONS

	KV-27FS120	KV-29FS120 (L. NORTH)	KV-29FS120 (L. SOUTH)	KV-29FA320 (L. NORTH)	KV-29FA320 (L. SOUTH)
Power Requirements	120V, 60Hz		220V, 50/60Hz	120V, 60Hz	220V, 50/60Hz
Number of Inputs/Outputs					
Video ¹⁾	3			3	
S Video ²⁾	1			1	
Y, P_B, P_R ³⁾	1			1	
Audio ⁴⁾	2			2	
Speaker Output (W)	10W x 2			7W x 3	
Subwoofer	N/A			20W	
Power Consumption (W)					
In Use (Max)	180W		175W	220W	215W
In Standby (Max) ⁵⁾	1W		1W	1W	1W
Dimensions (W x H x D)					
mm	768 x 589 x 497 mm			784 x 678 x 520.5 mm	
in	30 ^{1/4} x 23 ^{1/4} x 19 ^{5/8} in			30 ^{7/8} x 26 ^{3/4} x 20 ^{1/2} in	
Mass					
kg	45.2 kg			50 kg	
lbs	99 lbs 10 oz			110 lbs 4 oz	

Television system

American TV standard, NTSC

Channel coverage

VHF: 2-13/ UHF: 14-69/ CATV: 1-125

Picture tubeFD Trinitron[®] tube**Visible screen size**

27-inch picture measured diagonally

Actual screen size

29-inch measured diagonally

Supplied Accessories

Remote Commander RM-Y195
(All Except KV-29FA310 Only)

Remote Commander RM-Y180
(KV-29FA310 Only)

Two Size AA (R6) Batteries

- 1) 1 Vp-p 75 ohms unbalanced, sync negative
 2) Y: 1 Vp-p 75 ohms unbalanced, sync negative
 C: 0.286 Vp-p (Burst signal), 75 ohms
 3) Y: 1.0 Vp-p, 75 ohms, sync negative; PB: 0.7 Vp-p, 75 ohms;
 PR Vp-p, 75 ohms.
 4) 500 mVrms (100% modulation), Impedance: 47 kilohms
 5) This specification is the maximum wattage.

TruSurround[™] by SRS (SRS)[®]

TruSurround is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and in select foreign countries. SRS and TruSurround are incorporated under license from SRS Labs, Inc. and are protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents. Purchase of this product does not convey the right to sell recordings made with the TruSurround technology.

(SRS) SRS (SOUND RETRIEVAL SYSTEM)

The (SRS) SRS (SOUND RETRIEVAL SYSTEM) is manufactured by Sony Corporation under license from SRS Labs, Inc. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

The word 'SRS' and the SRS symbol (SRS) are registered trademarks of SRS Labs, Inc. BBE and BBE symbol are trademarks of BBE Sound, Inc. and are licensed by BBE Sound, Inc. under U.S. Patent No. 4,638,258 and 4,482,866.

© 2004 Dolby Laboratories, Inc.
 Dolby, Pro Logic, and the double-D symbol are registered trademarks of Dolby Laboratories.

Design and specifications are subject to change without notice.

WARNINGS AND CAUTIONS


CAUTION

Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield, or carbon painted on the CRT, after removing the anode.

WARNING!!

An isolation transformer should be used during any service to avoid possible shock hazard, because of live chassis. The chassis of this receiver is directly connected to the AC power line.

SAFETY-RELATED COMPONENT WARNING!!


Components identified by shading and  mark on the schematic diagrams, exploded views, and in the parts list are critical for safe operation. Replace these components with Sony parts whose part numbers appear as shown in this manual or in supplements published by Sony. Circuit adjustments that are critical for safe operation are identified in this manual. Follow these procedures whenever critical components are replaced or improper operation is suspected.

ATTENTION!!

Après avoir déconnecté le cap de l'anode, court-circuiter l'anode du tube cathodique et celui de l'anode du cap au châssis métallique de l'appareil, ou la couche de carbone peinte sur le tube cathodique ou au blindage du tube cathodique.

Afin d'éviter tout risque d'électrocution provenant d'un châssis sous tension, un transformateur d'isolement doit être utilisé lors de tout dépannage. Le châssis de ce récepteur est directement raccordé à l'alimentation du secteur.

ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

Les composants identifiés par une trame et par une marque  sur les schémas de principe, les vues explosées et les listes de pièces sont d'une importance critique pour la sécurité du fonctionnement. Ne les remplacer que par des composants Sony dont le numéro de pièce est indiqué dans le présent manuel ou dans des suppléments publiés par Sony. Les réglages de circuit dont l'importance est critique pour la sécurité du fonctionnement sont identifiés dans le présent manuel. Suivre ces procédures lors de chaque remplacement de composants critiques, ou lorsqu'un mauvais fonctionnement suspecte.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or touching high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the B+ and HV to see if they are specified values. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
8. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

Leakage Test

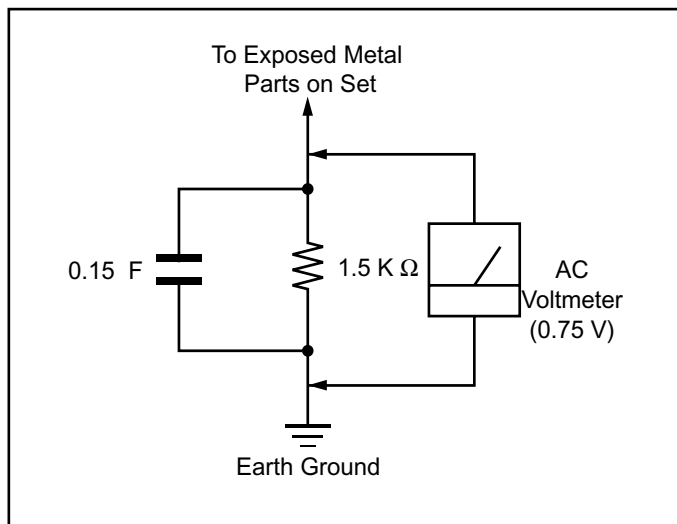


Figure A. Using an AC voltmeter to check AC leakage.

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instructions.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low voltage scale. The Simpson's 250 and Sanwa SH-63TRD are examples of passive VOMs that are suitable. Nearly all battery-operated digital multimeters that have a 2 VAC range are suitable (see Figure A).

How to Find a Good Earth Ground

A cold-water pipe is a guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms.

If a cold-water pipe is not accessible, connect a 60- to 100-watt trouble-light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side on the line; the lamp should light at normal brilliance if the screw is at ground potential (see Figure B).

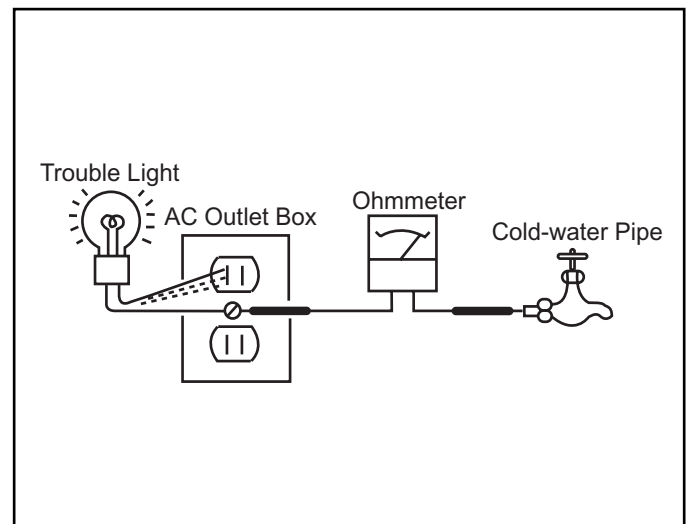


Figure B. Checking for earth ground.

SELF-DIAGNOSTIC FUNCTION



The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER LED will automatically begin to flash. The number of times the LED flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER LED flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the Remote Commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

Diagnostic Test Indicators

When an error occurs, the STANDBY/TIMER LED will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the LED will identify the first of the problem areas.



Results for all of the following diagnostic items are displayed on screen. No error has occurred if the screen displays a "0".

Diagnostic Item Description	No. of times STANDBY/ TIMER lamp flashes	Self-Diagnostic Display/ Diagnostic Result	Probable Cause Location	Detected Symptoms
Power does not turn on	Does not light	—————	<ul style="list-style-type: none"> Power cord is not plugged in. Fuse is burned out (F601). (A Board) 	<ul style="list-style-type: none"> Power does not come on. No power is supplied to the TV. AC Power supply is faulty.
+B overcurrent (OCP)*	2 times	2:0 or 2:1	<ul style="list-style-type: none"> H.OUT (Q505) is shorted. (A Board) IC2751 is shorted. (CW Board) 	<ul style="list-style-type: none"> Power does not come on. Load on power line is shorted.
I-Prot	4 times	4:0 or 4:1	<ul style="list-style-type: none"> +13V is not supplied. (A Board) IC545 is faulty. (A Board) 	<ul style="list-style-type: none"> Has entered standby state after horizontal raster. Vertical deflection pulse is stopped. Power line is shorted or power supply is stopped.
IK (AKB)	5 times	5:0 or 5:1	<ul style="list-style-type: none"> IC001 is faulty. (A Board) Screen (G2) is improperly adjusted.** 	<ul style="list-style-type: none"> No raster is generated. CRT Cathode current detection reference pulse output is small.

*If a +B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously. The symptom that is diagnosed first by the microcontroller is displayed on the screen.

**Refer to Screen (G2) Adjustments in Section 2-4. of this manual.

Display of Standby/Timer LED Flash Count

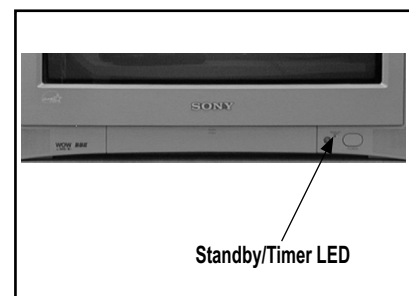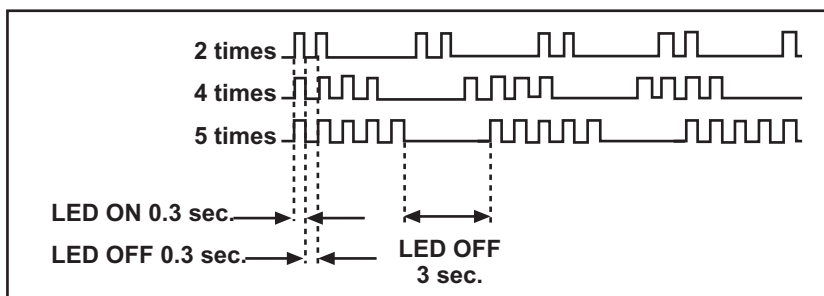

Diagnostic Item	Flash Count*
+B Overcurrent	2 times
I-Prot	4 times
IK (AKB)	5 times

*One flash count is not used for self-diagnostic.

Stopping the Standby/Timer LED Flash

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER LAMP from flashing.

Self-Diagnostic Screen Display

For errors with symptoms such as "power sometimes shuts off" or "screen sometimes goes out" that cannot be confirmed, it is possible to bring up past occurrences of failure on the screen for confirmation.

To Bring Up Screen Test

In standby mode, press buttons on the Remote Commander sequentially, in rapid succession, as shown below:

Display → Channel → Sound Volume → Power ON

↑ Note that this differs from entering the Service Mode (Sound Volume +).

Self-Diagnostic Screen Display

SELF DIAGNOSTIC		
2: +B OCP	0	
3: +B OVP	N/A	
4: VSTOP	0	
5: AKB	1	
101: WDT	N/A	

Numeral "0" means that no fault was detected.

Numeral "1" means a fault was detected one time only.

Handling of Self-Diagnostic Screen Display

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to "0".

Unless the result display is cleared to "0", the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

Clearing the Result Display


To clear the result display to "0", press buttons on the Remote Commander sequentially when the diagnostic screen is displayed, as shown below:

Channel → ENTER

Quitting the Self-Diagnostic Screen

To quit the entire self-diagnostic screen, turn off the power switch on the Remote Commander or the main unit.

Self-Diagnostic Circuit

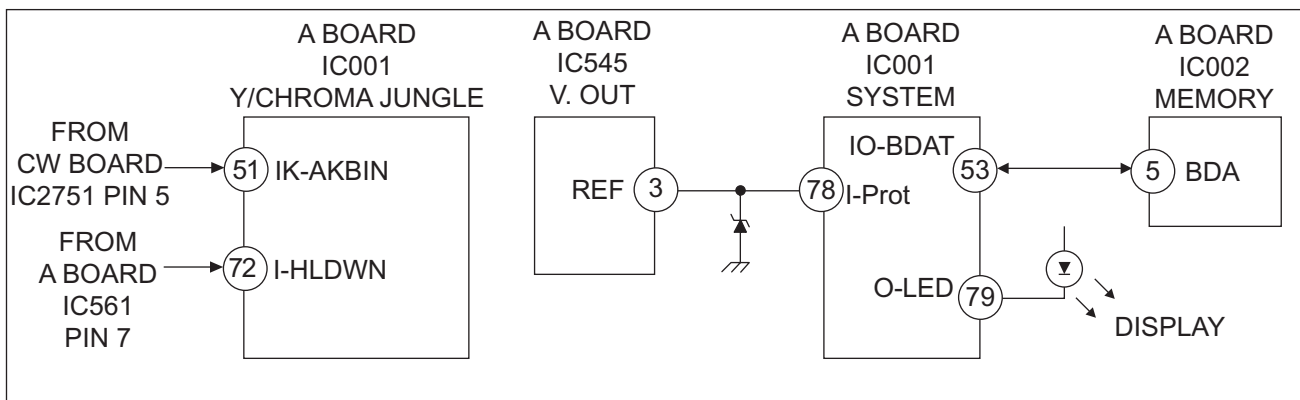

+B overcurrent (OCP)

Occurs when an overcurrent on the +B (135V) line is detected by pin 72 of IC001 (A Board). If the voltage of pin 72 of IC001 (A Board) is less than 1V when V.SYNC is more than seven verticals in a period, the unit will automatically turn off.

I-Prot

Occurs when an absence of the vertical deflection pulse is detected by pin 78 of IC001 (A Board). Power supply will shut down when waveform interval exceeds 2 seconds.


IK (AKB)

If the RGB levels* do not balance within 2 seconds after the power is turned on, this error will be detected by IC001 (A Board). TV will stay on, but there will be no picture.


*(Refers to the RGB levels of the AKB detection Ref pulse that detects 1K).

SECTION 1: DISASSEMBLY


1-1. REAR COVER REMOVAL (ALL EXCEPT KV-29FA310)

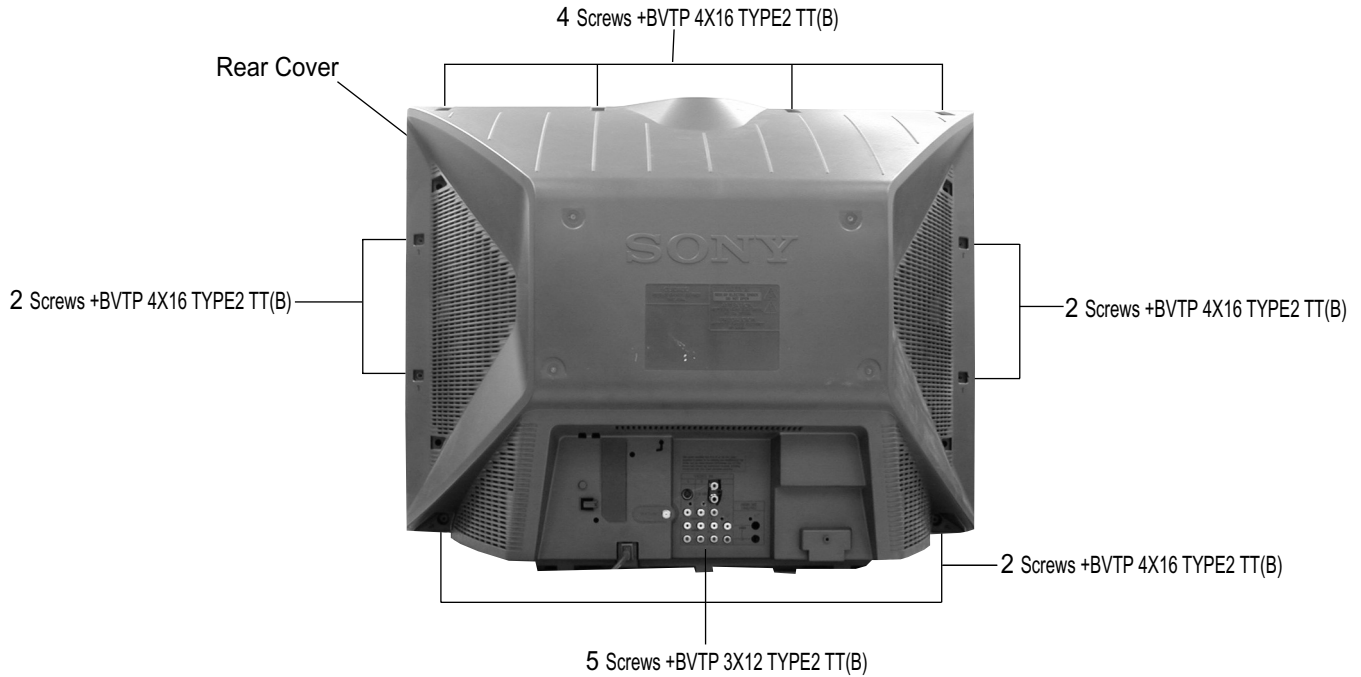


1-2. REAR COVER REMOVAL (KV-29FA310 ONLY)

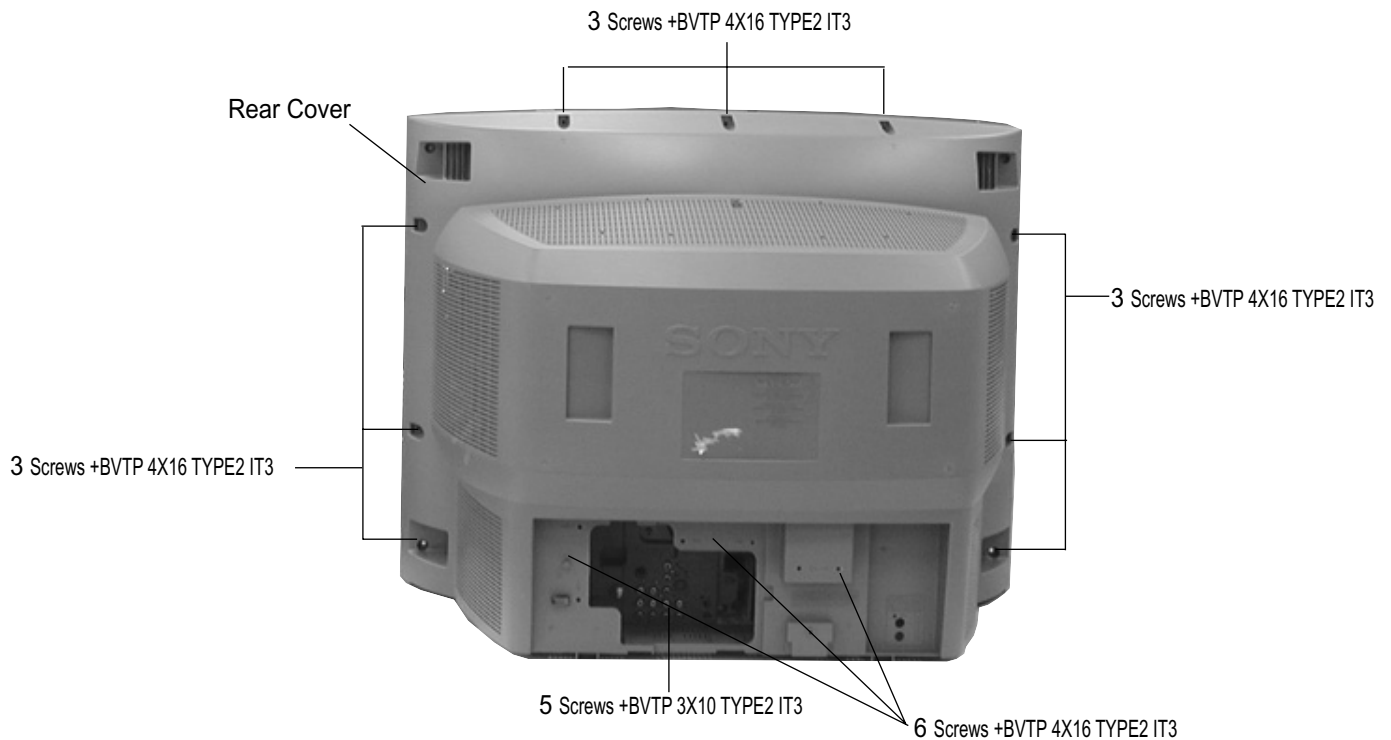

1-3. CHASSIS ASSEMBLY REMOVAL (ALL EXCEPT KV-29FA310)

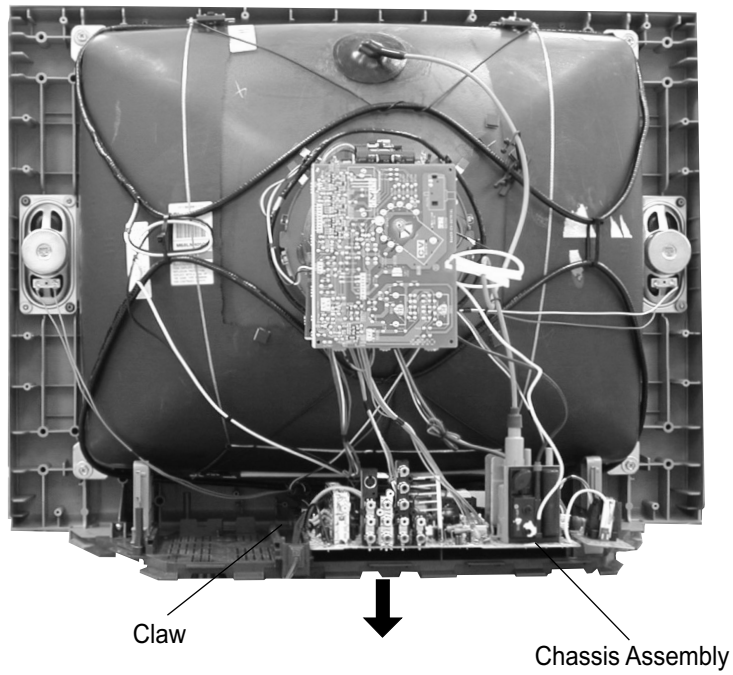


1-4. CHASSIS ASSEMBLY REMOVAL (KV-29FA310 ONLY)

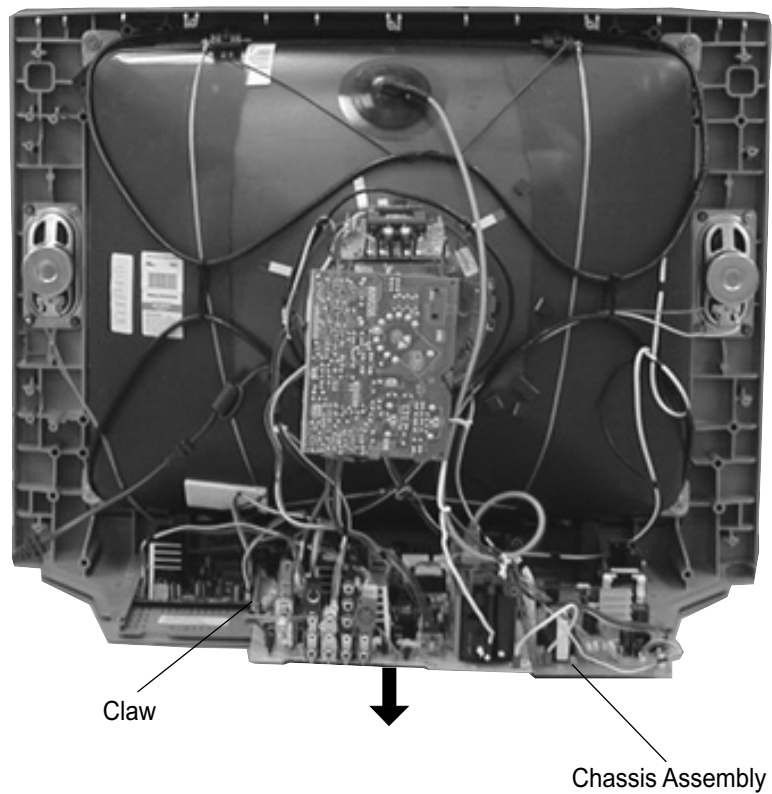


1-5. SERVICE POSITION (ALL EXCEPT KV-29FA310)

- ① Press on catch tab to release A Board.
- ② Disconnect cables as needed to allow A Board to be removed.

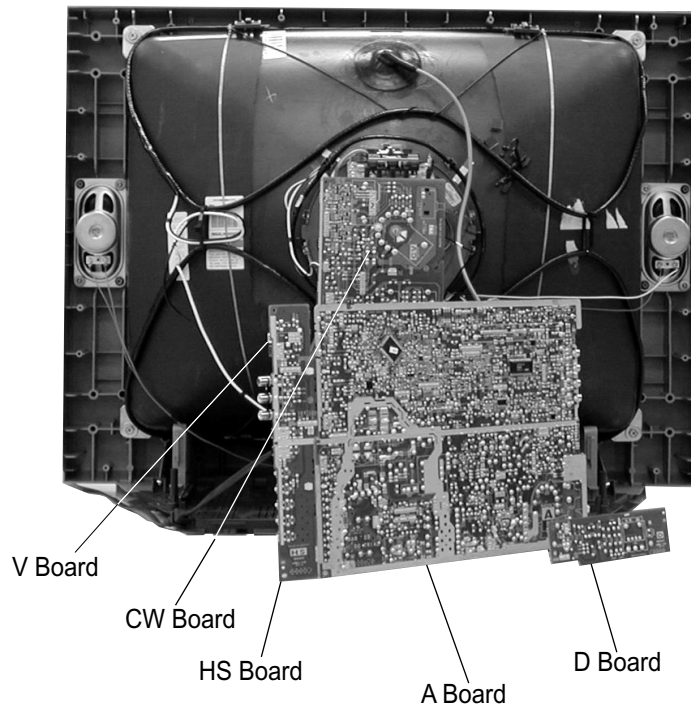

1-6. SERVICE POSITION (KV-29FA310 ONLY)



- ① Press on catch tab to release A Board.
- ② Disconnect cables as needed to allow A Board to be removed.

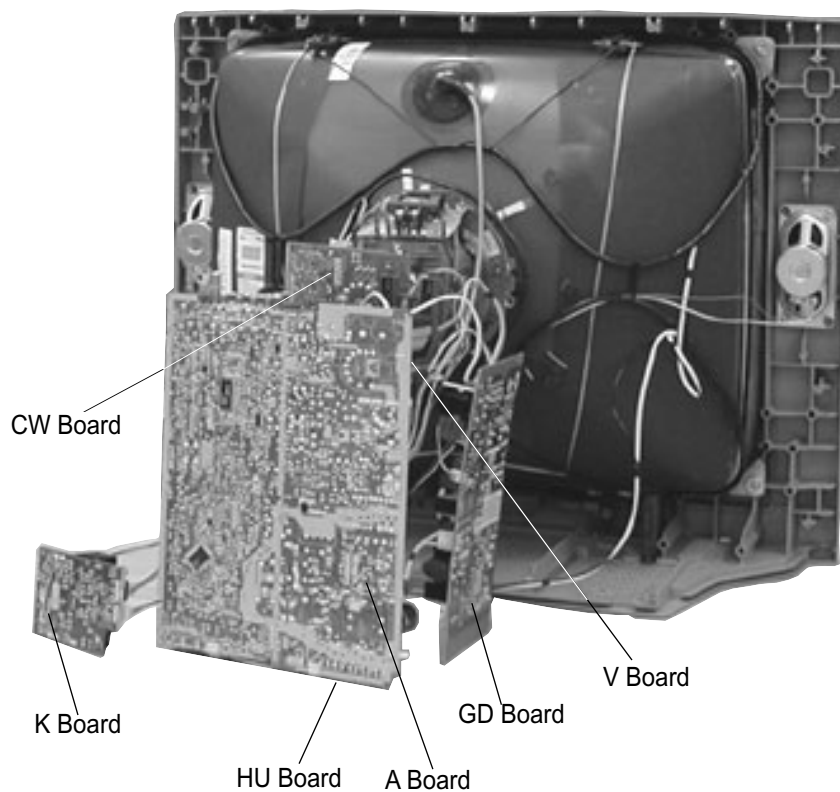

1-7. PICTURE TUBE REMOVAL

WARNING: BEFORE REMOVING THE ANODE CAP

High voltage remains in the CRT even after the power is disconnected. To avoid electric shock, discharge CRT before attempting to remove the anode cap. Short between anode and CRT coated earth ground strap.

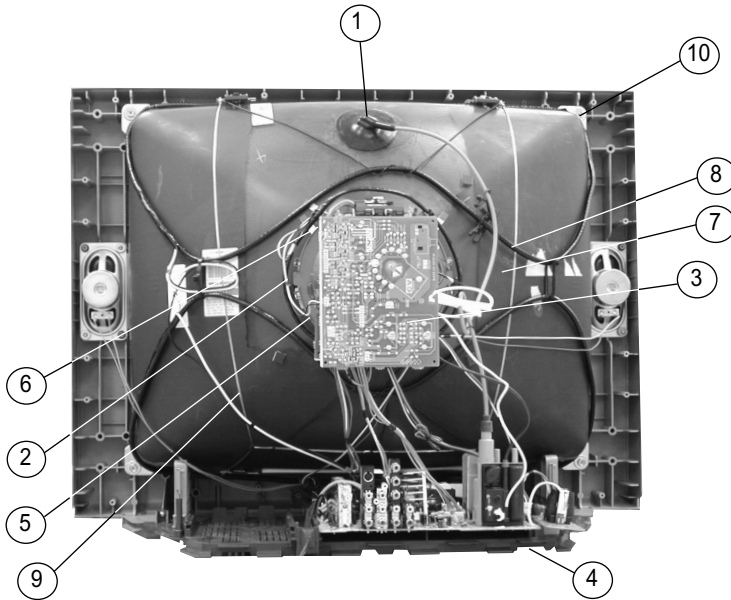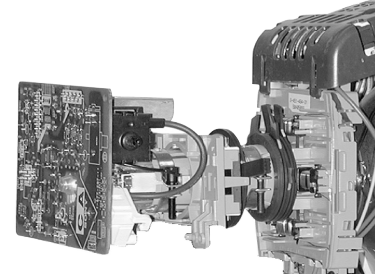


1. Discharge the anode of the CRT and remove the anode cap.
2. Unplug all interconnecting leads from the deflection yoke, neck assembly, degaussing coils and CRT grounding strap.
3. Remove the CW Board from the CRT.
4. Remove the chassis assembly.
5. Loosen the neck assembly fixing screw and remove.
6. Loosen the deflection yoke fixing screw and remove.
7. Place the set with the CRT face down on a cushion and remove the degaussing coil holders.
8. Remove the degaussing coils.
9. Remove the CRT grounding strap and spring tension devices.
10. Unscrew the four CRT fixing screws [located on each CRT corner] and remove the CRT [Take care not to handle the CRT by the neck].

ANODE CAP REMOVAL PROCEDURE


WARNING: High voltage remains in the CRT even after the power is disconnected. To avoid electric shock, discharge CRT **before** attempting to remove the anode cap. Short between anode and coated earth ground strap of CRT.

NOTE: After removing the anode cap, short circuit the anode of the picture tube and the anode cap to either the metal chassis, CRT shield, or carbon painted on the CRT.


REMOVAL PROCEDURES

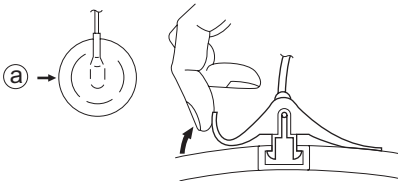

Turn up one side of the rubber cap in the direction indicated by arrow (a) .

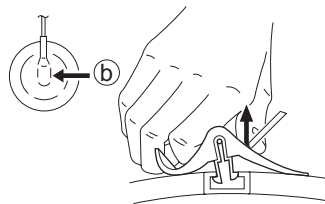


Use your thumb to pull the rubber cap firmly in the direction indicated by arrow (b) .

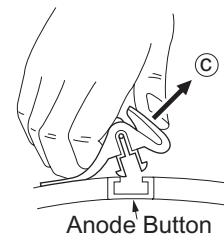

When one side of the rubber cap separates from the anode button, the anode cap can be removed by turning the rubber cap and pulling it in the direction of arrow (c) .

HOW TO HANDLE AN ANODE CAP

1. Do not use sharp objects which may cause damage to the surface of the anode cap.
2. To avoid damaging the anode cap, do not squeeze the rubber covering too hard. A material fitting called a shatter-hook terminal is built into the rubber.
3. Do not force turn the foot of the rubber cover. This may cause the shatter-hook terminal to protrude and damage the rubber.

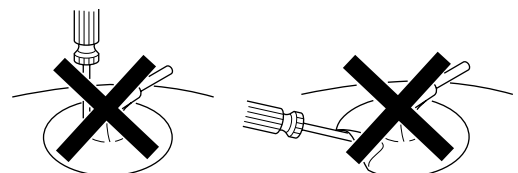

SECTION 2: SET-UP ADJUSTMENTS

The following adjustments should be made when a complete realignment is required or a new picture tube is installed.

These adjustments should be performed with rated power supply voltage unless otherwise noted.

Set the controls as follows unless otherwise noted:

VIDEO MODE: Pro

PICTURE CONTROL: Normal

BRIGHTNESS CONTROL: Normal

Perform the adjustments in order as follows:

1. Beam Landing
2. Convergence
3. Focus
4. Screen (G2)
5. White Balance

Note Test Equipment Required:

1. Color Bar Pattern Generator
2. Degausser
3. DC Power Supply
4. Digital Multimeter


2-1. BEAM LANDING

Before beginning adjustment procedure:


1. Degauss the entire screen.
2. Feed in the white pattern signal.

Adjustment Procedure

1. Input a raster signal with the pattern generator.
2. Loosen the deflection yoke mounting screw, and set the purity control to the center as shown below:


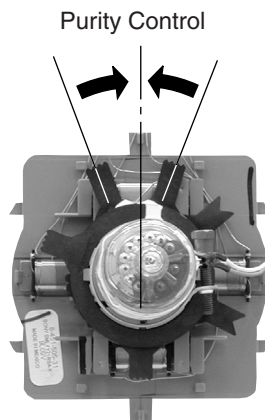


3. Turn the raster signal of the pattern generator to green.
4. Move the deflection yoke backward, and adjust with the purity control so that green is in the center and red and blue are even on both sides.

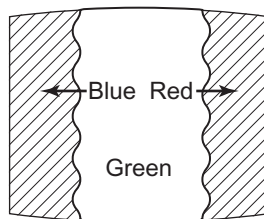

5. Move the deflection yoke forward, and adjust so that the entire screen becomes green.

6. Switch over the raster signal to red and blue and confirm the condition.
7. When the position of the deflection yoke is determined, tighten it with the deflection yoke mounting screw.
8. If landing at the corner is not right, adjust by using the disk magnets.

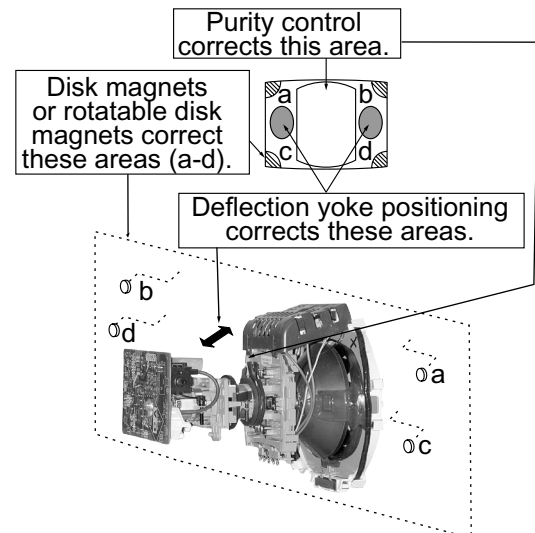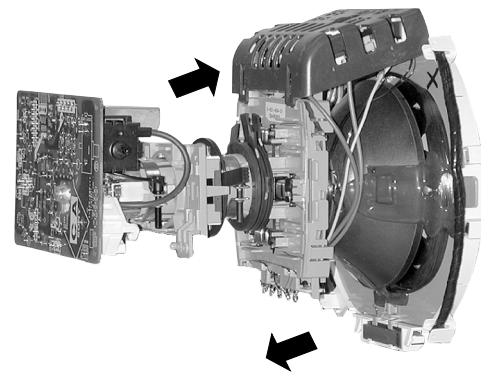


2-2. CONVERGENCE

Before starting convergence adjustments:


1. Perform FOCUS, VLIN and VSIZE adjustments.
2. Set BRIGHTNESS control to minimum.
3. Feed in dot pattern.

Vertical Static Convergence


1. Adjust V. STAT magnet to converge red, green and blue dots in the center of the screen.

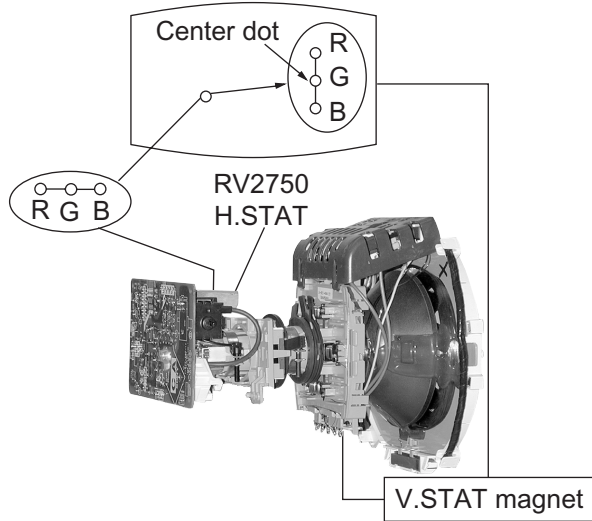

2. Tilt the V. STAT magnet and adjust static convergence to open or close the V. STAT magnet.

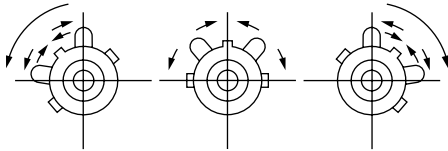


When the V. STAT magnet is moved in the direction of arrow a and b, red, green, and blue dots move as shown below:

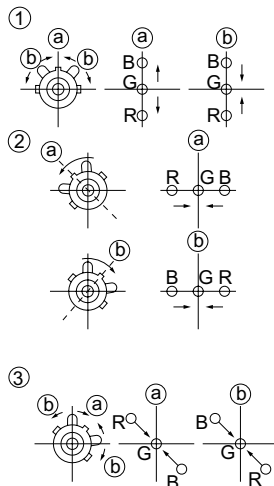

Horizontal Static Convergence

If the blue dot does not converge with the red and green dots, perform the following:


1. Move H STAT VR magnet (a) to correct insufficient H.Static convergence.

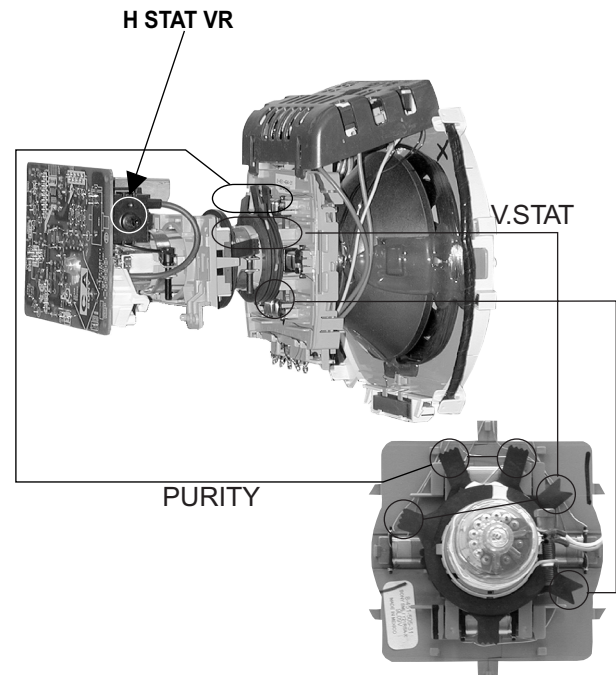

Dynamic Convergence Adjustment

Before performing this adjustment, perform Horizontal and Vertical Static Convergence Adjustment.



1. Slightly loosen deflection yoke screw.
2. Remove deflection yoke spacers.
3. Move the deflection yoke for best convergence as shown below:

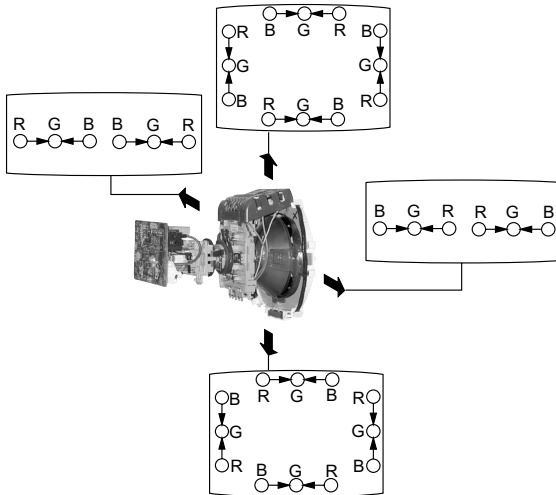

4. Tighten the deflection yoke screw.
5. Install the deflection yoke spacers.

TLH Plate Adjustment


1. Input crosshatch pattern.
2. Adjust PICTURE QUALITY to standard, PICTURE and BRIGHTNESS to 50%, and OTHER to standard.
3. Adjust the Horizontal Convergence of red and blue dots by tilting the TLH plate on the deflection yoke.

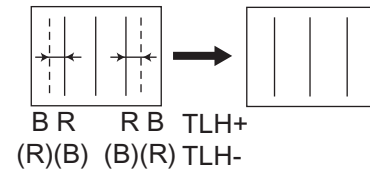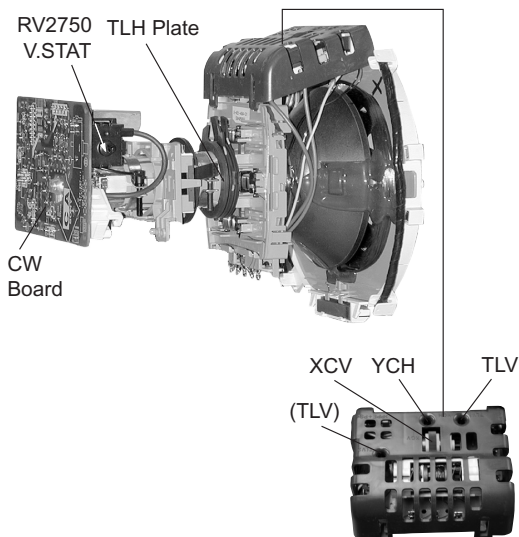

4. Adjust XCV core to balance X axis.
 5. Adjust YCH VR to balance Y axis.
 6. Adjust vertical red and blue convergence with V.TILT (TLV VR.)
- Note: Perform adjustment 3-6 while tracking items 1 and 2.


Screen-Corner Convergence

1. Affix a permalloy assembly corresponding to the misconverged areas:

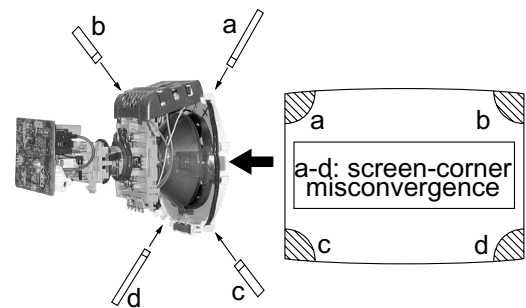


2-3. FOCUS

1. Adjust FOCUS control for best pictures.

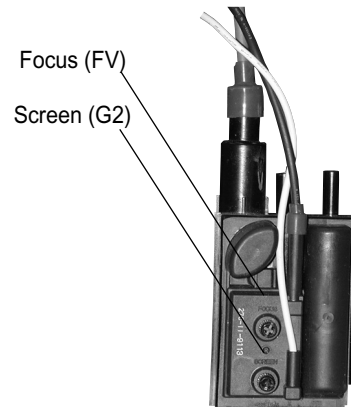

2-4. SCREEN (G2)

1. Input a dot pattern.
2. Set the PICTURE and BRIGHTNESS controls at minimum and COLOR control at normal.
3. Adjust SBRT, GCUT, BCUT in service mode with an oscilloscope as shown below so that voltages on the red, green, and blue cathodes are $160 \pm 2\text{VDC}$.

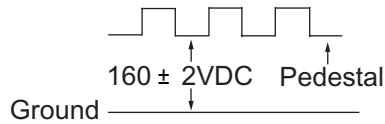

4. Observe the screen and adjust SCREEN (G2) VR in FBT to obtain the faintly visible background of dot signal.


2-5. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

Service Mode Procedure

1. Standby mode (power off).
2. Press **Display** → Channel **5** → Sound Volume **+** → Power on the Remote Commander (press each button within a second).

Service Adjustment Mode On


1. The CRT displays the time being adjusted.

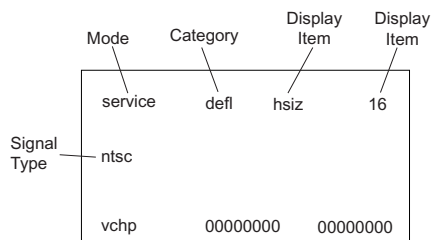

2. Press **1** or **4** on the Remote Commander to select the time.
3. Press **3** or **6** on the Remote Commander to change the data.
4. Press **MUTING** then **ENTER** to save into the memory.

Service Adjustment Mode Memory

Turn the set off then on to exit Service Adjustment Mode.

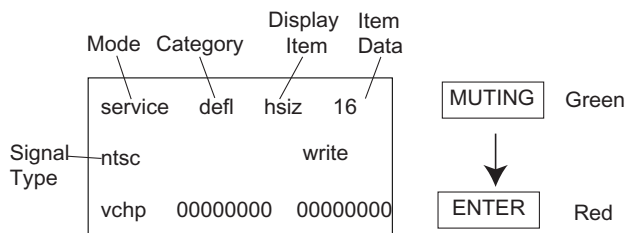




2-6. WHITE BALANCE ADJUSTMENTS

1. Input an entire white signal with burst.
2. Set to Service Adjustment Mode.
3. Set the PICTURE and BRIGHTNESS to minimum.
4. Adjust with SBRT if necessary.
5. Select GCUT and BCUT with **1** and **4**.
6. Adjust with **3** and **6** for the best white balance.
7. Set the PICTURE and BRIGHTNESS to maximum.
8. Select GDRV and BDRV with **1** and **4**.
9. Adjust with **3** and **6** for the best white balance.
10. Press **MUTING** then **ENTER** to save into the memory.

SECTION 3: SAFETY RELATED ADJUSTMENTS

3-1. R564 CONFIRMATION METHOD (HV HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components which are marked with  on the schematic diagram:

Part Replaced ()	Adjustment ()
DY, T585, CRT, IC001, IC561, IC600, IC604, C506, C507, C508, C510, C511, C513, C514, L588, D566, D567, D568, PH602, R526, R564, R565, R566, R851, T510, T511.....A Board	HV HOLD-DOWN R564


Preparation Before Confirmation


- Using a Variac, apply AC input voltage: 120 ± 2 VAC.
- Turn the POWER switch ON.
- Input a white signal and set the PICTURE and BRIGHTNESS controls to maximum.
- Confirm that the voltage between C566 (+) or TP30 and ground is more than 99VDC.

Hold-Down Operation Confirmation


- Connect the current meter between Pin 11 of the FBT (T585) and the PWB land where Pin 11 would normally attach (See Figure 1 on the next page).
- Input a dot signal and adjust the ABL current to follow with the PICTURE and BRIGHTNESS control: $IABL = 140 \pm 100\mu\text{A}$.
- Confirm the voltage of A Board TP-23 is 135.6 ± 1.0 VDC.
- Connect the digital voltmeter and the DC power supply via Diode 1SS119 to C566 (+) and ground (See Figure 1 on next page).
- Increase the DC power voltage gradually until the picture blanks out.
- Turn DC power source off immediately.
- Read the digital voltmeter indication (Standard $\leq 114.6 +0\text{VDC}/-0.3\text{DC}$).
- Input 100 IRE White Signal and adjust the ABL current to follow with the PICTURE and BRIGHTNESS control: $IABL = 1820\mu\text{A} \pm 200\mu\text{A}$.
- Repeat steps 4 through 7.

Hold-Down Readjustment

If the setting indicated in Step 2 of Hold-Down Operation Confirmation cannot be met, readjustment should be performed by altering the resistance value of R564 component marked with .

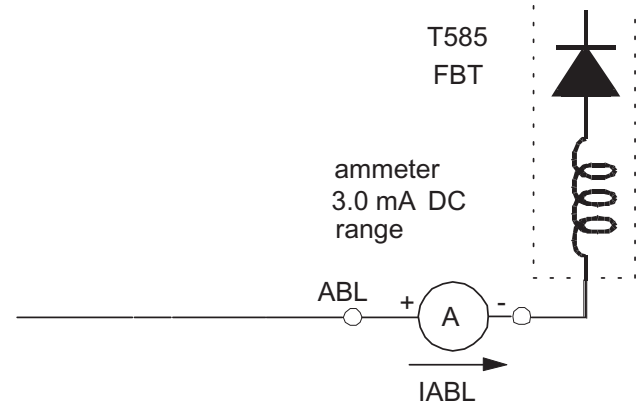


3-2. B+ VOLTAGE CONFIRMATION AND ADJUSTMENT

Note: The following adjustments should always be performed when replacing the following components, which are marked with  on the schematic diagram on the A Board:

A BOARD:  IC604, PH602

- Using a Variac, apply AC input voltage: $130 + 2.0 / - 0.0$ VAC.
- Input a DOT pattern at Q.C.
- Set the PICTURE and the BRIGHTNESS controls to minimum.
- Confirm the voltage of A Board between TP-23 & Ground is $=135.6 \pm 1$ VDC.
- If step 4 is not satisfied, replace the components listed above, then repeat steps 1 through 3.

FIGURE 1

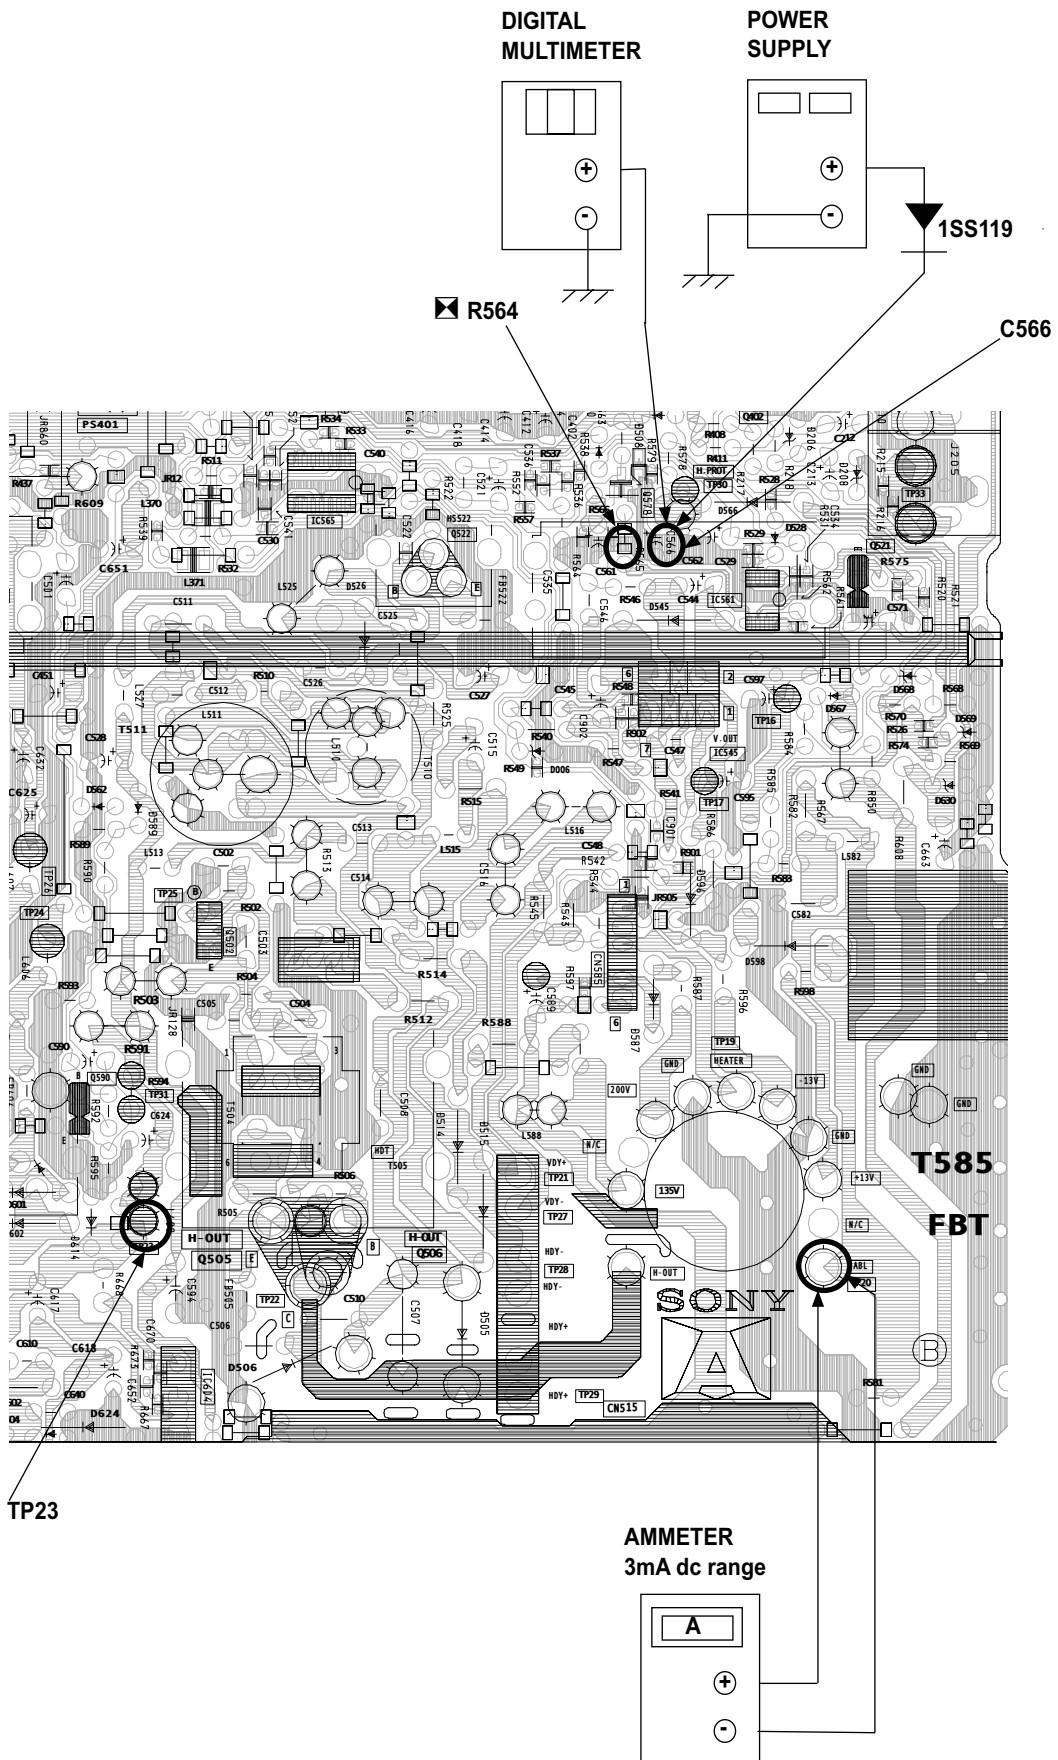

SECTION 4: CIRCUIT ADJUSTMENTS

Electrical Adjustments by Remote Commander

Use the Remote Commander (RM-Y180, RM-Y195) to perform the circuit adjustments in this section.

Test Equipment Required: 1. Pattern generator 2. Frequency counter 3. Digital multimeter 4. Audio oscillator


4-1. SETTING THE SERVICE ADJUSTMENT MODE

- Standby mode (Power off).
- Press the following buttons on the remote commander within a second of each other:

Display → **Channel 5** → **Sound Volume +** → **Power**


Service Adjustment Mode On

- The CRT displays the item being adjusted.

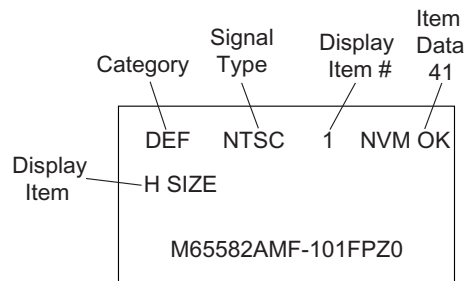


- Press **1** or **4** on the Remote Commander to select the item.
- Press **3** or **6** on the Remote Commander to change the data.
- Press **MUTING** then **ENTER** to write into memory.

Service Adjustment Mode Memory

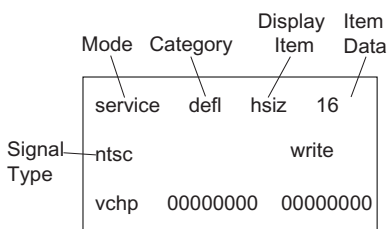

- Press **8** then **ENTER** on the Remote Commander to initialize.

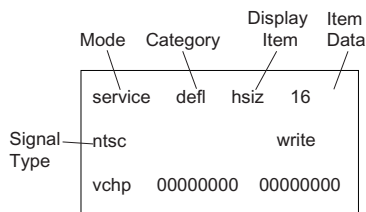


Carry out Step 1 when adjusting IDs 0-7 and when replacing and adjusting IC002

- Press **MUTING** then **ENTER** to write into memory.
- Turn set off then on to exit Service Adjustment Mode.

4-2. MEMORY WRITE CONFIRMATION METHOD

- After adjustment, pull out the plug from the AC outlet, then replace the plug in the AC outlet again.
- Turn the power switch ON and set to Service Mode.
- Call the adjusted items again to confirm they were adjusted.

4-3. REMOTE ADJUSTMENT BUTTONS AND INDICATORS

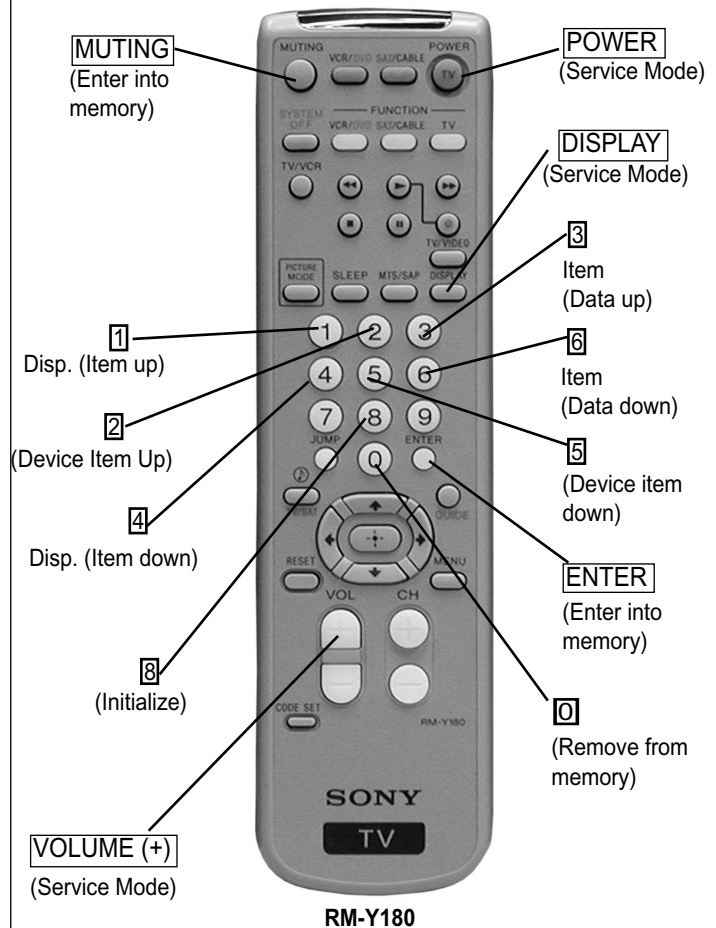

4-4. SERVICE DATA LISTS

Service Group	Fix/Var	No.	Name	Description	NTSC Init Data
VERSION	Fix	0	VER	Microprocessor version information	=
DEF	VAR	1	HSIZ	H-SIZE (EW DC : YUV OFFSET)	47
	VAR	2	HPOS	H POSITION: YUV OFFSET	36
	VAR	3	VSIZ	V RAMP SIZE: YUV OFFSET	28
	VAR	4	VPOS	V POSITION (RAMP DC) NOT USEFUL: YUV OFFSET	37
	VAR	5	VLIN	V LINEARITY	32
	VAR	6	SCOR	S CORRECTION	49
	VAR	7	VBOW	BOW	31
	VAR	8	VANG	ANGLE	37
	VAR	9	TRAP	EW TRAPESIUM	24
	VAR	10	PAMP	PARABOLA (EW PIN)	49
	VAR	11	UPIN	UPPER CORNER (UPPER PIN)	31
	VAR	12	LPIN	LOWER CORNER (LOWER PIN)	30
	VAR	13	TROT	TROT	109
	VAR	14	HBLK	FBPBLK (H BLK MODE SELECT)	0
	VAR	15	RBLK	HBLK R POS (HBLK REAR TIMING: YUV OFFSET)	15
	VAR	16	LBLK	HBLK F POS (HBLK FRONT TIMING: YUV OFFSET)	41
	FIX	17	VBLK	VBLK POS (V BLK WIDTH)	0
	FIX	18	HMSK	Macro OFF (TOP VEND [WHEN MACROVISION] PREVENT OFF)	0
	FIX	19	HDW	IIC_HOUT_DUTY (H PULSE WIDTH [25u/19u]	1
	FIX	20	AFC	H AFC Gain (AFC GAIN)	0
	FIX	21	AFC1	H Charge pump (AFC1 TIME CONSTANT)	3
	FIX	22	AFCW	AFC1 PULLIN (AFC1 PULL IN WIDE)	0
	FIX	23	CDMD	V CD MODE (V DET WINDOW SW TIMING)	1
	FIX	24	HSS	SYNC SLICE LVL(H) (SYNC SLICE LEVEL [H sepa])	0
	FIX	25	VSS	SYNC SLICE LVL(L) (SYNC SLICE LEVEL [V sepa])	3
	FIX	26	SLDN	AUTO SLICE DOWN (AUTO SLICE LEVEL DOWN)	0
	FIX	27	SLUP	AUTO SLICE UP (AUTO SLICE LEVEL UP)	0
	FIX	28	JPSW	VJPSW (JUMP SW)	0
	FIX	29	HOSC	H VCO FOR OFFSET ADJUST OFFSET	7
	FIX	30	EHT	EHT	4
	FIX	31	EHTG	EHT GAIN (EHT MODE)	1

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC Init Data
16:9	VAR	1	VSIZ	V RAMP SIZE	48
	VAR	2	VPOS	V POSITION (RAMP DC)	40
	VAR	3	VLIN	V LINEARITY	26
	VAR	4	SCOR	S CORRECTION	24
	VAR	5	TRAP	EW TRAPESIUM	22
	VAR	6	PAMP	PARABOLA (EW PIN)	24
	VAR	7	UPIN	UPPER CORNER (UPPER PIN)	31
	VAR	8	LPIN	LOWER CORNER (LOWER PIN)	31
	VAR	9	ABLG	ABL GAIN	15
	VAR	10	SCON	SUB CONTRAST LEVEL	13
	VAR	11	VPW	JUMP PULSE WIDTH	1

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC Init Data	Video	YUV	16:09
VP1	VAR	1	RDRV	R DRIVE	64	64	64	N/A
	VAR	2	GDRV	G DRIVE: GDOF OFFSET (only Color Temp. "Warm")	45	45	48	N/A
	VAR	3	BDRV	B DRIVE: BDOF OFFSET (only Color Temp. "Warm")	45	45	44	N/A
	VAR	4	RCUT	HARDWARE AKB (R) CMP DATA	120	120	120	N/A
	VAR	5	GCUT	HARDWARE AKB (G) CMP DATA	91	91	90	N/A
	VAR	6	BCUT	HARDWARE AKB (B) CMP DATA	87	87	105	N/A
	VAR	7	SCON	SUB CONTRAST LEVEL	19	19	19	N/A
	VAR	8	SHUE	SUB TINT (HUE)	7	7	7	N/A
	VAR	9	SCOL	SUB COLOR LEVEL	14	14	24	N/A
	VAR	10	SBRT	SUB BRIGHTNESS	13	13	15	N/A
	FIX	11	RON	R OUTPUT ON (0:R OUTPUT OFF 1:R OUTPUT ON)	1			
	FIX	12	GON	G OUTPUT ON (0:R OUTPUT OFF 1:R OUTPUT ON)	1			
	FIX	13	BON	B OUTPUT ON (0:R OUTPUT OFF 1:R OUTPUT ON)	1			
	FIX	14	BLLV	BLUE STRETCH (00:NO<->11:DEEP) only Color Temp "Cool"	1			
	FIX	15	MTRX	MATRIX RATIO SELECT	0			
	FIX	16	AXIS	R-Y PHASE SELECT	52			
	VAR	17	SSHO	SUB SHARPNESS GAIN (OVER) RF/VIDEO	10	25	25	N/A
	VAR	18	SSHP	SUB SHARPNESS GAIN (PRE) RF/VIDEO	15	30	30	N/A
	VAR	19	SHPF	SHARPNESS FOR (00:2 CLK <-> 11:5 CLK)	1	0	0	N/A
	FIX	20	SHCL	SHARPNESS CORING LEVEL	0			
	FIX	21	SHMX	SHARPNESS LIMITER LEVEL	15			
	FIX	22	ACLV	ACL GAIN	0			
	FIX	23	AKBD	AKB SELF DIAGNOSTIC COUNTER (@1 SEC)	2			
	FIX	24	AKBS	AKB SWITCH (0:AKB OFF 1:H/W AKB ON)	1			
	FIX	25	REFP	AKB REFPLS TIMING	0			
	FIX	26	YNRC	YNR LIMITER LEVEL	15			
	FIX	27	BKON	BLACK STRETCH ON	1			
	FIX	28	BKAT	BLACK STRETCH DETECTOR TIME CONSTANT1	15			
	FIX	29	BKRC	BLACK STRETCH DETECTOR TIME CONSTANT2	4			
	FIX	30	BKDP	BLACK STRETCH DEPTH	soft cont'l			
	FIX	31	BKSP	BLKSTPNT BLACK STRETCH POINT	2			

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC Init Data	Video	YUV	16:09
VP2	FIX	1	VMOF	VM GAIN(Off) (VM LEVEL AT "OFF" SETTING)	2			
	FIX	2	VMLO	VM GAIN(Low) (VM LEVEL AT "LOW" SETTING)	4			
	FIX	3	VMHI	VM GAIN(High) (VM LEVEL AT "HIGH"SETTING)	7			
	FIX	4	VMDL	VM DELAY (VM DELAY)	6			
	FIX	5	VMPL	VM POL (VM POLARITY)	0			
	FIX	6	VMWD	VM WIDTH (VM WIDTH)	0			
	FIX	7	VMCL	VM CORING LEVEL (VM CORING LEVEL)	0			
	FIX	8	VMMX	VM MAX (VM LIMITER LEVEL)	15			
	FIX	9	CKLV	KILLER LEVEL (VM COLOR KILLER VTH)	1	1	0	N/A
	FIX	10	CKON	FORCE KILLER (FORCE KILLER)	0			
	FIX	11	ALFA	ALFA (ADAPTIVE DET SENSITIVITY)	2			
	FIX	12	YCMD	MANEXP (YC SEPA FORCE SELECT [00:ADAPTIVE 01:H 10:V 11:HV])	0			
	FIX	13	VACL	V APERTURE CORING LV (V APERTURE CORING LEVEL)	0			
	FIX	14	VAGA	V APERTURE GAIN (V APERTURE GAIN LEVEL)	soft cont'l			
	FIX	15	VAMX	V APERTURE MAX GAIN (V APERTURE LIMITER LEVEL)	5			
	FIX	16	GAMM	GAMMA (GAMMA [00:NO <-> 11:DEEP])	soft cont'l			
	FIX	17	YDLY	Y DELAY (Y DELAY TIME)	1	1	3	N/A
	FIX	18	CDLY	C DELAY (C DELAY TIME)	0			
	FIX	19	YOFF	Y Mute (Y OUTPUT MUTE)	0			
	FIX	20	CBPF	SAW FILTER(7.2MHzBPF) (C BPF FOR HI)	0			
	FIX	21	BGPP	BGP POS (BGP [FOR C DECODER] TIMING)	9	9	28	N/A
	VAR	22	GDOF	G DRIVE OFFSET only Color Temp. "Warm"	9			
	VAR	23	BDOF	B DRIVE OFFSET only Color Temp. "Warm"	14			
	VAR	24	GCOF	G CUT CMP DATA OFFSET only Color Temp. "Warm"	11			
	VAR	25	BCOF	B CUT CMP DATA OFFSET only Color Temp. "Warm"	28			
	VAR	26	DCTV	DCTRAN VTH<6:0> (DCTTRANSFER VTH)	30			
	FIX	27	DCTG	DCTRAN GAIN<4:0> (DCTTRANSFER GAIN)	soft cont'l			

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC Init Data
NR	VAR	1	SCOL	SUB COLOR LEVEL	14
	VAR	2	SHCL	SHARPNESS CORING LEVEL	15
	VAR	3	SHMX	SHARPNESS LIMITER LEVEL	7
	FIX	4	YNRC	YNR LIMITER LEVEL	7
	FIX	5	VMHI	VM LEVEL AT " HIGH " SETTING	10
	FIX	6	VMCL	VM CORING LEVEL	0
	FIX	7	VMMX	VM LIMITER LEVEL	7
	FIX	8	VAMX	V APERTURE LIMITER LEVEL	0
	FIX	9	GAMM	GAMMA (00: NO < - > 11:DEEP)	0
	FIX	10	YNRS	YNR ON	1
	FIX	11	WSTH	WEAK SIGNAL VTH	7
	FIX	12	WSVA	WEAK SIGNAL VIDEO ATT	0
	FIX	13	WSCA	WEAK SIGNAL CHROMA ATT	5
	FIX	14	NRCH	THRNV1(NOISE DET TIME CONSTANT)	0
	FIX	15	NRCL	THRNV2 (NOISE DET TIME CONSTANT)	16
	FIX	16	NRVL	THRNVH1 (NOISE DET VTH)	2
	FIX	17	NRVH	THRNVH2 (NOISE DET VTH)	0
	FIX	18	IPNC	DETNZ STATUS COUNTER	2
	FIX	19	IPNV	DETECTION PERIOD	10

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC BA6 DATA (DEC)			
					PALLET = VIVID	PALLET = STD	PALLET = MOVIE	PALLET = PRO
PALLET	FIX	1	VPIC	PICTURE	63	50	37	31
	FIX	2	VBRI	BRIGHTNESS	27	30	31	31
	FIX	3	VCOL	COLOR	37	32	31	31
	FIX	4	VHUE	HUE	31	31	31	31
	FIX	5	VSHA	SHARPNESS	31	32	31	21
	FIX	6	VVM	VM	2	1	0	0
	FIX	7	VTRI	COLOR TEMP	0	1	2	1
	FIX	8	VAPA	APERTURE G	5	5	3	0
	FIX	9	VGMA	GAMMA	3	1	0	0
	FIX	10	VDCT	DCT LV	23	15	2	2
	FIX	11	VBKP	BLACK STRETCH DEPTH (VIDEO)	3	3	4	7
	FIX	12	TBKD	BLACK STRETCH DEPTH (TUNER)	3	3	4	7

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC Init Data
>	FIX	1	YNRS	YNR SW (YNR ON)	0
	FIX	2	YTHR	Y THR 2D (Y SIGNAL THROUGH 2DYCS)	0
	FIX	3	Y2D	Y2D Fix (Y SIGNAL GENERATE from 2DYCS)	0
	FIX	4	2DFX	C BPF Fix (C SIGNAL GENERATE from H/V BPF only	1
	FIX	5	CLPS	CLAMP CONTROL SW (0: CLAMP OFF. 1: CLAMP AUTO. 2: CLAMP ON]	1
	FIX	6	VLPF	VIDEO LPF (Y_LPF [ANALOG] for adjust)	3
	FIX	7	CLPF	CHROMA LPF (C_LPF [ANALOG] for adjust)	3
	FIX	8	BPFB	YCS HBPF BACK (YCS HBPF SELECT [BACK])	1
	FIX	9	BPFF	YCS HBPF FRONT (YCS HBPF SELECT [FRONT])	1
	FIX	10	BKTS	BS T2 IFON (BLACK STRETCH RECOVER TIME OUT	0
	FIX	11	VMG ₂	VMGAIN ₂ (MODULATOR FEEDBACK GAIN CONTROL	3
	FIX	12	CLPT	CLAMP KEEP TIMER (CLAMP AUTO ON KEEP TIMER COUNT [@ 100 MS])	15

Service Group	Fix/Var	No.	Name	Item name & (Description)	A8 Init Data	Video	YUV	16:09
C	FIX	1	A1FL	AMP OFF1 L (ANALOG ACC hysteresis)	90			
	FIX	2	A1ON	AMP ON (ANALOG ACC AMP ON LEVEL)	4			
	FIX	3	ACCS	ACC SW (ACC ON/OFF)	0	0	1	N/A
	FIX	4	AASL	AVE SEL (C DECODER TIME CONSTANT [32, 16, 8, 1H])	2			
	FIX	5	BASL	B2AVE SEL (ACC TIME CONSTANT)	0			
	FIX	6	XFFR	FREE RUN (VCXO FORCE FREERUN)	0	0	1	N/A
	FIX	7	A2ON	AMP2 ON Thresh (ABL VTH)	4			
	FIX	8	A3ON	AMP3 ON Thresh (ACL VTH)	4			
	FIX	9	A2FL	AMP2 OFF Thresh L (AMP2 OFF LEVEL LOWER)	64			
	FIX	10	A3FL	AMP3 OFF Thresh L (AMP3 OFF LEVEL LOWER)	64			
	FIX	11	AXTH	AXIS HYS (AXS HYS)	30			
	FIX	12	ACTH	ROM HYS (ROM HYS)	10			
	FIX	13	AVAV	AVE SEL AV (AVE SEL AV)	3			
	FIX	14	B2TH	B2COMP (B2COMP)	0			
	FIX	15	ACCP	ACC COMP (ACC COMP)	0			

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC	Video	YUV	16:09
					Init Data			
RGB	FIX	1	AMUT	RGB POWER ON MUTE (RGB POWER ON MUTE)	0			
	FIX	2	PMUT	RGB Mute before OSD (RGB MUTE [EXCEPT OSD]	1			
	FIX	3	CORL	CUTOFF R L (R CUTOFF LOWER)	212			
	FIX	4	CORH	CUTOFF R H (R CUTOFF UPPER)	0			
	FIX	5	COGL	CUTOFF G L (G CUTOFF LOWER WHEN TEMP IS "COOL" AND "NEUTRAL"	197			
	FIX	6	COGH	CUTOFF G H (G CUTOFF LOWER WHEN TEMP IS "COOL" AND "NEUTRAL"	0			
	FIX	7	COBL	CUTOFF B L (B CUT OFF LOWER WHEN TEMP IS "COOL" AND "NEUTRAL"	176			
	FIX	8	COBH	CUTOFF B H (B CUT OFF LOWER WHEN TEMP IS "COOL" AND "NEUTRAL"	0			
	FIX	9	ABLS	ABL SEL (ABL SELECT)	0			
	FIX	10	ALSP	ACL SPEED (ACL SPEED)	0			
	FIX	11	ALRS	ACL SPE (ACL RECOVER SPEED)	2			
	FIX	12	ALAS	ACL ASPE (ACL ATTACK SPEED)	9			
	FIX	13	ABLG	ABL GAIN (ABL GAIN)	5			
	FIX	14	ALS2	ACLASPE2 (ACL ATTACK SPEED [2])	2			
	FIX	15	AKBM	AKB MODE (AKB MODE)	0			
	FIX	16	AKBP	AKB P[5:0] (AKB PULSE HEIGHT)	16			
	FIX	17	OSDL	OSD LIMIT (OSD LIMMIT SELECT)	0			
	FIX	18	UVIN	Y/U/V UVINV (U/V INVERT)	0			
	FIX	19	UVG	U/V GAIN (U/V OFFSET CANCELER ON)	0			
	FIX	20	UOFS	U IN OFFSET (U IN OFF SET)	15			
	FIX	21	VOFS	V IN OFFSET (V IN OFF SET)	12			
	FIX	22	AALG	ANA ACL GAIN (ANALOG ACL GAIN CONTROL)	0			
	FIX	23	AALS	ANA ACL ON (ANALOG ACL ON/OFF CONTROL)	1			
	FIX	24	UVDE	UV_DITHER_EN (UVIN DITHER ENABLE)	0	0	1	N/A
	FIX	25	UVDT	UV_DITHER_TEST (UVIN DITHER TEST)	0	0	6	N/A

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC Init Data	Video	YUV	16:09
DEED	FIX	1	HFFR	AFC FREE RUN (AFC1 FORCE FREE RUN)	0			
	FIX	2	HFUP	HFREE UP (H FREE RUN FREQUENCY UP [700 Hz])	0			
	FIX	3	JSWW	VJP WIDTH (JUMP PULSE WIDTH)	0			
	FIX	4	EWCL	V/EW DAC CLK CONTROL (EW/VRAMP DA CLOCK SELECT)	0	0	0	N/A
	FIX	5	XF0A	FREE RUN OFFSET (VCXO FREE RUN ADJUST)	0			
	FIX	6	BGST	BG START (BGP [FOR PLL] TIMING)	16	16	1	N/A
	FIX	7	XPHA	VCXO CTL (VXCO PHASE ADJUST)	10			
	FIX	8	HRMP	Ramp Slew Rate (AFC2 TIME CONSTANT)	3			
	FIX	9	RPLU	Ref Charge pump (REF PLL TIME CONSTANT)	3			
	FIX	10	RPLB	Ref VCO (REF PLL TIME CONSTANT)	1			
	FIX	11	XF0B	VCXO FREE RUN (VXCO Fo ADJUST)	0			
	FIX	12	RPLS	REF FB SW (REF VCO FB LOOP SELECT)	0			
	FIX	13	SSM	Sync Sepa Mask (SyncSepaMasking CONTROL)	0			
	FIX	14	VSAG	V-sag (V-SAG prevent ON)	0			
	FIX	15	AFC2	AFC2 Gain (AFC2 GAIN CONTROL)	3			
	FIX	16	VRFL	V RAMP FIL OFF (V RAMP FILTER SWITCHING OFF)	1			
	FIX	17	SSLP	LPY SYNC (LFP pre SYNC SEPA ON/OFF)	1			
	FIX	18	XPLU	B PLL Change pump (ACP TIME CONSTANT)	1			
	FIX	19	8FSC	8FSC SEL (8fsCLK Skew OFF)	1	1	0	N/A
	FIX	20	4FS2	4FSC SEL2 (4fsCLK Skew OFF)	1	1	0	N/A
	FIX	21	CDM2	V_CD_MODE2 (V_LOGIC SW)	1			
	FIX	22	BGPC	Add. FTN BGP C (BGP C)	0			
	FIX	23	MHDL	Add. FTN BGP SEL (BBP SEL)	1			
	FIX	24	BFRE	V FREE (FORCE V FREE RUN)	0			
	FIX	25	HRPP	AFC2 RAMP POS (FRAMP RRAMP H OUT CONTROL RANGE)	8			
	FIX	26	DSCK	CLOCK SEL (DS DAC CLK SW 2)	1	1	1	0
	FIX	27	VBHK	VBLK HALFKIL (V BLK HALF KILL)	0			
	FIX	28	VPW	V PLS WIDTH (V Pulse Wide)	1			
	FIX	29	DTH	D THRESHOLD LEVEL (DITHER THRESHOLD LEVEL)	0			
	FIX	30	SLON	CONTROL AT IIC AUTOD= ON LPF SYNC ON (LPF SYNC ON)	1			

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC Init Data	Video	YUV	16:09
DEFD	FIX	31	VSSW	SYNC SLICE LVL(V)_W (SYNC SLICE LEVEL [V] Wide Window	0			
	FIX	32	AF2S	AFC2_SEL (ADC2 TIMING SW)	0			
	FIX	33	VSL2	V_SYNC_LPF_2 (DIGITAL V_SINC_LPF [Fall])	0			
	FIX	34	VSL1	V_SYNC_LPF_1 (DIGITAL V_SINC_LPF [Rise])	1			
	FIX	35	VYUV	YUV VSIZE OFFSET (YUV V-SIZE OFFSET)	8			
	FIX	36	VYVP	YUV VPOS OFFSET (YUV V-POSITION OFFSET)	8			
	FIX	37	VYHS	YUV HSIZE OFFSET (YUV H-SIZE OFFSET)	8			
	FIX	38	VYHP	YUV HPOS OFFSET (YUV H-POSITION OFFSET)	7			
	FIX	39	VSHE	V-SHRINK MODE (V-SHRINK MODE for AV)	0			
	FIX	40	VYRB	YUV RBLK (YUV RBLK OFFSET)	7			
	FIX	41	VYLB	YUV LBLK (YUV LBLK OFFSET)	7			

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC Init Data	Video	YUV	16:09
OTHER	FIX	1	PCLP	pedestal CLAMP ON/OFF (SYNC TIP/PEDESTAL CLAMP SELECT)	0			
	FIX	2	VRT	VRT Voltage (ADC REFERENCE [00:1.15Vpp 01:1.25 Vpp 10:1.35 Vpp 11:1.45 Vpp])	1			
	FIX	3	14HI	INV 14H CLK (4fsc [Skew] CLK POLARITY)	0	0	0	N/A
	FIX	4	14HD	14H CLK DLY (4fscCLK [Skew] CLK DELAY ADJUST)	0	0	0	N/A
	FIX	5	DSI	INV DS CLK (8fscCLK POLARITY)	0	0	0	N/A
	FIX	6	DSD	DS CLK DLY (8fscCLK DELAY ADJUST)	0	0	0	N/A
	FIX	7	ADCD	AD CLK DLY (ADC CLK DELAY ADJUSTO)	0	0	1	N/A
	FIX	8	4FSC	4FSC SW (AD/LOGIC CLK SWAP)	0			
	FIX	9	WSTH	WEAK_SIG_VTH (WEAK_SIGNAL VTH)	0			
	FIX	10	WSVA	WEAK SIG VIDEO ATT (WEAK SIGNAL VIDEO ATT)	0	0	0	N/A
	FIX	11	WSCA	WEAK SIG CHROMA ATT (WEAK SIGNAL CHROMA ATT)	0	0	0	N/A
	FIX	12	VREF	VREF_SEL (AD REFERENCE SELECT [VZ])	0			

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC Init Data
OSD	FIX	1	HT	HT (HALF TONE LEVEL)	0
	FIX	2	OSLR	OSD LVL R (R OSD LEVEL)	25
	FIX	3	OSLG	OSD LVL G (G OSD LEVEL)	25
	FIX	4	OSDC	OSD COMP (OSD COMP)	0
	FIX	5	OSLB	OSD LVL B (B OSD LEVEL)	25

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC Init Data
H/W AKB	FIX	1	HRIL	H/W AKB R INI DATA L (H/W AKB RED OUTPUT LOWER)	soft cont'l
	FIX	2	HRIH	H/W AKB R INI DATA H (H/W AKB RED OUTPUT UPPER)	soft cont'l
	FIX	3	HGIL	H/W AKB G INI DATA L (H/W AKB GREEN OUTPUT LOWER)	soft cont'l
	FIX	4	HGIH	H/W AKB G INI DATA H (H/W AKB GREEN OUTPUT UPPER)	soft cont'l
	FIX	5	HBIL	H/W AKB B INI DATA L (H/W AKB BLUE OUTPUT LOWER)	soft cont'l
	FIX	6	HBIH	H/W AKB B INI DATA H (H/W AKB BLUE OUTPUT UPPER)	soft cont'l
	FIX	7	HLM1	AKB_LIM1<7:0> (H/W AKB LIM1)	6
	FIX	8	HLM2	AKB_LIM2<7:0> (H/W AKB LIM2)	12
	FIX	9	HLM3	AKA_LIM3<7:0> (H/W AKB LIM3)	21
	FIX	10	HAD1	AKB_ADD1<7:0> (H/W AKB SPEED1)	2
	FIX	11	HAD2	AKB_ADD2<7:0> (H/W AKB SPEED2)	6
	FIX	12	HAKE	AKB_EN (H/W AKB MANUAL [MCU] / HARD	1
	FIX	13	HASP	AKB_SPEED (H/W AKB SPEED)	3
	FIX	14	HERL	AKB_SWERR<7:0> (H/W AKB ERROR DET THRESH)	40
	FIX	15	HLMC	AKB_ERRC<7:0> (H/W AKB ERROR DET TIME)	20
	FIX	16	HPWL	AKBSWPON<7:0> (H/W AKB POWER ON TRESH)	4
	FIX	17	HPWC	AKB_PWERRC (H/W AKB POWER ON TIME)	90
	FIX	18	HFMT	H/W AKB2 HOLD TIMER (H/W AKB2 HOLD TIMER 100 MSEC) [0: No hold]	20
	FIX	19	SPMT	AKB POW ON MUTE EXIT (AKB POWER ON MUTE EXIT TIMER)	120

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC	
					29FA310	27FS120
AUDIO PROCESSOR	VAR	1	SBAL	SBAL (SUB BALANCE)	4	4
	VAR	2	SBAS	SBAS (SUB BASS)	0	0
	VAR	3	STRE	STRE (SUB TREBLE)	6	0
	VAR	4	SRL	SRL (SURROUND LEVEL)	0	0
	VAR	5	BBOL	BBOL (SURROUND OFF-BBE LOW)	8	6
	VAR	6	BBOH	BBOH (SURROUND OFF-BBE HIGH)	4	5
	VAR	7	BBSL	BBSL (SIMULATE BBE LOW)	2	4
	VAR	8	BBSH	BBSH (SIMULATE BBE HIGH)	4	4
	VAR	9	BBGL	BBGL (WOW GAME BBE LOW)	6	0
	VAR	10	BBGH	BBGH (WOW GAME BBE HIGH)	4	0
	VAR	11	BBTL	BBTL (SRS BBE LOW)	0	6
	VAR	12	BBTH	BBTH (SRS BBE HIGH)	0	4
	VAR	13	BBDL	BBDL (Audio Processor Prologic BBE Low for DOLBY)	6	0
	VAR	14	BBDH	BBDH (Audio Processor Prologic BBE High for DOLBY)	4	0
	VAR	15	VFIX	VFIX (AUDIO OUTPUT FIX DATA)	0	243
	VAR	16	AGCL	AGCL (AGC LEVEL)	2	2
	VAR	17	VCOF	RF OFFSET DATA	9	9

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC	
					29FA310	27FS120
AP2	VAR	1	BBEL	SUB AUDIO PROCESSOR PROLOGIC BBE LOW	9	0
	VAR	2	BBEH	SUB AUDIO PROCESSOR PROLOGIC BBE HIGH	9	0
	VAR	3	BBOL	SURROUND OFF-BBE LOW	9	0
	VAR	4	BBSL	SIMULATE BBE LOW	5	0
	VAR	5	BBGL	WOW GAME BBE LOW	10	0
	VAR	6	AGCL	SUB AUDIO PROCESSOR AGC LEVEL	2	0
	VAR	7	DDOF	DOLBY OFFSET DATA	15	0

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC Init Data
MICROPROCESSOR	FIX	1	DISP	DISP (OSD HORIZONTAL OFFSET)	55
	FIX	2	CCHP	CCHP (FOR TILT DATA CALCULATION)	80
	FIX	3	HRLW	HRLW (LOW LIMIT OF H-PULSE COUNTING WINDOW [RF])	16
	FIX	4	HRHG	HRHG (HIGH LIMIT OF H-PULSE COUNTING WINDOW [RF])	64
	FIX	5	HSDT	HSDTCT (H-PULSE DETECTION [S-VIDEO])	8
	FIX	6	STPI	STPI (GRADUAL CONTRAST INCREASE STARTING LEVEL)	40
	FIX	7	RAPI	RAPI (GRADUAL CONTRAST INCREASE Vsync COUNTER)	10

Service Group	Fix/Var	No.	Name	Item name & (Description)	NTSC Init Data
Feature	VAR		ID0	Language related	81
	VAR		ID1	Video related	31
	VAR		ID2	Audio related	113
	VAR		ID3	Miscellaneous	130
	VAR		ID4	Miscellaneous	32
	VAR		ID5	Miscellaneous	24
	VAR		ID6	Miscellaneous	48
VAR		ID7	Miscellaneous	69	

4-4. ID MAP TABLE

Model	Destination	ID-0	ID-1	ID-2	ID-3	ID-4	ID-5	ID-6	ID-7
KV-27FS120	US	89	31	17	34	0	24	0	5
KV-27FS120	CND	89	31	17	50	0	24	0	5
KV-29FS120	L NORTH	81	31	17	130	32	24	48	69
KV-29FS120	L SOUTH	81	31	17	130	32	24	48	69
KV-29FA310	L NORTH	81	31	113	130	32	24	48	69
KV-29FA310	L SOUTH	81	31	113	130	32	24	48	69

4-5. A BOARD ADJUSTMENTS

H. Frequency (Free Run) Check

1. Input a TV mode (RF) with no signal.
2. Connect a frequency counter to base of Q502 (TP-25 H. DRIVE) on the A Board.
3. Check H. Frequency for 15735 ± 200 Hz.

V. Frequency (Free Run) Check

1. Select video 1 with no signal input.
2. Set the conditions for a standard setting.
3. Connect the frequency counter to TP-27 (V OUT) or CN515 pin ⑥ (V DY+) and ground on the A Board .
4. Check that V. Frequency shows 60 ± 4 Hz.

Drive (SCON)


1. Input a color-bar signal and set the level to 75%.
2. Set in Pro mode + PICTURE MAX.
3. Activate the Service Adjustment Mode.
4. Set GON and BON items. Using **[3]** and **[6]** set each to the following values. Leave RON set to "1".

	Mode	Category	Display Item	Item Data
Signal Type	service	video	rdrv	26
	ntsc			
	vchp	00000000	00000000	

R ON: ON (1)
G ON: OFF (0)
B ON: OFF (0)

5. Connect an oscilloscope probe to CW Board, JW2704 (KR).
6. Select SCON with **[1]** and **[4]**.

7. Adjust the value of SCON with **[3]** and **[6]** for 87 ± 2 Vpp.

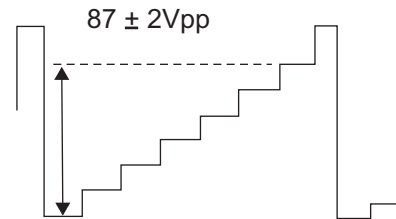

8. Reset GON and BON values to "1".

R ON: ON (1)
G ON: ON (1)
B ON: ON (1)

9. Press **[MUTING]** then **[ENTER]** to save into the memory.

Display Position Adjustment (DISP)

1. Input a color-bar signal.
2. Set to Service Adjustment Mode.
3. Select DISP with **[1]** and **[4]**.
4. Adjust values of DISP with **[3]** and **[6]** to adjust characters to the center.
5. Press **[MUTING]** then **[ENTER]** to save into the memory.
6. Check to see if the text is displayed on the screen.


	Mode	Category	Display Item	Item Data
Signal Type	service	micro	disp	48
	ntsc			
	vchp	00000000	00000000	

Sub Bright Adjustment (SBRT)

1. Input a monoscope signal.
2. Activate the Service Adjustment Mode.
3. Set the PICTURE and BRIGHTNESS to minimum.
4. Select the SBRT item with **1** and **4**.
5. Adjust the values of SBRT with **3** and **6** to obtain a faintly visible 20 IRE mark, after that increase +3 steps.
6. Press **MUTING** then **ENTER** to save into the memory.

Sub Hue, Sub Color Adjustment (SHUE, SCOL)


1. Input color-bar signal at 75%.
2. Activate the Service Adjustment Mode.
3. Set (PIC) to Max and (COL) to 50%.
4. Connect an oscilloscope probe to CW Board, JW7408 (Blue Out).
5. Select the SHUE and SCOL item with **1** and **4**.
6. While showing the SHUE item, adjust the waveform with **3** and **6** until the second and third bars show the same level ($V2 = V3 < 0.15V_{p-p}$). Set Sub Hue -2 Step.
7. While showing the SCOL item, adjust the waveform with **3** and **6** until the first and fourth bars show the same level ($V1 = V4 < 0.15V_{p-p}$). Set Sub Col +2 Step.

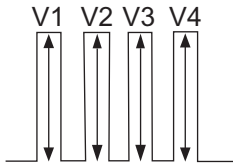

8. Press **MUTING** then **ENTER** to save into the memory.

V. Size Adjustment (VSIZ)


1. Input a crosshatch signal.
2. Activate the Service Adjustment Mode.
3. Select the VSIZ item with **1** and **4**.
4. Adjust value of VSIZ with **3** and **6** for the best vertical size.
5. Press **MUTING** then **ENTER** to save into the memory.

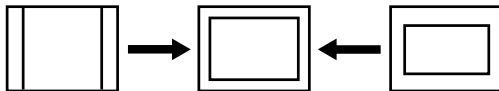

V. Center Adjustment (VPOS)

Perform this adjustment after performing H. Frequency (Free Run) Check.


1. Input a crosshatch signal.
2. Activate the Service Adjustment Mode.
3. Select the VPOS item with **1** and **4**.
4. Adjust value of VPOS with **3** and **6** for the best vertical center.
5. Press **MUTING** then **ENTER** to save into the memory.



H. Center Adjustment (HPOS)


Perform this adjustment after performing H. Frequency (Free Run) Check.

1. Input a crosshatch signal.
2. Activate the Service Adjustment Mode.
3. Select the HPOS item with **1** and **4**.
4. Adjust the value of HPOS with **3** and **6** for the best horizontal center.
5. Press **MUTING** then **ENTER** to save into the memory.





H. Size Adjustment (HSIZ)

1. Input a monoscope signal.
2. Activate the Service Adjustment Mode.
3. Select HSIZ with **1** and **4**.
4. Adjust with **3** and **6** for the best horizontal size.
5. Press **MUTING** then **ENTER** to save into the memory.



V. Linearity (VLIN), V. Correction (SCOR), PIN Amp (PAMP), and Horizontal Trapezoid (HTRP) Adjustments


1. Input a crosshatch signal.
2. Activate the Service Adjustment Mode.
3. Select VLIN, SCOR, PAMP, and HTRP with with **1** and **4**.
4. Adjust with **3** and **6** for the best horizontal size.
5. Press **MUTING** then **ENTER** to save into the memory.

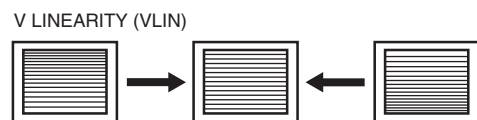


V. Angle (VANG), V. Bow (VBOW), Upper PIN (UPIN) and Low PIN (LPIN) Adjustments

1. Input a crosshatch signal.
2. Activate the Service Adjustment Mode.
3. Select VANG, VBOW, UPIN, and LPIN with **[1]** and **[4]**.
4. Adjust with **[3]** and **[6]** for the best picture.
5. Press **[MUTING]** then **[ENTER]** to save into the memory.


V ANGLE (VANG)




V BOW (VBOW)



UPPER PIN (UPIN)




LOW PIN (LPIN)



Service Adjustment Mode Memory


1. After completing all adjustments, press **[0]** then **[ENTER]**.

Read From Memory

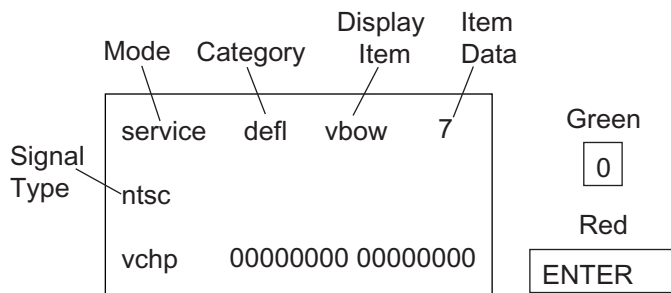

SECTION 5: DIAGRAMS

5-1. CIRCUIT BOARDS LOCATION

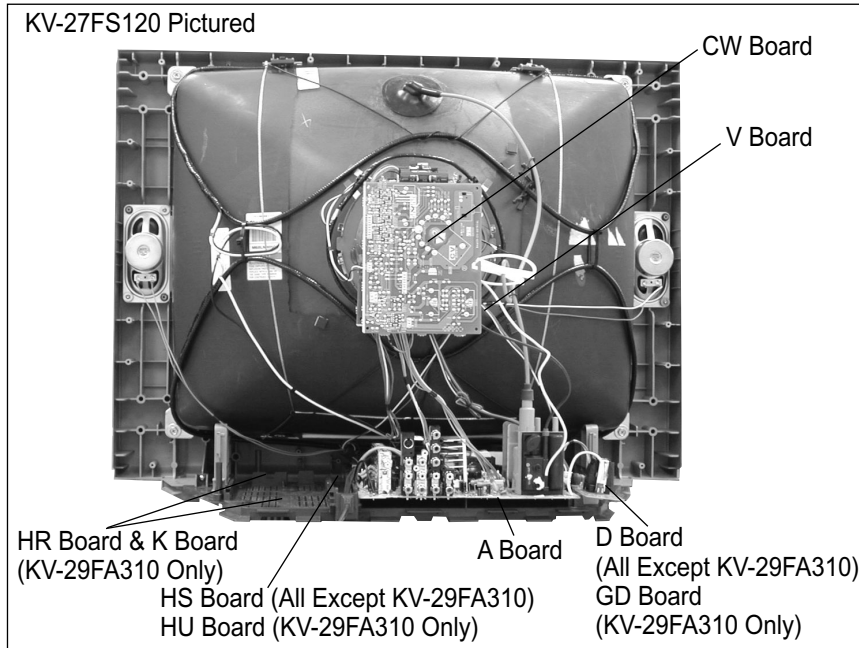

The components identified by shading and \triangle symbol are critical for safety. Replace only with part number specified.

The symbol \square indicates a fast operating fuse and is displayed on the component side of the board. Replace only with fuse of the same rating as marked.

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.

Le symbole \square indique une fusible à action rapide. Doit être remplacé par une fusible de même valeur, comme marqué.

The components identified by \square in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be necessary, replace only with the value originally used.

5-2. PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM INFORMATION

All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.

All electrolytics are in 50V unless otherwise specified.

All resistors are in ohms. $k=1000$, $M=1000k$

Indication of resistance, which does not have one for rating electrical power, is as follows: Pitch : 5mm Rating electrical power :

$\frac{1}{4}$ W in resistance, $\frac{1}{10}$ W and $\frac{1}{8}$ W in chip resistance.

\square : nonflammable resistor.

\square : fusible resistor.

\triangle : internal component.

\square : panel designation and adjustment for repair.

\perp : earth ground

\perp : earth-chassis

All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

Readings are taken with a color-bar signal input.

Readings are taken with a 10M digital multimeter.

Voltages are DC with respect to ground unless otherwise noted.

Voltage variations may be noted due to normal production tolerances.

All voltages are in V.

S : Measurement impossibility.

\square : B-line. (Actual measured value may be different).

\Rightarrow : signal path. (RF)

Circled numbers are waveform references.

When replacing components identified by \square , make the necessary adjustments as indicated. If the results do not meet the specified value, change the component identified by \square and repeat the adjustment until the specified value is achieved.

(Refer to Section 3: Safety Related Adjustments on Page 17.)

When replacing the parts listed in the table below, it is important to perform the related adjustments.

Part Replaced (\square)	Adjustment (\square)
DY, T585, CRT, IC001, IC561, IC600, IC604, C506, C507, C508, C510, C511, C513, C514, L588, D566, D567, D568, PH602, R526, R564, R565, R566, R851, T510, T511.....A Board	HV HOLD-DOWN R564

REFERENCE INFORMATION

RESISTOR

: RN METAL FILM
: RC SOLID
: FPRD NONFLAMMABLE CARBON
: FUSE NONFLAMMABLE FUSIBLE
: RW NONFLAMMABLE WIREWOUND
: RS NONFLAMMABLE METAL OXIDE
: RB NONFLAMMABLE CEMENT
: \times ADJUSTMENT RESISTOR


CAPACITOR

: TA TANTALUM
: PS STYROL
: PP POLYPROPYLENE
: PT MYLAR
: MPS METALIZED POLYESTER
: MPP METALIZED POLYPROPYLENE
: ALB BIPOLAR
: ALT HIGH TEMPERATURE
: ALR HIGH RIPPLE


COIL

: LF-8L MICRO INDUCTOR


5.3. BLOCK DIAGRAM AND SCHEMATICS

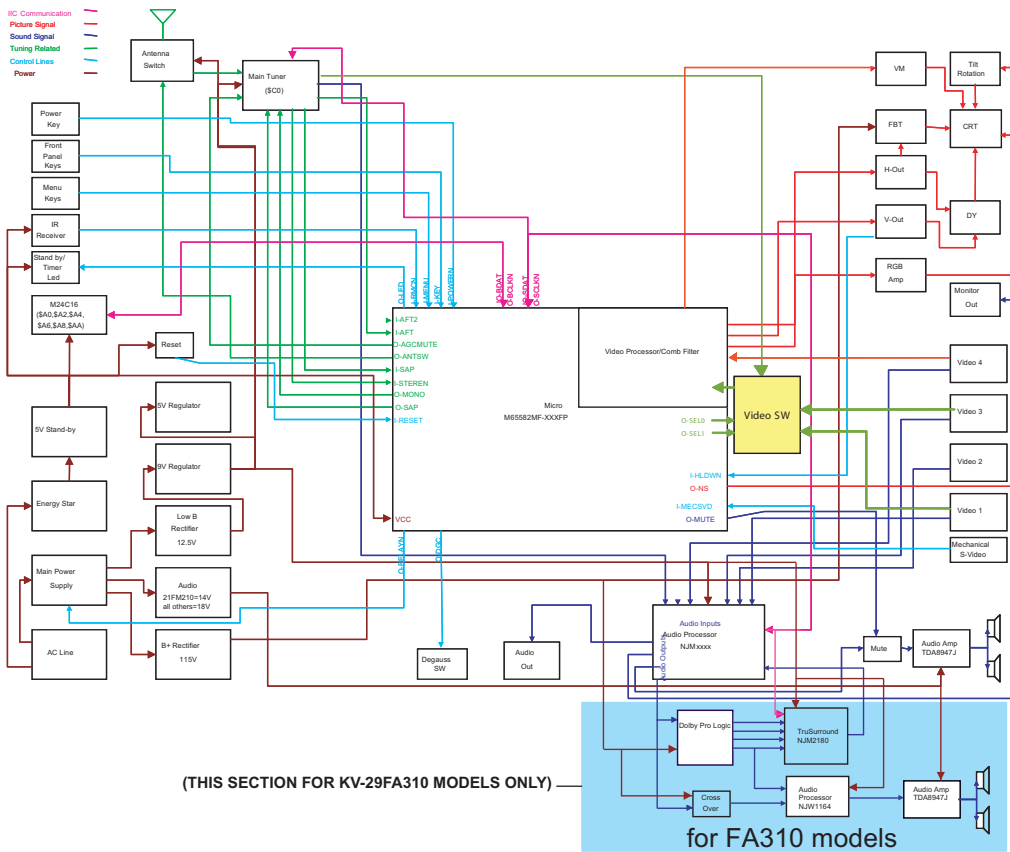

A BOARD SCHEMATIC DIAGRAM

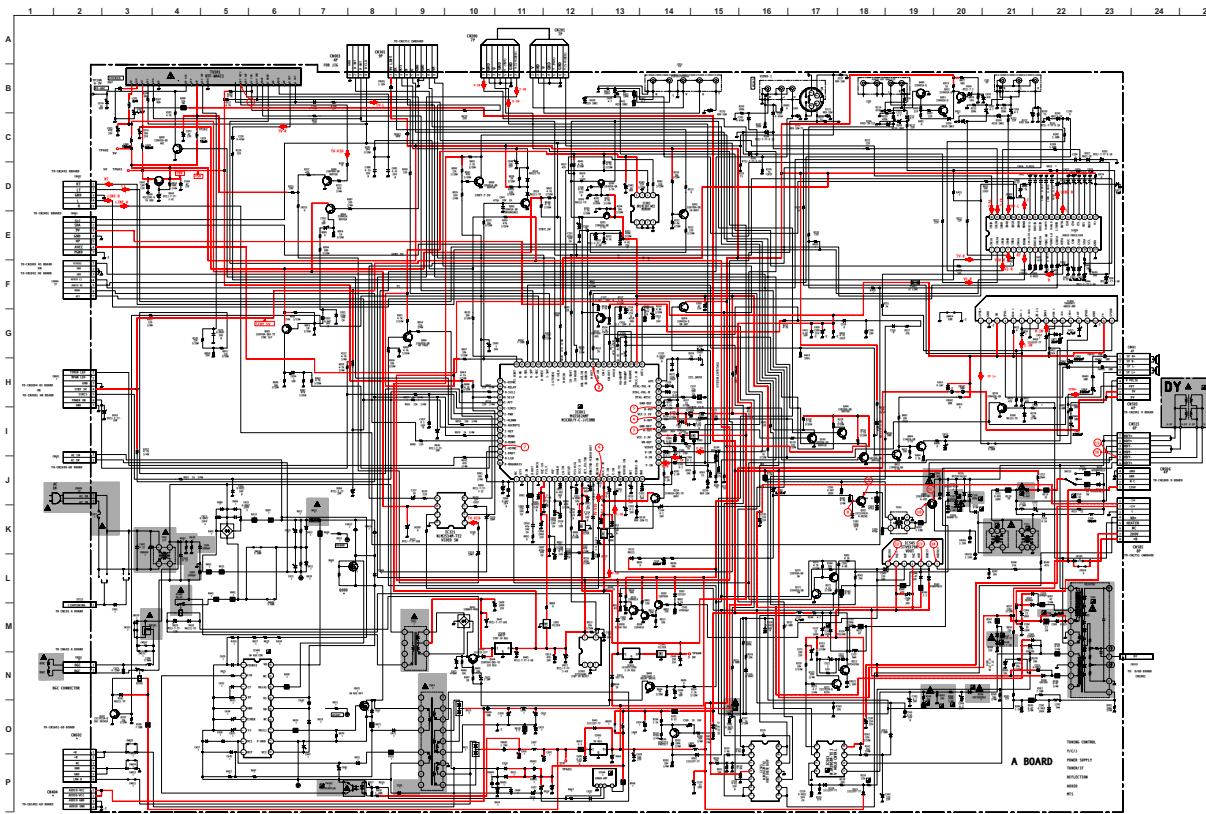

A BOARD WAVEFORMS

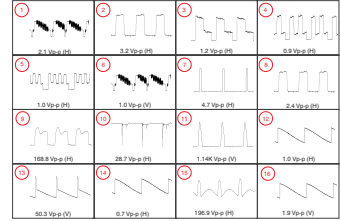


A BOARD IC VOLTAGE LIST

IC	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200
IC001	21	1.0	7	GND	25	3.9	IC561	IC803																																																																																																																																																																																																
1	N/C	2.3	IC001	27	4.5	1	0.1	0.0																																																																																																																																																																																																
2	GND	47	1.0	IC001	28	4.5	2	3.4	G	GND																																																																																																																																																																																														
3	2.2	45	N/C	29	4.5	3	4.5	2.1	G	0.0																																																																																																																																																																																														
4	2.2	45	2	GND	30	4.5	4	GND	IC004																																																																																																																																																																																															
5	GND	50	1.2	3	GND	31	4.5	5	9.2	IC001																																																																																																																																																																																														
6	0.0	0.1	2.0	4	0.0	32	4.5	6	10.2	1	13.7																																																																																																																																																																																													
7	0.0	0.2	1.5	5	0.0	33	4.5	7	0.1	2	N/C																																																																																																																																																																																													
8	0.0	0.3	4.0	N/C	34	N/C	4.5	8	13.0	3	2.5																																																																																																																																																																																													
9	0.3	54	4.8	IC001	35	N/C	IC005	4	11.3	GND																																																																																																																																																																																														
10	2.1	55	4.8	1	4.5	36	N/C	IC001	5	GND																																																																																																																																																																																														
11	0.0	0.0	4.5	2	0.3	37	4.5	1	3.1	IC006																																																																																																																																																																																														
12	GND	57	N/C	3	4.5	38	4.5	2	3.4	IC001																																																																																																																																																																																														
13	0.3	58	5.0	4	0.4	39	4.5	3	2.1	1	11.0																																																																																																																																																																																													
14	3.1	59	0.0	5	4.5	40	4.5	4	9.0	G	0.0																																																																																																																																																																																													
15	1.0	60	0.0	6	0.0	41	N/C	5	1.0	G	0.0																																																																																																																																																																																													
16	1.5	61	1.4	N/C	42	IC001	IC001	6	1.0	IC003																																																																																																																																																																																														
17	3.3	62	0.0	8	GND	1	8.3	7	1.0	IC001																																																																																																																																																																																														
18	0.5	63	0.0	9	0.0	2	18.8	8	1.0	G	0.0																																																																																																																																																																																													
19	1.1	64	4.9	IC001	3	19.8	9	1.0	G	GND																																																																																																																																																																																														
20	0.5	65	0.0	2	4.5	5	18.5	11	GND	IC006																																																																																																																																																																																														
21	0.5	66	0.0	2	4.5	5	18.5	11	GND	IC006																																																																																																																																																																																														
22	1.7	67	0.1	3	4.5	6	3.2	12	1.6	IC001																																																																																																																																																																																														
23	0.5	68	0.1	4	4.5	7	0.0	13	1.9	IC001																																																																																																																																																																																														
24	0.5	69	2.4	5	N/C	8	0.0	14	1.9	IC001																																																																																																																																																																																														
25	0.5	70	1.0	6	N/C	9	3.2	15	IC006																																																																																																																																																																																															
26	0.0	71	5.0	7	N/C	10	9.1	IC001	IC001																																																																																																																																																																																															
27	0.0	72	0.1	8	4.5	11	9.7	1	2.9	IC001																																																																																																																																																																																														
28	0.1	73	0.0	9	4.5	12	3.2	2	IC001																																																																																																																																																																																															
29	2.7	74	5.0	10	4.5	13	3.3	3	2.2	IC001																																																																																																																																																																																														
30	3.3	75	5.0	11	4.5	14	8.3	4	2.9	IC001																																																																																																																																																																																														
31	2.9	76	5.0	12	4.5	15	GND	5	GND	IC001																																																																																																																																																																																														
32	GND	77	0.1	13	4.5	16	19.6	6	0.0	IC001																																																																																																																																																																																														
33	2.8	78	0.0	14	4.5	17	8.3	7	4.0	IC001																																																																																																																																																																																														
34	3.3	79	4.5	15	0.0	IC006	8	17.2	IC001																																																																																																																																																																																															
35	2.9	80	4.5	16	4.5	IC001	9	GND	IC001																																																																																																																																																																																															
36	GND	IC002	17	4.5	17	0.7	10	12.4	IC001																																																																																																																																																																																															
37	1.6	IC001	18	4.5	2	13.5	11	0.0	IC001																																																																																																																																																																																															
38	0.0	1	GND	19	4.5	3	12.2	12	4.8	IC001																																																																																																																																																																																														
39	0.1	2	GND	20	GND	4	13.1	13	N/C	IC001																																																																																																																																																																																														
40	2.0	3	GND	21	4.5	5	10.2	14	15.5	IC001																																																																																																																																																																																														
41	1.5	4	GND	22	4.5	6	13.8	15	15.3	IC001																																																																																																																																																																																														
42	3.3	5	4.5	23	2.8	7	17	16	15.8	IC001																																																																																																																																																																																														
43	N/C	6	4.5	24	3.9	8	17	N/C	IC001																																																																																																																																																																																															
44	N/C	7	4.5	25	4.9	9	17	N/C	IC001																																																																																																																																																																																															


A BOARD TRANSISTOR VOLTAGE LIST

Q	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200
Q002	0.0	0.0	GND	Q411	0.0	0.8	GND	Q000	0.0	0.0	156.0																																																																																																																																																																																													
Q004	3.8	8.0	4.4	Q412	0.1	0.1	GND	Q001	155.0	4.9	0.0																																																																																																																																																																																													
Q005	0.1	0.8	0.0	Q001	0.0	19.3	GND	Q002	0.0	74.1	GND																																																																																																																																																																																													
Q006	0.0	0.0	GND	Q002	0.0	74.1	GND	Q003	0.0	0.0	GND																																																																																																																																																																																													
Q007	0.0	2.8	GND	Q003	0.0	0.0	GND	Q004	0.0	0.0	GND																																																																																																																																																																																													
Q008	0.0	0.0	GND	Q004	0.0	0.0	GND	Q005	1.8	8.0	2.4																																																																																																																																																																																													
Q009	1.8	8.0	2.4	Q005	0.0	101.8	0.0	Q006	1.8	2.1	3.8																																																																																																																																																																																													
Q010	1.8	2.1	3.8	Q006	1.0	0.8	GND	Q007	3.6	GND	2.8																																																																																																																																																																																													
Q011	3.6	GND	2.8	Q007	0.1	0.1	0.0	Q008	3.6	GND	2.8																																																																																																																																																																																													
Q012	3.6	GND	2.8	Q008	0.0	0.0	GND	Q009	5.5	GND	4.9																																																																																																																																																																																													
Q013	5.5	GND	4.9	Q009	0.0	2.6	GND	Q010	0.0	3.3	0.0																																																																																																																																																																																													
Q014	0.0	3.3	0.0	Q010	2.8	0.0	2.8	Q011	0.8	1.5	1.9																																																																																																																																																																																													
Q015	0.8	1.5	1.9	Q011	0.0	0.0	GND	Q012	0.0	0.1	GND																																																																																																																																																																																													
Q016	0.0	0.1	GND	Q012	30.8	11.8	30.2	Q013	0.0	0.1	GND																																																																																																																																																																																													
Q017	0.0	0.1	GND	Q013	0.0	6.7	GND	Q014	0.0	0.0	GND																																																																																																																																																																																													
Q018	0.0	0.0	GND	Q014	0.8	0.0	4.9	Q015	0.0	0.0	GND																																																																																																																																																																																													

A TUNING CONTROL, VCL, POWER SUPPLY, TUNER IF, DEFLECTION, AUDIO, MTR;
COMPONENT SIDE

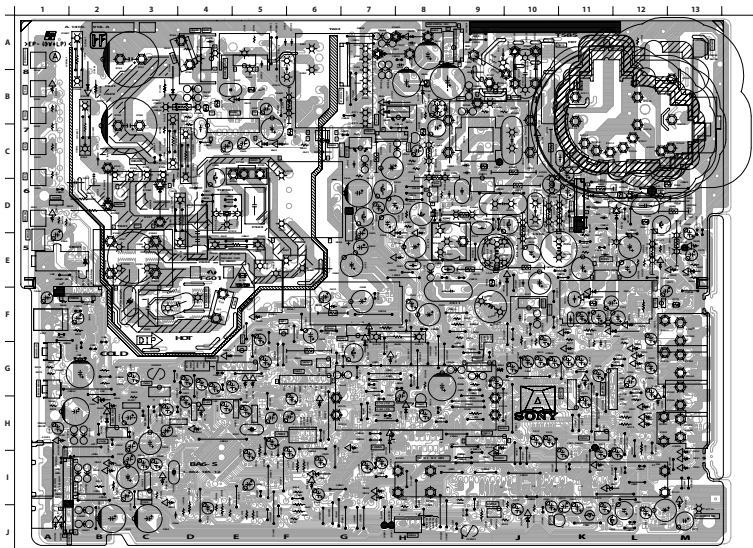


A TUNING CONTROL, VCL, POWER SUPPLY, TUNER IF, DEFLECTION, AUDIO, MTR;
CONDUCTOR SIDE

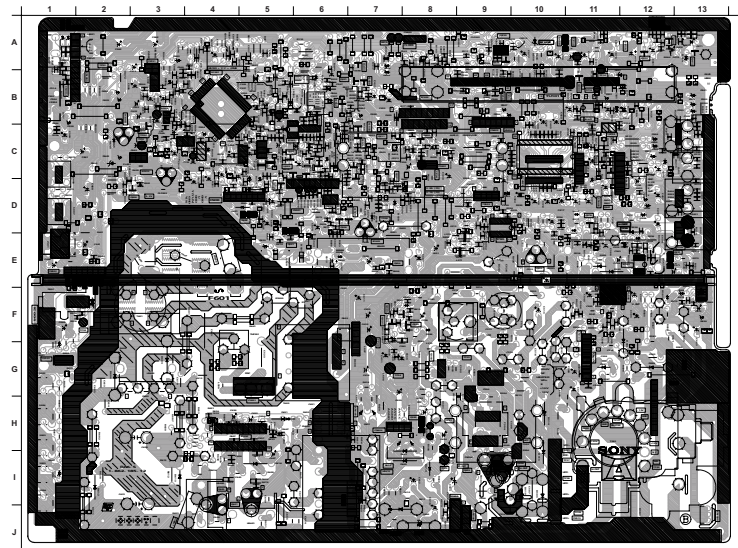

A BOARD LOCATOR LIST CONDUCTOR SIDE

GRID	Q390	G1	D507	F8	D663	F7	IC002	C5	Q393	C6	Q522	E16	
D001	B3	D321	B13	D508	D11	D624	G3	IC003	B8	Q324	G8	D531	F7
D003	G1	D222	B13	D510	I10	D656	G3	IC321	B11	Q326	G6	D533	C7
D004	H	D244	C6	D513	F7	D658	G3	IC360	F10	Q328	B9	D574	D7
D005	A3	D235	F12	D514	H10	D611	J8	IC401	F10	Q319	E3	D575	D6
D006	B6	D236	D6	D515	H10	D612	I2	IC404	B8	Q320	G7	D578	D11
D007	B11	D237	C12	D525	D11	D613	H	IC445	F11	Q391	C7	D596	H9
D043	B7	D317	B11	D526	E10	D614	B	IC541	E12	Q400	C11	D600	I4
D046	B9	D323	B11	D615			I2	IC555	E8	Q401	D11	D601	E
D047	B9	D351	C6	D528	E12	D616	I5	IC600	H5	Q403	A7	D604	E8
D050	B2	D390	D8	D545	E11	D620	B6	IC603	D7	Q404	C8	D608	D5
D051	D4	D401	C8	D568	D6	D621	H2	IC604	B	Q411	C7	D656	A10
D052	B2	D405	B7	D559	C7	D624	J8	IC608	B2	Q412	A13	D660	C7
D200	F12	D412	A13	D562	F8	D626	E5	IC613	C3	Q420	B7		
D201	E13	D414	A13	D563	G11	D620	E5	TRANSISTORS			Q421	B6	
D202	A1	D420	B6	D566	E12	D611	H5	Q002	B6	D501	E8		
D203	A1	D430	D13	D567	F12	D641	G7	Q004	A12	D502	G8		
D204	B12	D431	H12	D568	F13	D642	G2	Q006	A12	D503	F7		
D205	C12	D432	H6	D565	F13	D644	I21	Q008	I27	D504	F8		
D206	C11	D500	G7	D567	G11	D545	C2	Q008	E3	D505	I9		
D207	A11	D501	E6	D566	F12	D526	B10	Q009	E11	D506	D7		
D208	D12	D505	H10	D568	G12	H	C	Q010	D6	D511	C7		
D209	A1	D506	I9	D568	G12	IC001	B4	Q011	C6	D511	E12		

CW BOARD SCHEMATIC DIAGRAM

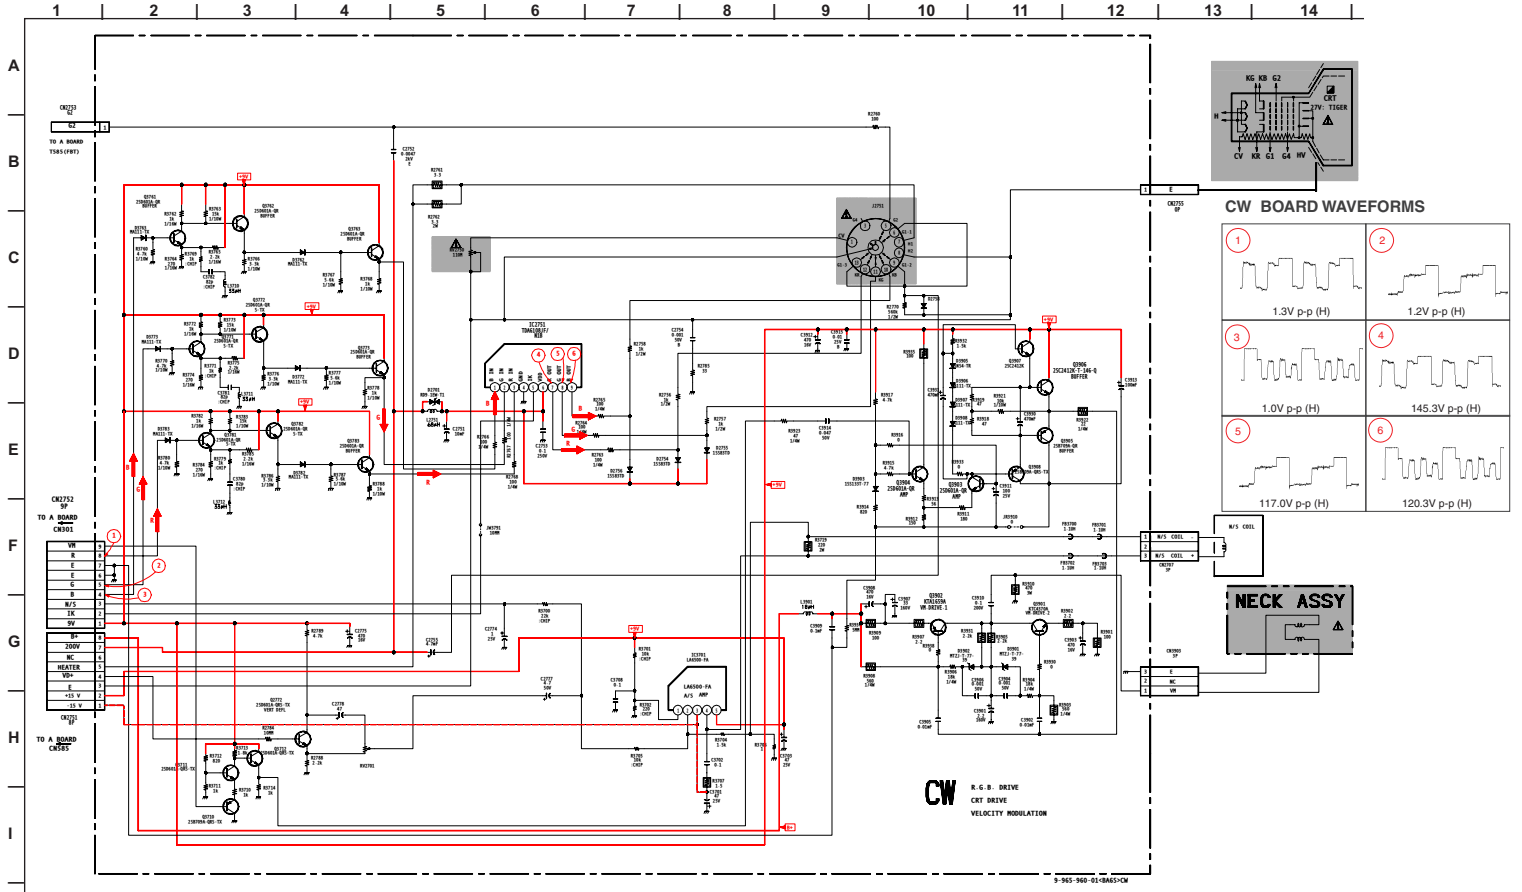

CW BOARD IC VOLTAGE LIST

IC3701	
PIN	VOLT
1	0.3
2	0.3
3	-15.0
4	0.5
5	15.0
IC2751	
PIN	VOLT
1	2.0
2	2.0
3	2.4
4	GND
5	3.7
6	200.0
7	136.0
8	142.0
9	140.0


All voltages are in V.

CW BOARD TRANSISTOR VOLTAGE LIST

	B	C	E		B	C	E
Q2772	1.5	7.1	0.9	Q3781	2.2	3.9	2.9
Q3710	1.8	0.0	2.5	Q3782	3.3	9.0	3.9
Q3711	5.0	5.6	4.4	Q3783	2.1	9.0	2.7
Q3712	0.0	0.0	0.0	Q3901	0.9	67.0	0.4
Q3761	2.2	3.8	2.9	Q3902	134.0	67.0	134.0
Q3762	3.1	9.0	3.8	Q3903	1.8	5.4	2.4
Q3763	2.0	9.0	2.6	Q3904	1.8	9.0	2.4
Q3771	2.2	3.8	2.9	Q3905	5.7	GND	5.4
Q3772	3.2	9.0	3.8	Q3906	5.7	9.0	6.1
Q3773	2.0	9.0	2.6	Q3907	5.3	9.1	5.9
				Q3908	4.9	0.0	5.3



All voltages are in V.

D BOARD SCHEMATIC DIAGRAM (ALL EXCEPT KV-29FA310)

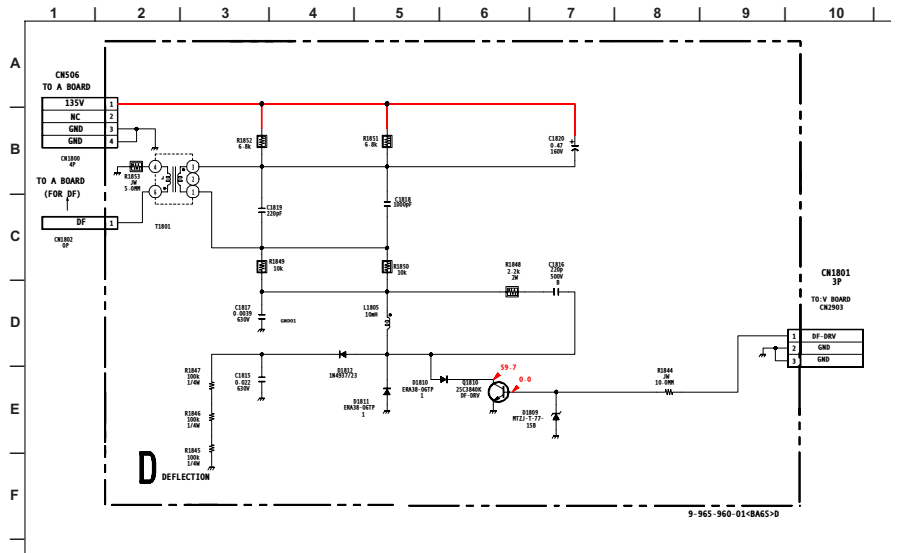

HS BOARD SCHEMATIC DIAGRAM (ALL EXCEPT KV-29FA310)

V BOARD SCHEMATIC DIAGRAM

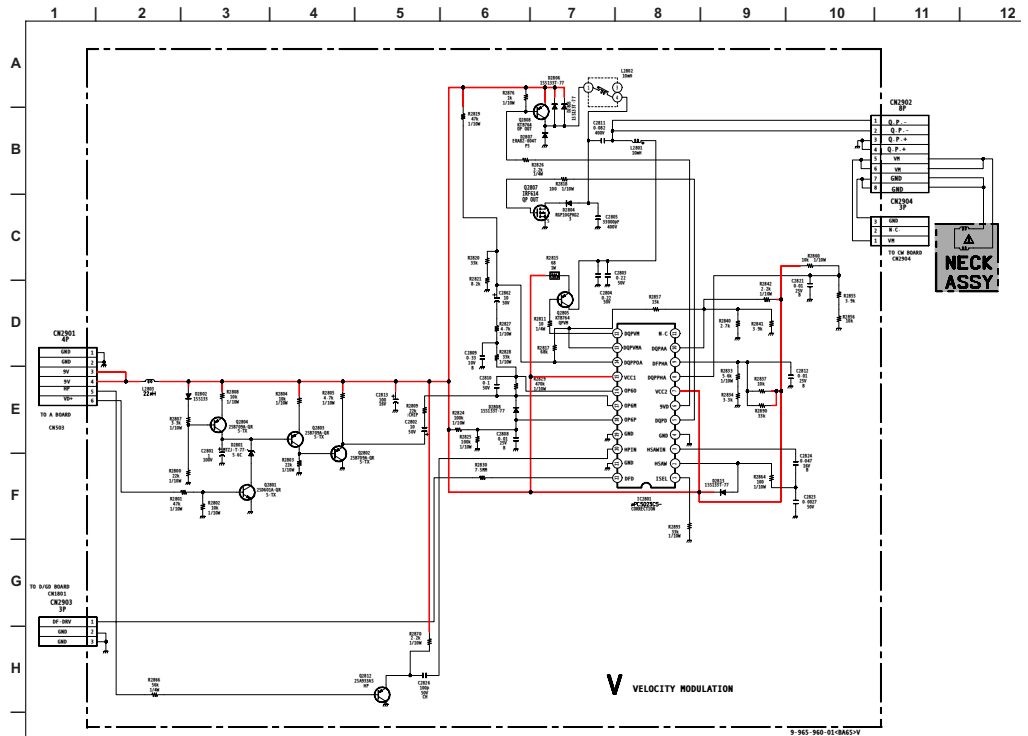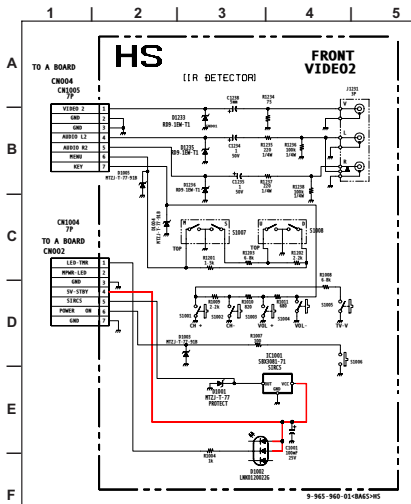

V BOARD TRANSISTOR VOLTAGE LIST

	B	C	E
Q2801	0	3.1	GND
Q2802	0	GND	4.1
Q2803	6.6	0	7.2
Q2804	7.4	6.6	8.0
Q2805	3.5	1.8	4.2
Q2808	8.6	4.3	9.0
Q2812	1.3	GND	2.0

V BOARD IC VOLTAGE LIST


PIN	VOLT	11	N/C
1	7.4	12	3.5
2	2.3	14	4.5
3	4.8	15	9.0
4	GND	16	4.6
5	6.3	17	4.6
6	4.5	18	4.5
7	9.0	19	GND
8	5.8	20	4.8
9	4.6	21	GND
10	4.8	22	0.3

All voltages are in V.

	D	G	S
Q2807	9.5	6.3	GND

All voltages are in V.

CW [RGB DRIVE, CRT DRIVE, VELOCITY MODULATION]
D [DEFLECTION] (ALL EXCEPT KV-29FA310)
HS [IR DETECTOR, FRONT VIDEO2] (ALL EXCEPT KV-29FA310)
V [VELOCITY MODULATION]
COMPONENT SIDE

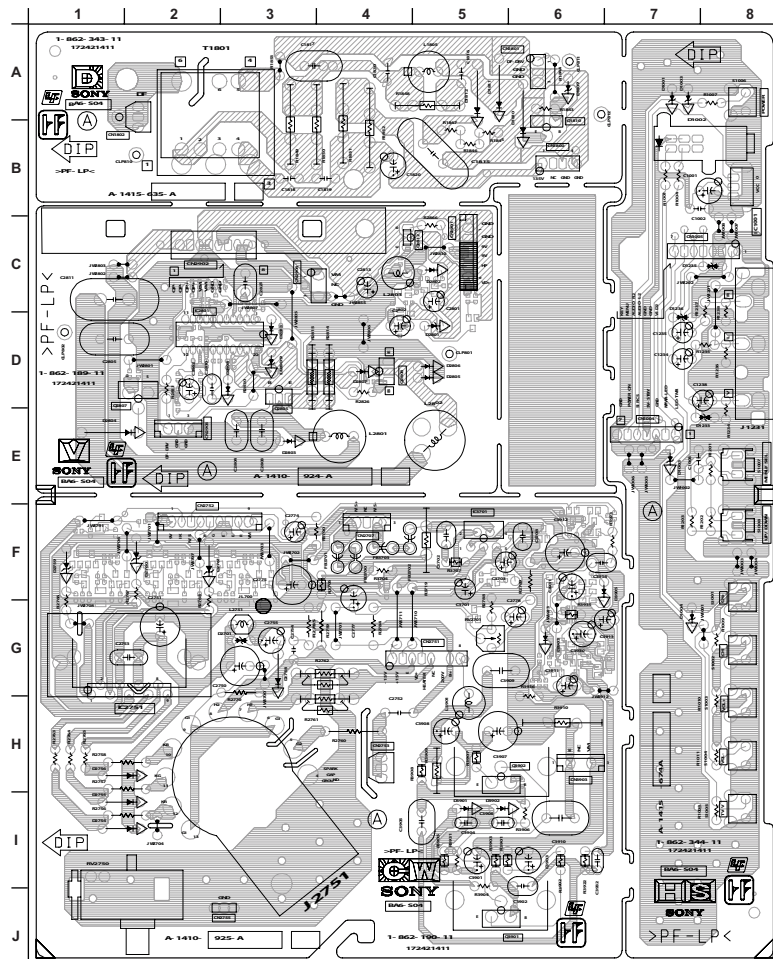


CW [RGB DRIVE, CRT DRIVE, VELOCITY MODULATION]

D [DEFLECTION]


HS [FRONT A/V, MENU KEY, IR DETECTOR] (ALL EXCEPT KV-29FA310)

V [VELOCITY MODULATION]

CONDUCTOR SIDE

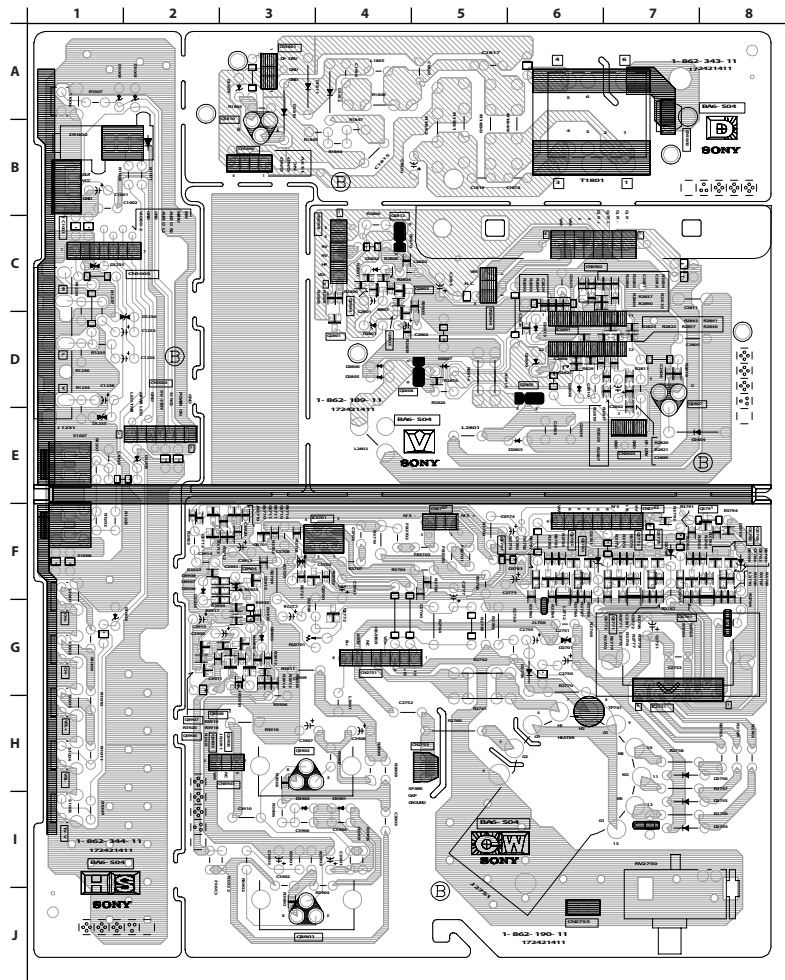

GD BOARD SCHEMATIC DIAGRAM (KV-29FA310 ONLY)

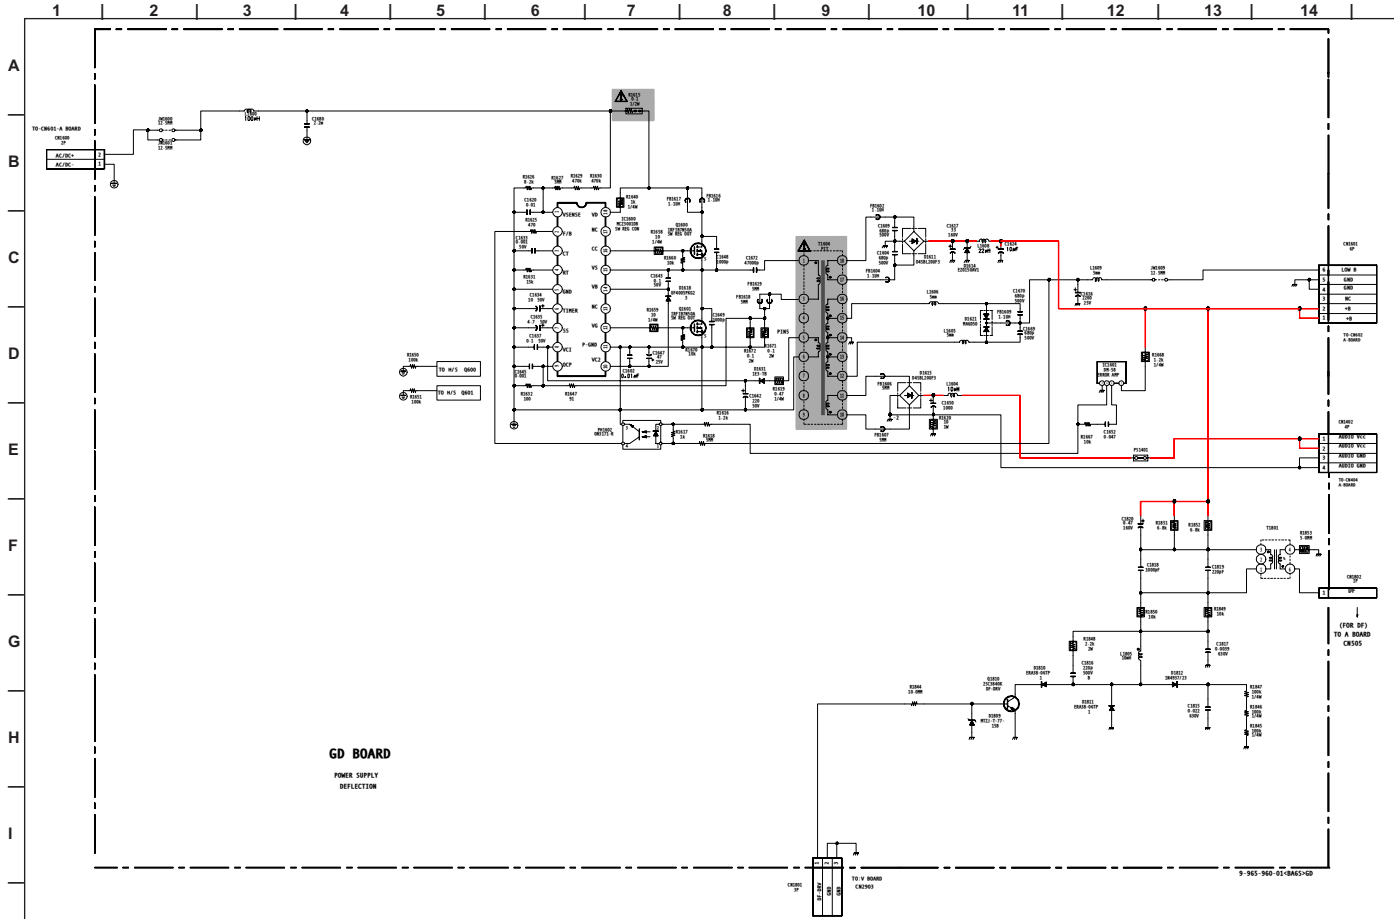

GD BOARD IC VOLTAGE LIST

IC1600		IC1601	
PIN	VOLT	PIN	VOLT
1	2.5	1	133.7
2	1.8	2	N/C
3	2.2	3	2.5
4	2.5	4	11.3
5	GND	5	GND
6	0.0	All voltages are in V.	
7	4.0		
8	17.2		
9	GND		
10	10.4		
11	0.0		
12	4.6		
13	N/C		
14	163.6		
15	153.5		
16	157.6		
17	N/C		
18	340.0		


GD BOARD TRANSISTOR VOLTAGE LIST

	D	G	S
Q1600	313.0	160.0	156.0
Q1601	155.0	4.9	0.0


	B	C	E
Q1810	0.0	59.7	GND

All voltages are in V.


GD [POWER SUPPLY, DEFLECTION]
COMPONENT SIDE (KV-29FA310 ONLY)

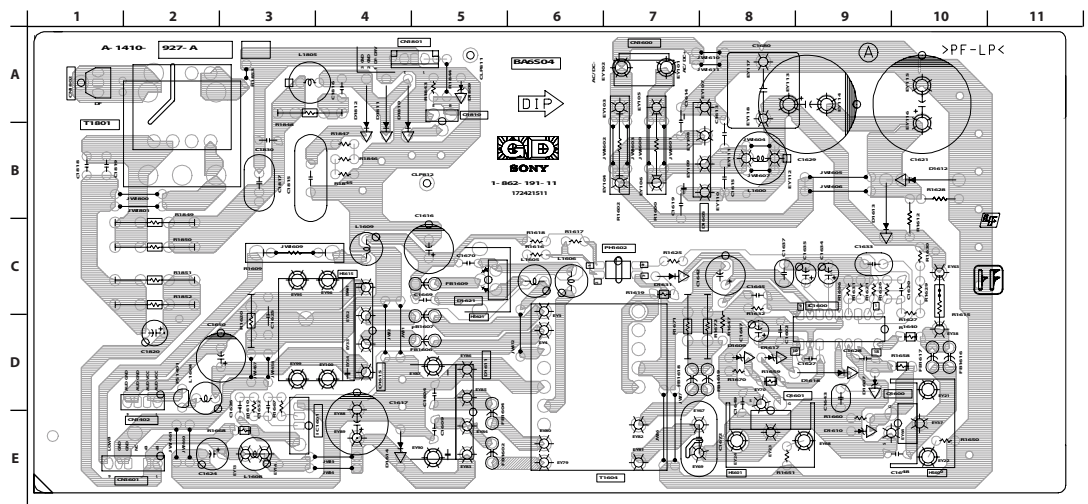

GD [POWER SUPPLY, DEFLECTION]
CONDUCTOR SIDE (KV-29FA310 ONLY)

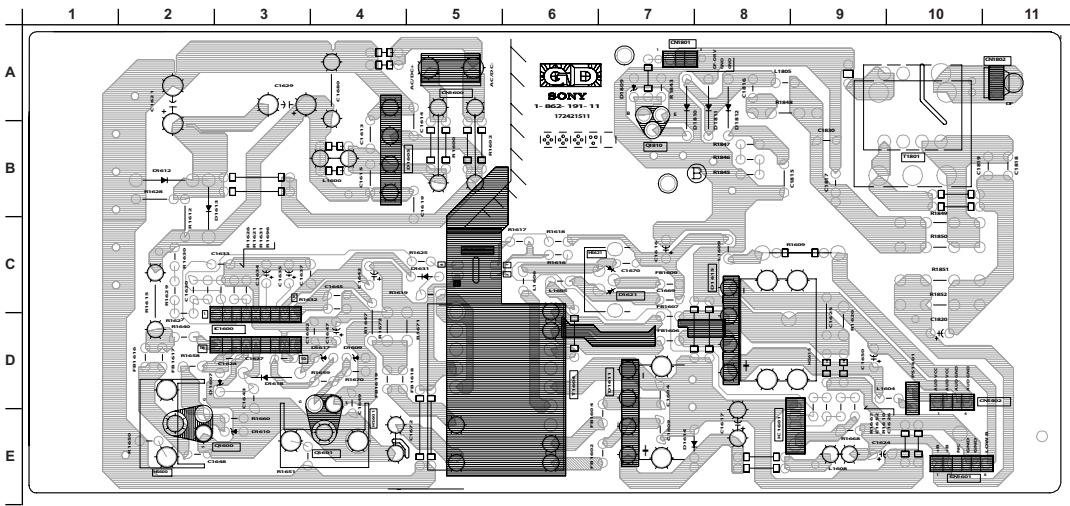


HR BOARD SCHEMATIC DIAGRAM (KV-29FA310 ONLY)

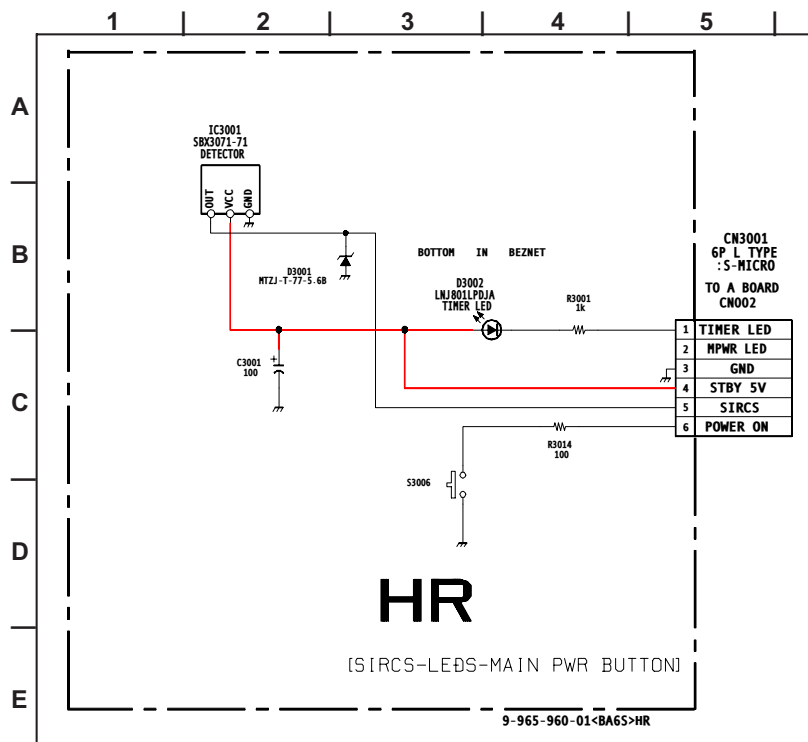





COMPONENT SIDE (KV-29FA310 ONLY)

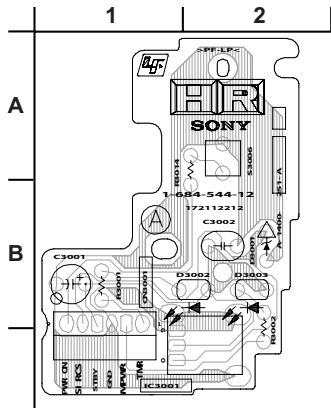

CONDUCTOR SIDE (KV-29FA310 ONLY)

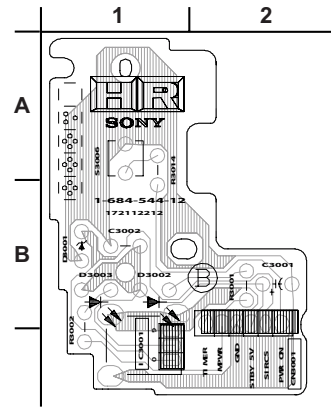


HU BOARD SCHEMATIC DIAGRAM (KV-29FA310 ONLY)

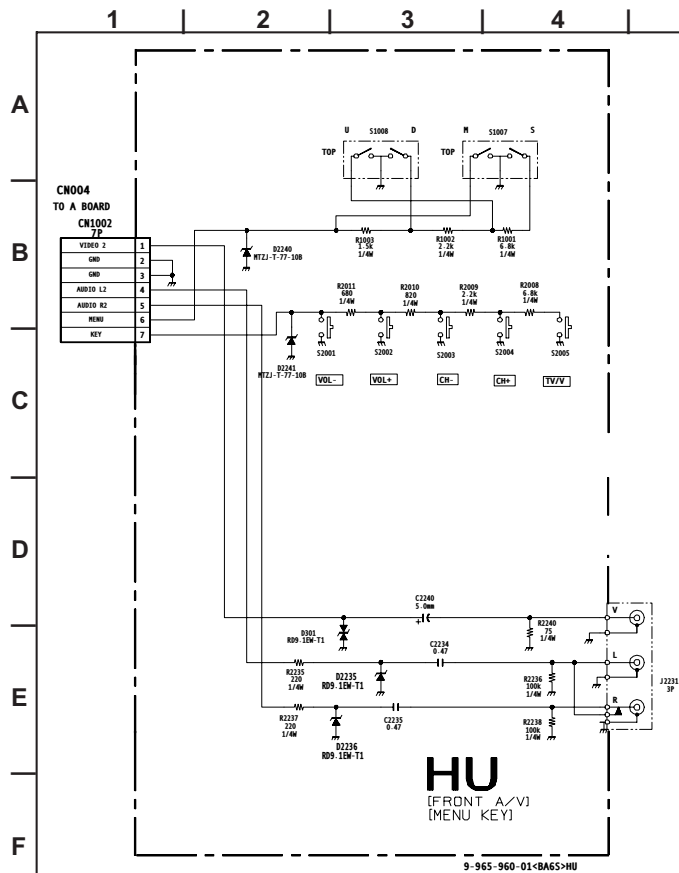

HU

[FRONT A/V, MENU KEY]


COMPONENT SIDE (KV-29FA310 ONLY)

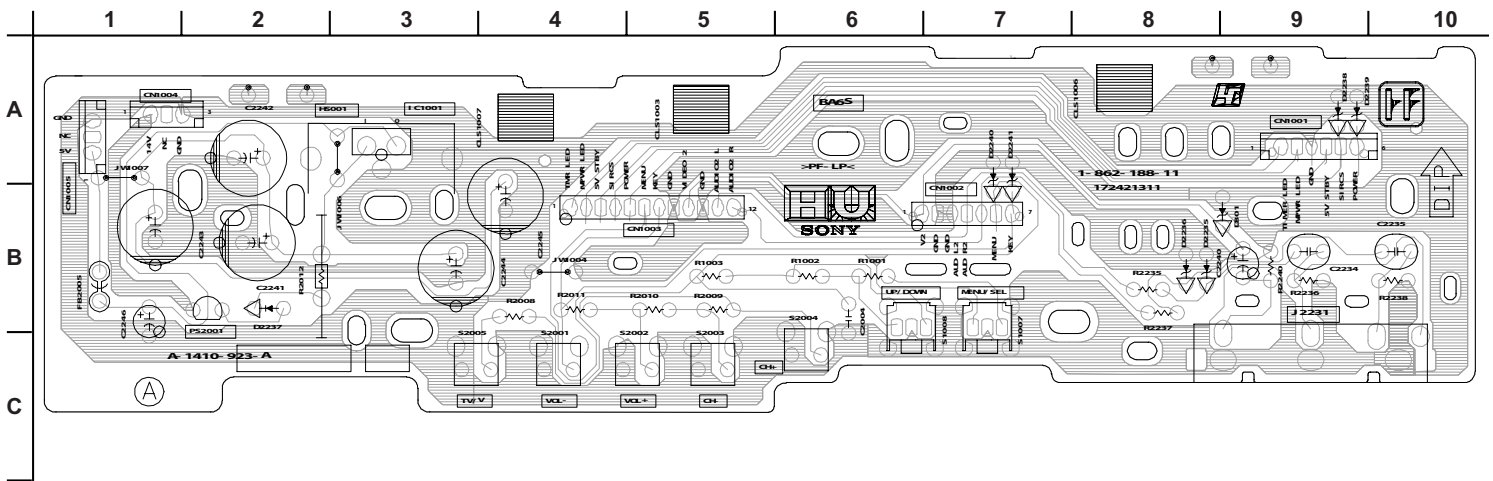




[FRONT A/V, MENU KEY]

CONDUCTOR SIDE (KV-29FA310 ONLY)

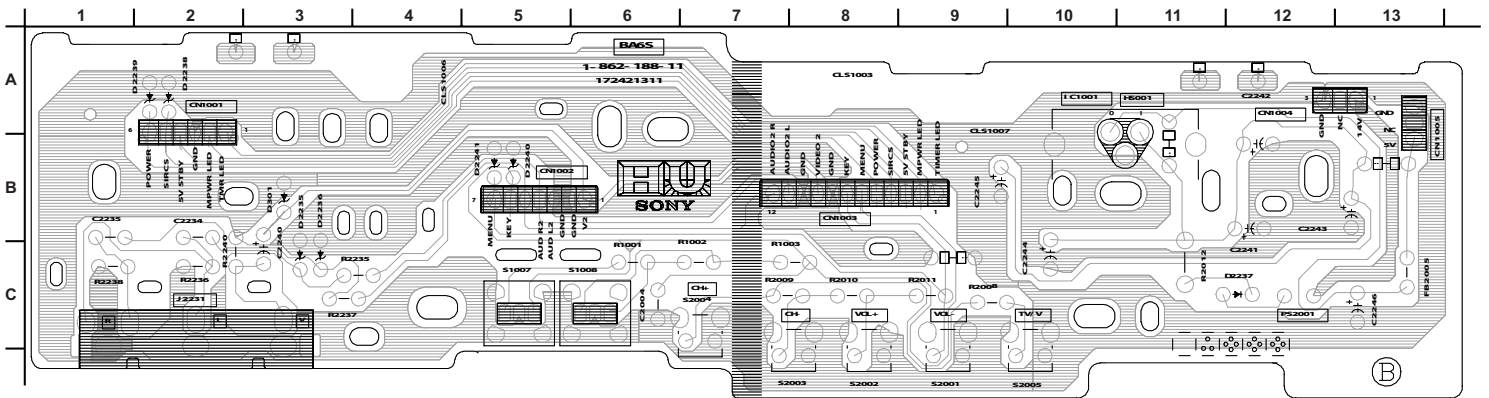

K BOARD SCHEMATIC DIAGRAM (KV-29FA310 ONLY)

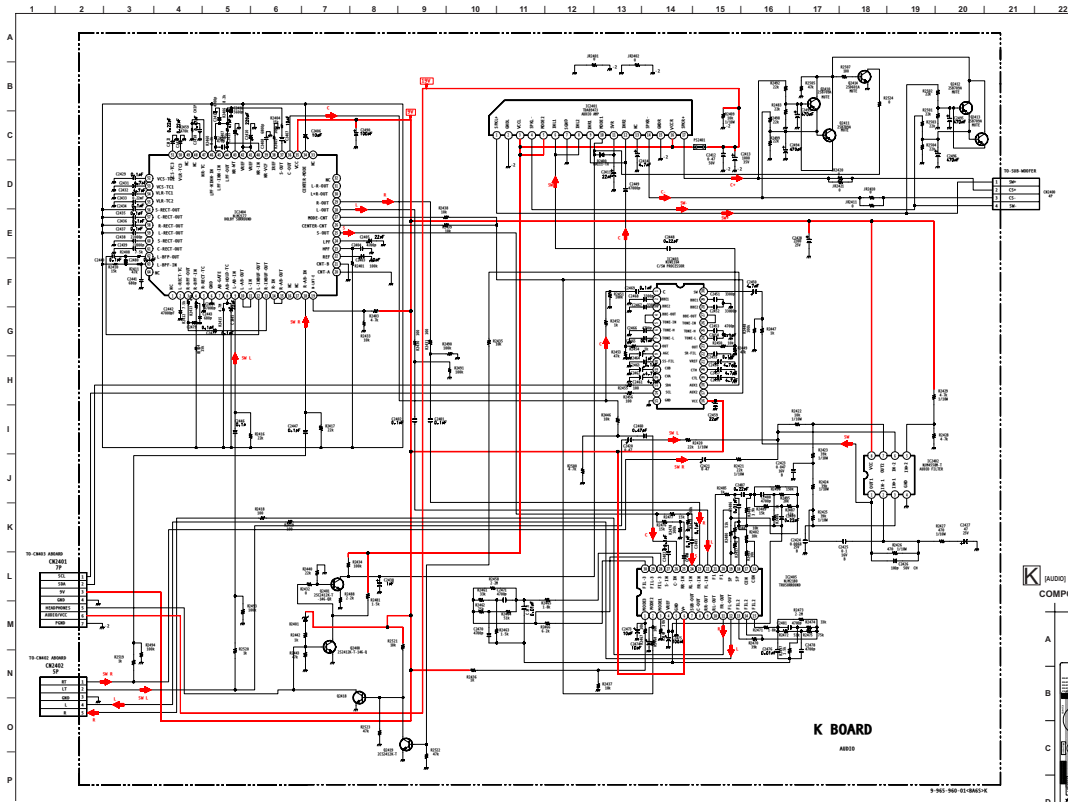


K BOARD IC VOLTAGE LIST

IC2401	IC2402	IC2403	IC2404	IC2405	IC2406	IC2407	IC2408	IC2409	IC2410	IC2411	IC2412	IC2413	IC2414	IC2415	IC2416	IC2417	IC2418	IC2419	
PIN	VOLT	PIN	VOLT	PIN	VOLT	PIN	VOLT	PIN	VOLT	PIN	VOLT	PIN	VOLT	PIN	VOLT	PIN	VOLT	PIN	VOLT
1	4.5	1	4.5	25	4.5	27	4.5	27	4.5	27	4.5	27	4.5	27	4.5	27	4.5	27	4.5
2	GND	2	4.5	26	4.5	28	4.5	28	4.5	28	4.5	28	4.5	28	4.5	28	4.5	28	4.5
3	19.6	3	4.5	29	4.5	29	4.5	29	4.5	29	4.5	29	4.5	29	4.5	29	4.5	29	4.5
4	8.3	4	4.5	30	4.5	30	4.5	30	4.5	30	4.5	30	4.5	30	4.5	30	4.5	30	4.5
5	19.6	5	4.5	31	4.5	31	4.5	31	4.5	31	4.5	31	4.5	31	4.5	31	4.5	31	4.5
6	3.2	6	4.5	32	4.5	32	4.5	32	4.5	32	4.5	32	4.5	32	4.5	32	4.5	32	4.5
7	GND	7	4.5	33	4.5	33	4.5	33	4.5	33	4.5	33	4.5	33	4.5	33	4.5	33	4.5
8	0.0	8	4.5	34	4.5	34	4.5	34	4.5	34	4.5	34	4.5	34	4.5	34	4.5	34	4.5
9	3.2	9	10.0	35	4.5	35	4.5	35	4.5	35	4.5	35	4.5	35	4.5	35	4.5	35	4.5
10	8.3	10	4.5	36	4.5	36	4.5	36	4.5	36	4.5	36	4.5	36	4.5	36	4.5	36	4.5
11	9.7	11	14.0	37	4.5	37	4.5	37	4.5	37	4.5	37	4.5	37	4.5	37	4.5	37	4.5
12	3.2	12	3.3	38	4.5	38	4.5	38	4.5	38	4.5	38	4.5	38	4.5	38	4.5	38	4.5
13	3.3	13	4.5	39	4.5	39	4.5	39	4.5	39	4.5	39	4.5	39	4.5	39	4.5	39	4.5
14	8.3	14	4.5	40	4.5	40	4.5	40	4.5	40	4.5	40	4.5	40	4.5	40	4.5	40	4.5
15	GND	15	GND	41	4.5	41	4.5	41	4.5	41	4.5	41	4.5	41	4.5	41	4.5	41	4.5
16	19.6	16	9.0	42	4.5	42	4.5	42	4.5	42	4.5	42	4.5	42	4.5	42	4.5	42	4.5
17	8.3	17	4.0	43	4.5	43	4.5	43	4.5	43	4.5	43	4.5	43	4.5	43	4.5	43	4.5
18	GND	18	GND	44	4.5	44	4.5	44	4.5	44	4.5	44	4.5	44	4.5	44	4.5	44	4.5
19	3.88	19	3.88	45	4.5	45	4.5	45	4.5	45	4.5	45	4.5	45	4.5	45	4.5	45	4.5
20	4.5	20	3.88	46	4.5	46	4.5	46	4.5	46	4.5	46	4.5	46	4.5	46	4.5	46	4.5
21	4.5	21	4.5	47	4.5	47	4.5	47	4.5	47	4.5	47	4.5	47	4.5	47	4.5	47	4.5
22	GND	22	4.5	48	4.5	48	4.5	48	4.5	48	4.5	48	4.5	48	4.5	48	4.5	48	4.5
23	4.5	23	4.5	49	4.5	49	4.5	49	4.5	49	4.5	49	4.5	49	4.5	49	4.5	49	4.5
24	4.5	24	4.5	50	4.5	50	4.5	50	4.5	50	4.5	50	4.5	50	4.5	50	4.5	50	4.5
25	4.5	25	4.5	51	4.5	51	4.5	51	4.5	51	4.5	51	4.5	51	4.5	51	4.5	51	4.5
26	4.5	26	4.5	52	4.5	52	4.5	52	4.5	52	4.5	52	4.5	52	4.5	52	4.5	52	4.5
27	4.5	27	4.5	53	4.5	53	4.5	53	4.5	53	4.5	53	4.5	53	4.5	53	4.5	53	4.5


K BOARD TRANSISTOR VOLTAGE LIST

Q2400	Q2401	Q2402	Q2403	Q2404	Q2405	Q2406	Q2407	Q2408	Q2409	Q2410	Q2411	Q2412	Q2413	Q2414	Q2415	Q2416	Q2417	Q2418	Q2419	
B	C	E	B	C	E	B	C	E	B	C	E	B	C	E	B	C	E	B	C	E
0.7	0.0	GND	0.7	0.0	GND	0.7	0.0	GND	0.7	0.0	GND	0.7	0.0	GND	0.7	0.0	GND	0.7	0.0	GND
0.0	17.9	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8
4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8
4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8	4.8	0.0	4.8
0.0	0.0	GND	0.0	0.0	GND	0.0	0.0	GND	0.0	0.0	GND	0.0	0.0	GND	0.0	0.0	GND	0.0	0.0	GND
0.0	0.0	GND	0.0	0.0	GND	0.0	0.0	GND	0.0	0.0	GND	0.0	0.0	GND	0.0	0.0	GND	0.0	0.0	GND







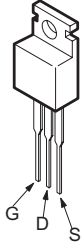
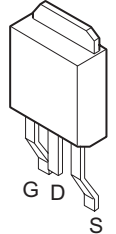
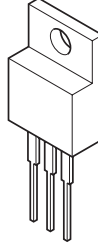
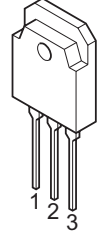
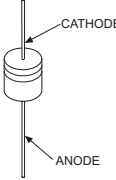
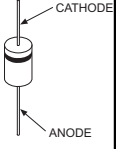
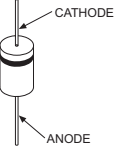
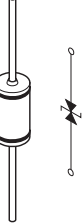
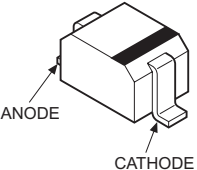
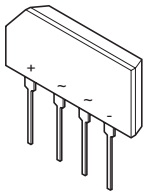
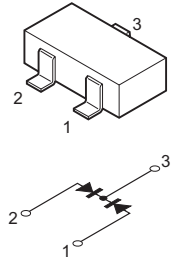
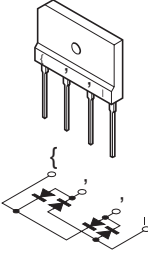
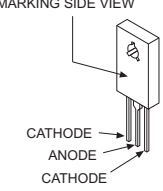
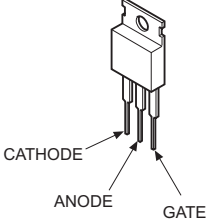
COMPONENT SIDE (KV-29FA310 ONLY)

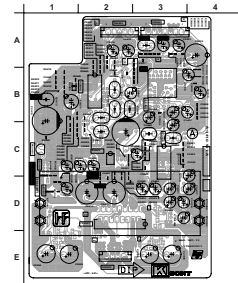

CONDUCTOR SIDE (KV-29FA310 ONLY)

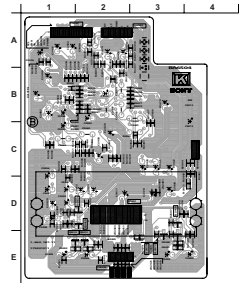

5-4. SEMICONDUCTORS
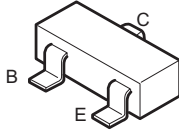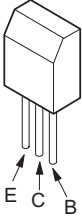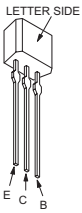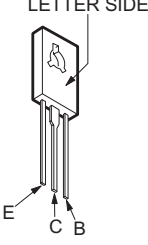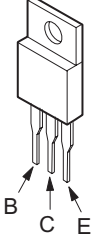
<p>2SB709A-QRS-TX 2SD601A-QRS-TX</p> 	<p>2SB734-T-34 2SC3209LK-TP</p> 	<p>2SA1309A-QRSTA 2SC3311A-QRSTA 2SD2144S-TP-UVW</p> 	<p>2SC3840K</p> 	<p>2SA1837</p> 
<p>2SA10910-TPE2</p> 	<p>IRF614</p> 	<p>2SK2663</p> 	<p>2SC4793</p> 	<p>2SD2578-YB</p> 
<p>ERA38-06TP1 ERA82-004TP5 1SS133T-77 D1NS0R-TA MTZJ-T-77-12C MTZJ-T-77-15B MTZJ-T-77-33B MTZJ-T-77-39</p> 	<p>RU-1P ERC06-15S EGP20DPKG23 MTZJ-T-77-5.1C MTZJ-T-77-5.6C MTZJ-T-77-7.5A MTZJ-T-77-10B MTZJ-T-77-30D RGP10-GPKG3 RGP02-17PKG23 RGP15GPKG23</p> 	<p>ERB44-06TP1 1SS83TD GP08DPKG23 RGP10GPKG23 RU4AM-T3</p> 	<p>RD9.1EW-T1</p> 	<p>MA111-TX UDZ-TE-17.5.1B UDZ-TE-17.91B</p> 
<p>D2SB60A-F04</p> 	<p>DAP202K-T-146</p> 	<p>D4SB60L-F</p> 		
<p>D5LC20U</p> 	<p>TF541M</p> 			

SECTION 6: EXPLODED VIEWS

Components not identified by a part number or description are not stocked because they are seldom required for routine service.

The component parts of an assembly are indicated by the reference numbers in the far right column of the parts list and within the dotted lines of the diagram.


* Items marked with an asterisk are not stocked since they are seldom required for routine service. Expect some delay when ordering these components.

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.


NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


6-1. PICTURE TUBE (KV-27FS120/29FS120 ONLY)

- 4-388-477-01 SCREW(3X16), TAPPING, +BV WASHER
- ▲ 4-046-765-12 SCREW, TAPPING 7+CROWN WASHER

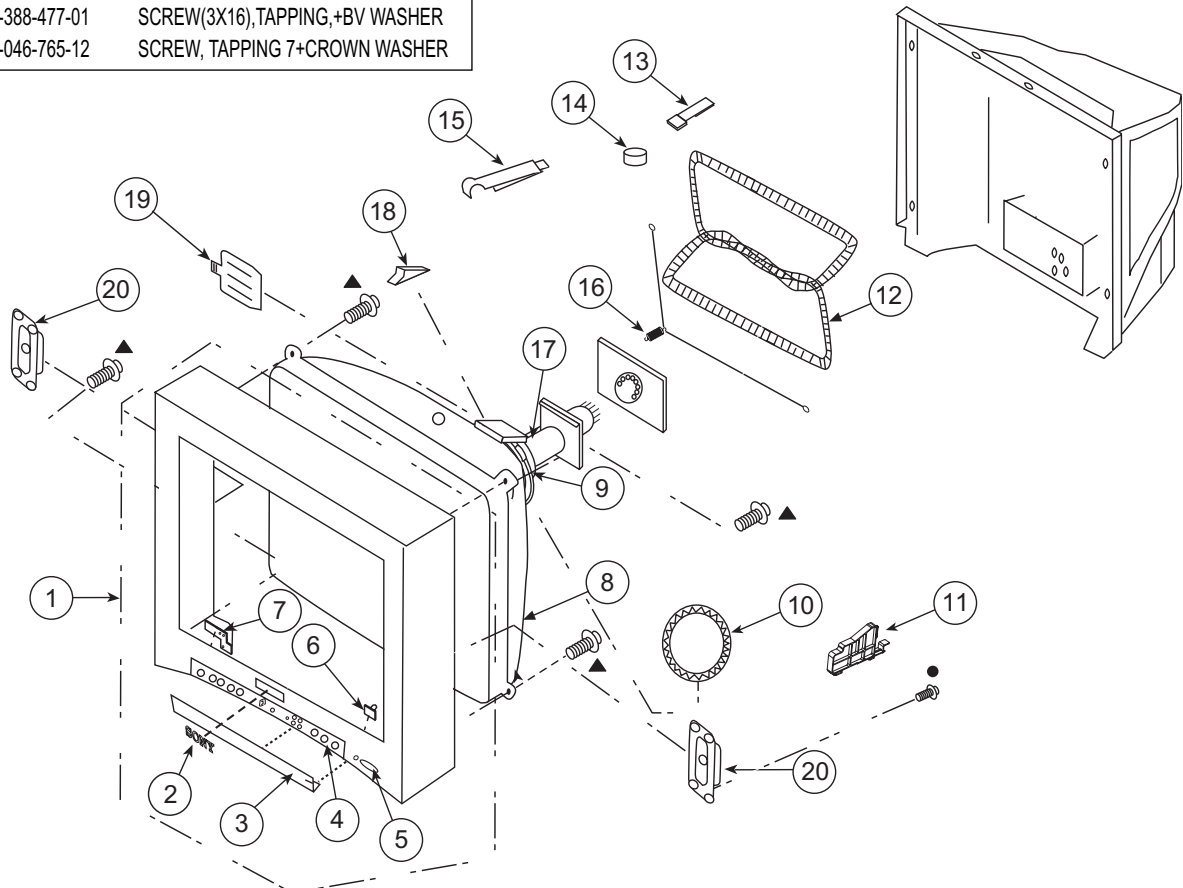


REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION
1	X-4043-163-1	BEZNET, ASSY	[2-7]	11	4-089-062-02	SUPPORTER, CRT
2	4-046-160-31	EMBLEM, SONY NO.9		\triangle 12	1-419-156-21	COIL, DEGAUSSING (ALL EXCEPT KV-29FS120 L. SOUTH)
3	4-089-056-11	DOOR		\triangle 12	1-419-523-21	COIL, DEGAUSSING (KV-29FS120 L. SOUTH ONLY)
4	4-089-016-01	LABEL, DOOR		13	4-083-414-01	PIECE A(110), CONV CORRECT
5	4-089-057-11	BUTTON, POWER		14	1-452-885-11	MAGNET, LANDING
6	4-089-058-01	GUIDE, LED		* 15	4-062-970-12	CLIP (29RSN), DGC
* 7	4-083-303-01	SPRING, METAL		16	4-036-329-01	SPRING (B), TENSION
\triangle 8	8-735-082-05	CRT 29RSN(SDP) (ALL EXCEPT KV-29FS120 L. SOUTH)		\triangle 17	8-453-011-11	NECK ASSEMBLY 299-M
\triangle 8	8-735-083-05	CRT 29RSN(SDP)(SOUTH) (KV-29FS120 L. SOUTH ONLY)		18	4-053-005-01	SPACER, DY
\triangle 9	8-451-494-41	DY Y29RSA-V		19	4-081-170-01	PLATE, TLH CORRECTION
\triangle 10	1-452-896-11	COIL, NA ROTATION (RT-200)		20	1-825-206-11	LOUDSPEAKER (6X12CM)









NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

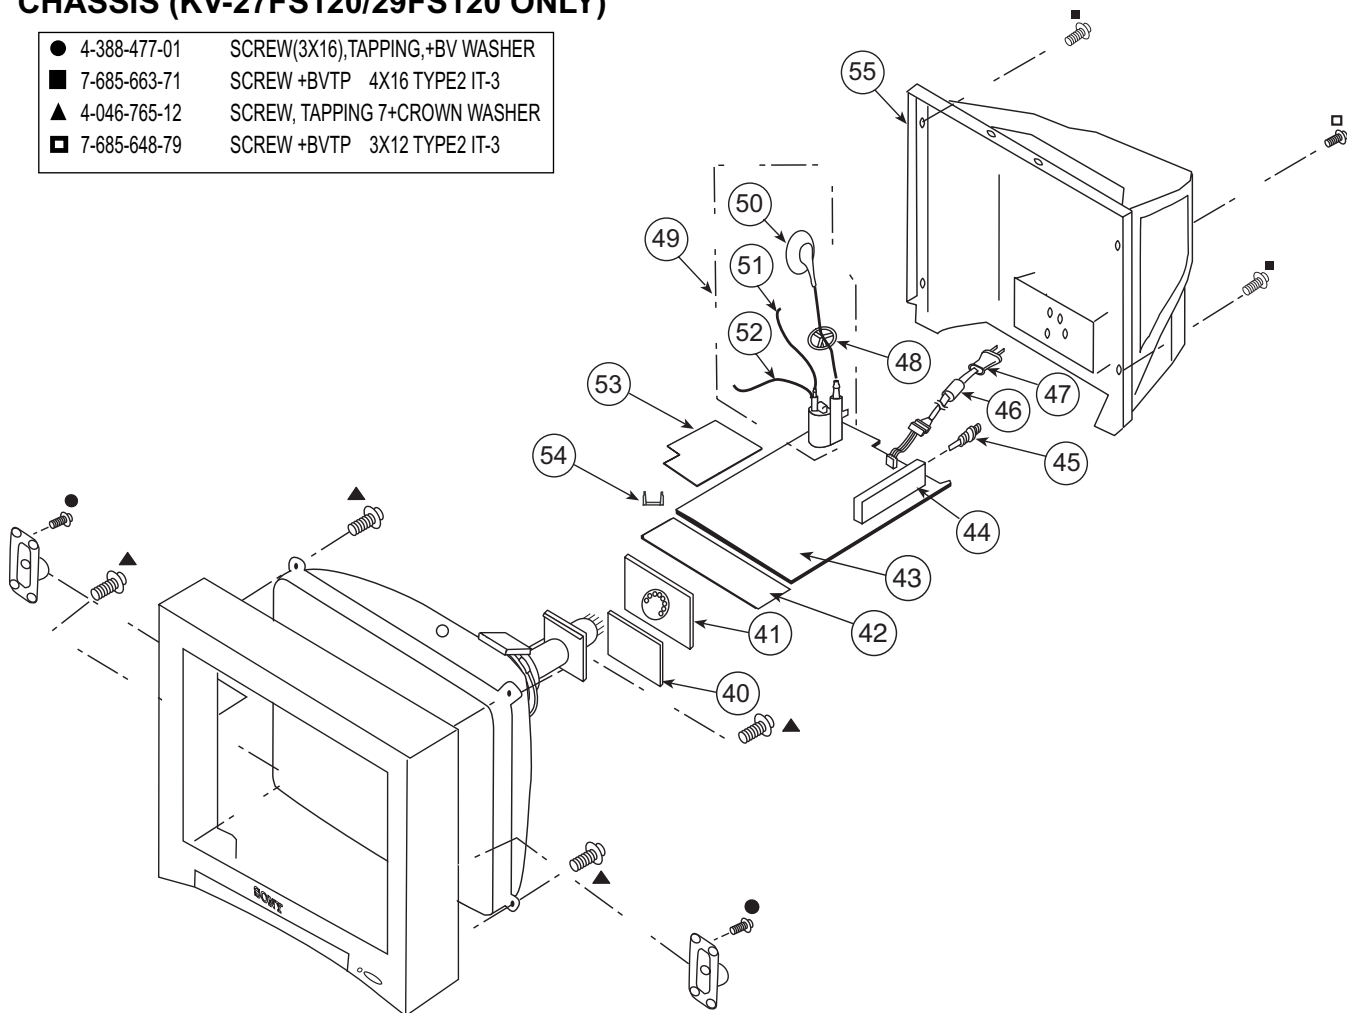NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

6-2. CHASSIS (KV-27FS120/29FS120 ONLY)

●	4-388-477-01	SCREW(3X16),TAPPING,+BV WASHER
■	7-685-663-71	SCREW +BVTP 4X16 TYPE2 IT-3
▲	4-046-765-12	SCREW, TAPPING 7+CROWN WASHER
▣	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3




REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	
* 40	A-1410-924-A	V BOARD, MOUNTED		47	1-824-069-11	CORD, AC POWER (WITH CONNECTOR) (ALL EXCEPT KV-29FS120 L. SOUTH)	
* 41	A-1410-925-A	CW BOARD, MOUNTED		47	1-757-840-12	CORD, POWER (WITH CONNECTOR) (KV-29FS120 L. SOUTH ONLY)	
* 42	A-1415-674-A	HS BOARD, MOUNTED	48	4-084-918-01	HOLDER, HV CABLE		
* 43	A-1052-931-A	A BOARD, COMPLETE (KV-29FS120 L. SOUTH ONLY)		49	1-453-310-21	FBT ASSY NX-4521//X4J4 [50-52]	
		The high-voltage leads associated with the FBT on the A board are not included and must be ordered separately. (See 50-52)		50	1-251-374-14	CAP ASSY, HIGH-VOLTAGE	
* 43	A-1302-967-A	A BOARD, COMPLETE (ALL EXCEPT KV-29FS120 L. SOUTH)		51	1-900-800-65	CONNECTOR ASSY, FOCUS LEAD	
		The high-voltage leads associated with the FBT on the A board are not included and must be ordered separately. (See 50-52)		52	1-900-803-22	WIRE ASSY, G2 LEAD	
	44	8-598-593-50	TUNER, FSS BTF-WA421	*	53	A-1415-635-A	D BOARD, MOUNTED
	45	1-766-374-11	PLUG, F-PIN	*	54	3-696-606-02	HINGE, VI
	46	1-500-586-11	FILTER, CLAMP (FERRITE CORE) (KV-29FS120 L. SOUTH ONLY)		55	4-089-050-32	COVER, REAR

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.


NOTE: Les composants identifiés par un triangle et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


6-3. PICTURE TUBE (KV-29FA310 ONLY)

●	4-388-477-01	SCREW(3X16), TAPPING, +BV WASHER
▲	4-046-765-12	SCREW, TAPPING 7+CROWN WASHER
☆	7-685-663-71	SCREW +BVTP 4X16 TYPE2 IT-3
★	7-685-661-14	SCREW +BVTP 4X12 TYPE2 IT-3
○	4-384-096-01	SCREW (4X16), TAPPING, +P

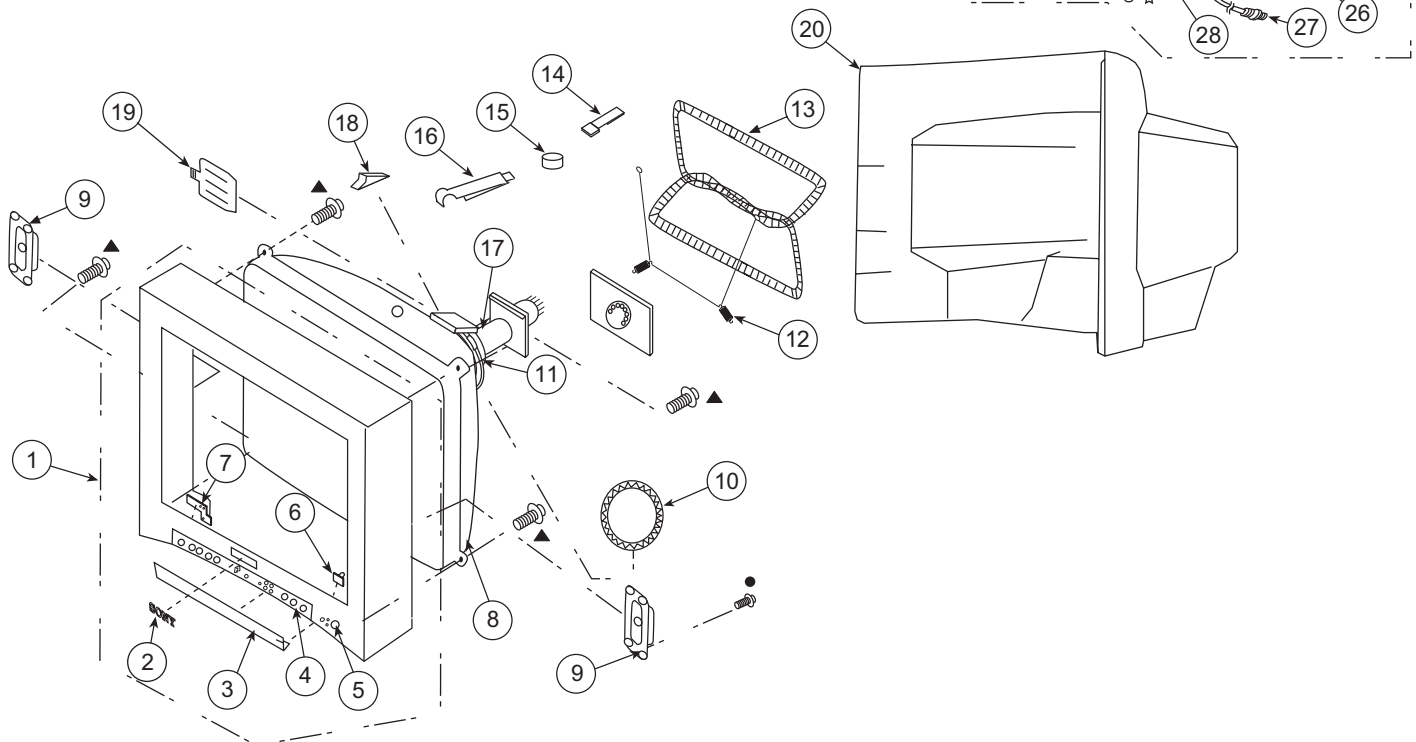


.REF. NO.	.PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
1	X-4043-169-1	BEZNET ASSY	[2-7]	\triangle 13	1-419-523-21	COIL, DEGAUSSING (KV-29FA310 L. SOUTH ONLY)	
2	4-046-160-31	EMBLEM, SONY NO.9		14	4-083-414-01	PIECE A(110), CONV CORRECT	
* 3	4-087-375-31	DOOR, CONTROL		15	1-452-885-11	MAGNET, LANDING	
4	4-087-376-21	LABEL, FRONT TERMINAL		* 16	4-062-970-12	CLIP (29RSN), DGC	
5	4-087-150-41	BUTTON, POWER		\triangle 17	8-453-011-11	NECK ASSEMBLY 299-M	
6	4-087-156-01	GUIDE, LIGHT		18	4-053-005-01	SPACER, DY	
7	4-087-374-11	SPRING, DOOR		19	4-081-170-01	PLATE, TLH CORRECTION	
\triangle 8	8-735-082-05	CRT 29RSN(SDP) (KV-29FA310 L. NORTH ONLY)		20	4-093-996-11	COVER, REAR	
\triangle 8	8-735-083-05	CRT 29RSN(SDP)(SOUTH) (KV-29FA310 L. SOUTH ONLY)		21	A-1606-603-A	SPEAKER ASSY (29)	[22-28]
9	1-825-809-11	LOUDSPEAKER (19.2CMX4.2CM)		* 22	4-101-820-01	GRILLE, CENTER (W29)	
\triangle 10	1-452-896-11	COIL, NA ROTATION (RT-200)		23	1-825-417-21	LOUDSPEAKER (6X12CM)	
\triangle 11	8-451-494-41	DY Y29RSA-V		24	1-825-807-11	LOUDSPEAKER (13CM)	
12	4-036-329-01	SPRING (B), TENSION		* 25	4-101-829-01	COVER, TOP (W29)	
\triangle 13	1-419-156-21	COIL, DEGAUSSING (KV-29FA310 L. NORTH ONLY)		* 26	4-101-830-01	COVER, BOTTOM (W29)	
				* 27	1-828-903-11	CONNECTION CABLE	
				* 28	4-068-528-41	FOOT	









NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un triangle et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

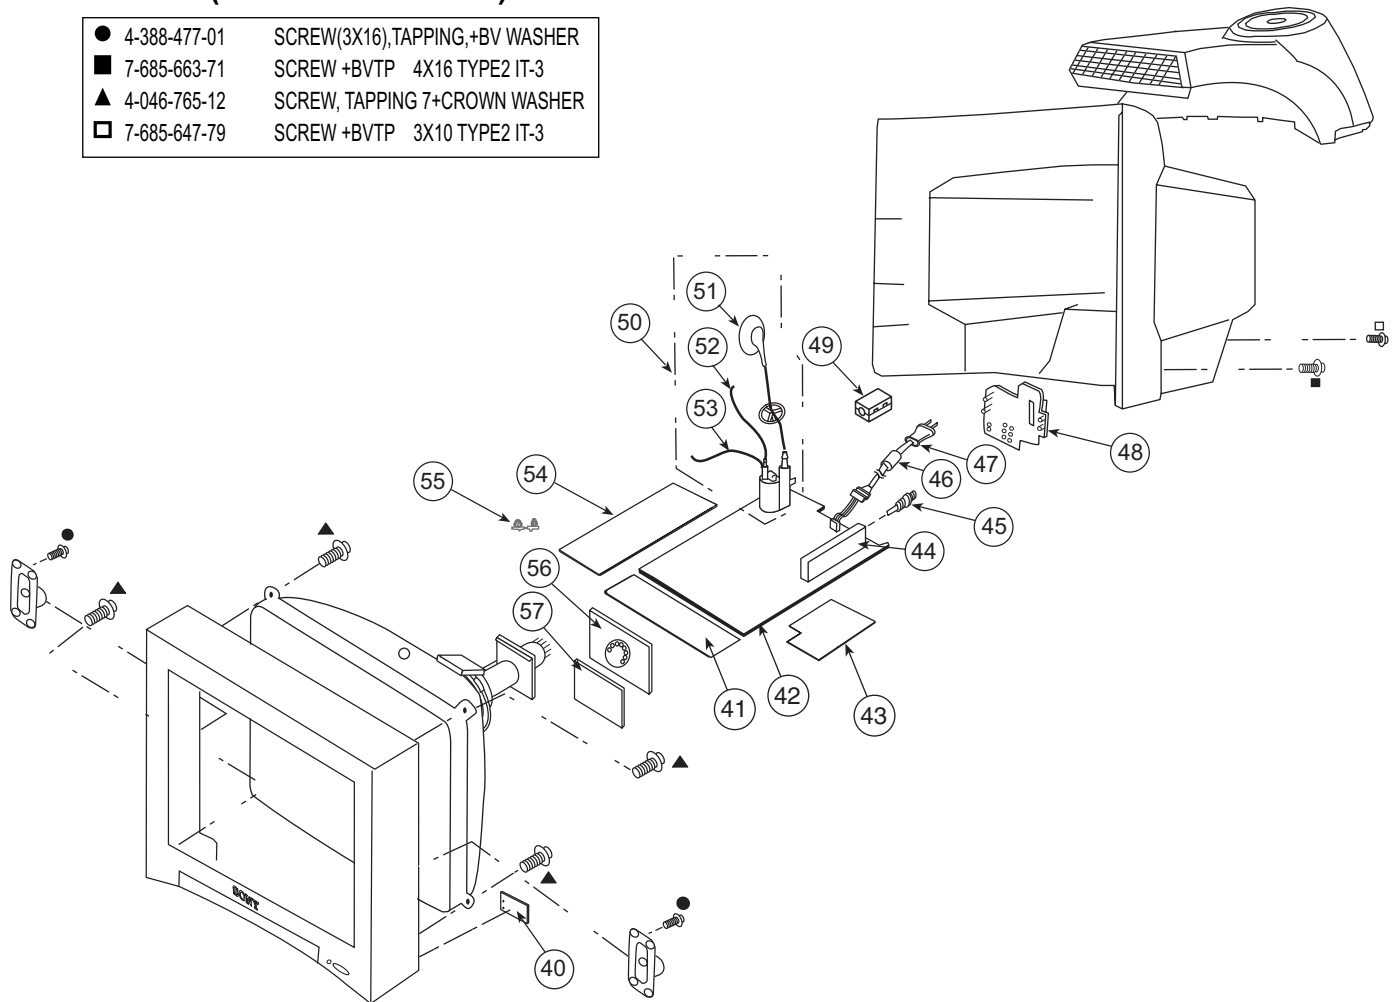6-4. CHASSIS (KV-29FA310 ONLY)

●	4-388-477-01	SCREW(3X16),TAPPING,+BV WASHER
■	7-685-663-71	SCREW +BVTP 4X16 TYPE2 IT-3
▲	4-046-765-12	SCREW, TAPPING 7+CROWN WASHER
□	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3




.REF. NO.	.PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	
* 40	A-1400-251-A	HR (COM) BOARD, MOUNTED		47	1-824-069-11	CORD, AC POWER (WITH CONNECTOR) (KV-29FA310 L. NORTH ONLY)	
* 40	A-1415-629-A	HR (VAR) BOARD, MOUNTED		47	1-757-840-12	CORD, POWER (WITH CONNECTOR) (KV-29FA310 L. SOUTH ONLY)	
* 41	A-1415-631-A	HU (VAR) BOARD, MOUNTED	*	48	4-087-877-41	TERMINAL, BRACKET	
* 42	A-1302-880-A	A BOARD, COMPLETE (KV-29FA310 L. NORTH ONLY)	49	1-500-082-11	CLAMP, SLEEVE FERRITE		
		The high-voltage leads associated with the FBT on the A board are not included and must be ordered separately. (See 51-53)		50	1-453-310-21	FBT ASSY NX-4521//X4J4 [51-53]	
* 42	A-1302-954-A	A BOARD, COMPLETE (KV-29FA310 L. SOUTH ONLY)		51	1-251-374-14	CAP ASSY, HIGH-VOLTAGE	
		The high-voltage leads associated with the FBT on the A board are not included and must be ordered separately. (See 51-53)		52	1-900-800-65	CONNECTOR ASSY, FOCUS LEAD	
* 43	A-1410-921-A	K BOARD, MOUNTED		53	1-900-803-22	WIRE ASSY, G2 LEAD	
	44	8-598-593-50	TUNER, FSS BTF-WA421	*	54	A-1410-927-A	GD (COM) BOARD, MOUNTED
	45	1-766-374-11	PLUG, F-PIN	*	55	4-076-951-01	HINGE, PWB
	46	1-500-586-11	FILTER, CLAMP (FERRITE CORE) (KV-29FA310 L. SOUTH ONLY)	*	56	A-1410-925-A	CW BOARD, MOUNTED
				*	57	A-1410-924-A	V BOARD, MOUNTED


NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un triangle et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.







REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C204	1-216-864-11	SHORT CHIP				C419	1-125-891-11	CERAMIC CHIP	0.47 μ F	10%	10V
C205	1-216-864-11	SHORT CHIP				C420	1-126-960-11	ELECT	1 μ F	20%	50V
C206	1-126-963-11	ELECT	4.7 μ F	20%	50V	C421	1-126-965-91	ELECT	22 μ F	20%	50V
C207	1-126-963-11	ELECT	4.7 μ F	20%	50V	C422	1-126-960-11	ELECT	1 μ F	20%	50V
C212	1-126-963-11	ELECT	4.7 μ F	20%	50V	C423	1-126-963-11	ELECT	4.7 μ F	20%	50V
C213	1-126-963-11	ELECT	4.7 μ F	20%	50V	C424	1-125-891-11	CERAMIC CHIP	0.47 μ F	10%	10V
C220	1-125-891-11	CERAMIC CHIP	0.47 μ F	10%	10V	C430	1-126-963-11	ELECT	4.7 μ F	20%	50V
C301	1-126-956-91	ELECT	0.1 μ F	20%	50V	C431	1-126-963-11	ELECT	4.7 μ F	20%	50V
C302	1-126-956-91	ELECT	0.1 μ F	20%	50V	C436	1-107-826-11	CERAMIC CHIP	0.1 μ F	10%	16V
C303	1-126-956-91	ELECT	0.1 μ F	20%	50V	C450	1-126-943-11	ELECT	2200 μ F	20%	25V
C304	1-126-956-91	ELECT	0.1 μ F	20%	50V	C451	1-126-959-11	ELECT	0.47 μ F	20%	50V
C305	1-107-826-11	CERAMIC CHIP	0.1 μ F	10%	16V	C452	1-126-960-11	ELECT	1 μ F	20%	50V
C306	1-107-826-11	CERAMIC CHIP	0.1 μ F	10%	16V	C457	1-127-715-91	CERAMIC CHIP	0.22 μ F	10%	16V
C307	1-107-826-11	CERAMIC CHIP	0.1 μ F	10%	16V			(KV-27FS120/29FS120LN/29FS120LS ONLY)			
C313	1-126-956-91	ELECT	0.1 μ F	20%	50V	C457	1-165-176-11	CERAMIC CHIP	0.047 μ F	10%	16V
C317	1-126-964-11	ELECT	10 μ F	20%	50V			(KV-29FA310LN/29FA310LS ONLY)			
C318	1-126-964-11	ELECT	10 μ F	20%	50V	C458	1-127-715-91	CERAMIC CHIP	0.22 μ F	10%	16V
C319	1-126-964-11	ELECT	10 μ F	20%	50V			(KV-27FS120/29FS120LN/29FS120LS ONLY)			
C325	1-162-967-11	CERAMIC CHIP	0.0033 μ F	10%	50V	C458	1-165-176-11	CERAMIC CHIP	0.047 μ F	10%	16V
C326	1-164-505-11	CERAMIC CHIP	2.2 μ F		16V			(KV-29FA310LN/29FA310LS ONLY)			
C328	1-162-970-11	CERAMIC CHIP	0.01 μ F	10%	25V	C460	1-126-943-11	ELECT	2200 μ F	20%	25V
C330	1-162-970-11	CERAMIC CHIP	0.01 μ F	10%	25V	C461	1-126-943-11	ELECT	2200 μ F	20%	25V
C337	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C462	1-126-943-11	ELECT	2200 μ F	20%	25V
C351	1-164-315-11	CERAMIC CHIP	470pF	5%	50V	C463	1-126-943-11	ELECT	2200 μ F	20%	25V
C370	1-162-968-11	CERAMIC CHIP	0.0047 μ F	10%	50V	C470	1-126-935-11	ELECT	470 μ F	20%	16V
C390	1-162-970-11	CERAMIC CHIP	0.01 μ F	10%	25V	C501	1-126-959-11	ELECT	0.47 μ F	20%	50V
C400	1-128-934-91	CERAMIC CHIP	0.33 μ F	20%	10V	C502	1-102-112-00	CERAMIC	330pF	10%	50V
C401	1-164-227-11	CERAMIC CHIP	0.022 μ F	10%	25V	C503	1-106-383-00	MYLAR	0.047 μ F	10%	200V
C402	1-164-174-11	CERAMIC CHIP	0.0082 μ F	10%	25V	C504	1-102-228-00	CERAMIC	470pF	10%	500V
C403	1-162-967-11	CERAMIC CHIP	0.0033 μ F	10%	50V	C505	1-102-228-00	CERAMIC	470pF	10%	500V
C404	1-162-967-11	CERAMIC CHIP	0.0033 μ F	10%	50V	\triangle C506	1-117-214-11	CERAMIC	0.001 μ F	10%	2KV
C405	1-164-677-11	CERAMIC CHIP	0.033 μ F	10%	16V	\triangle C507	1-127-717-21	FILM	19000pF	3%	1.2KV
C406	1-164-677-11	CERAMIC CHIP	0.033 μ F	10%	16V	\triangle C508	1-129-722-00	FILM	0.047 μ F	5%	630V
C407	1-162-965-11	CERAMIC CHIP	0.0015 μ F	10%	50V	C509	1-126-964-11	ELECT	10 μ F	20%	50V
C408	1-162-965-11	CERAMIC CHIP	0.0015 μ F	10%	50V	\triangle C510	1-162-116-00	CERAMIC	680pF	10%	2KV
C409	1-127-715-91	CERAMIC CHIP	0.22 μ F	10%	16V	C511	1-109-844-11	FILM	0.68 μ F	5%	400V
C410	1-127-715-91	CERAMIC CHIP	0.22 μ F	10%	16V	C512	1-104-987-11	MYLAR	0.001 μ F	5%	200V
C411	1-128-934-91	CERAMIC CHIP	0.33 μ F	20%	10V	\triangle C513	1-106-383-00	MYLAR	0.047 μ F	10%	200V
C412	1-126-960-11	ELECT	1 μ F	20%	50V	C514	1-115-521-11	FILM	0.82 μ F	5%	250V
C413	1-126-963-11	ELECT	4.7 μ F	20%	50V	C515	1-107-649-11	ELECT	2.2 μ F	20%	250V
C414	1-126-961-11	ELECT	2.2 μ F	20%	50V	C516	1-117-412-11	FILM	0.24 μ F	5%	250V
C415	1-126-963-11	ELECT	4.7 μ F	20%	50V	C519	1-216-864-11	SHORT CHIP			
C416	1-126-960-11	ELECT	1 μ F	20%	50V	C520	1-126-965-91	ELECT	22 μ F	20%	50V
C418	1-126-963-11	ELECT	4.7 μ F	20%	50V	C521	1-126-960-11	ELECT	1 μ F	20%	50V

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.




REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C522	1-102-244-00	CERAMIC	220pF	10%	500V	 C602	1-165-529-11	MYLAR	0.22µF	10	275V
C523	1-165-529-11	MYLAR	0.22µF	10	275V	 C603	1-165-529-11	MYLAR	0.22µF	10	275V
C525	1-164-646-11	CERAMIC	2200pF	10%	500V	 C605	1-117-699-11	CERAMIC	0.001µF	20%	250V
C526	1-102-244-00	CERAMIC	220pF	10%	500V	C609	1-126-942-61	ELECT	1000µF	20%	25V
C527	1-107-645-11	ELECT	22µF	20%	200V	C610	1-164-645-11	CERAMIC	1000pF	10%	500V
											(KV-27FS120/29FS120LN/29FS120LS ONLY)
C529	1-164-690-91	CERAMIC CHIP	0.0022µF	5%	50V	C611	1-126-971-11	ELECT	470µF	20%	50V
C534	1-162-966-11	CERAMIC CHIP	0.0022µF	10%	50V	C612	1-126-961-11	ELECT	2.2µF	20%	50V
C536	1-162-968-11	CERAMIC CHIP	0.0047µF	10%	50V	C613	1-161-964-91	CERAMIC	0.0047µF		250V
C537	1-162-964-11	CERAMIC CHIP	0.001µF	10%	50V	C615	1-161-964-91	CERAMIC	0.0047µF		250V
C539	1-162-970-11	CERAMIC CHIP	0.01µF	10%	25V	C616	1-126-943-11	ELECT	2200µF	20%	25V
											(KV-27FS120/29FS120LN/29FS120LS ONLY)
C542	1-162-966-11	CERAMIC CHIP	0.0022µF	10%	50V	C617	1-107-935-11	ELECT	330µF	20%	100V
C543	1-102-106-00	CERAMIC CHIP	.0001µF		50V						(KV-27FS120/29FS120LN/29FS120LS ONLY)
											(KV-29FA310LN/29FA310LS ONLY)
C544	1-126-967-11	ELECT	47µF	20%	50V	C618	1-107-935-11	ELECT	330µF	20%	100V
C545	1-126-969-11	ELECT	220µF	20%	50V						(KV-27FS120/29FS120LN/29FS120LS ONLY)
C546	1-137-194-81	FILM	0.47µF	5%	50V	C620	1-162-970-11	CERAMIC CHIP	0.01µF	10%	25V
C549	1-101-821-00	CERAMIC	0.0022µF		500V						(KV-27FS120/29FS120LN/29FS120LS ONLY)
C550	1-104-666-11	ELECT	220µF	20%	25V	C621	1-117-893-11	ELECT	470µF	20%	250V
C551	1-126-960-11	ELECT	1µF	20%	50V						(KV-27FS120/29FS120LN/29FS120LS ONLY)
C552	1-126-964-11	ELECT	10µF	20%	50V	C621	1-117-894-11	ELECT	560µF	20%	250V
											(KV-29FA310LN/29FA310LS ONLY)
C553	1-107-826-11	CERAMIC CHIP	0.1µF	10%	16V	C624	1-107-636-11	ELECT	10µF	20%	160V
C554	1-162-970-11	CERAMIC CHIP	0.01µF	10%	25V						(KV-27FS120/29FS120LN/29FS120LS ONLY)
C555	1-101-821-00	CERAMIC	0.0022µF		500V	C625	1-126-964-11	ELECT	10µF	20%	50V
C558	1-162-318-11	CERAMIC	0.001µF	10%	500V						(KV-27FS120/29FS120LN/29FS120LS ONLY)
C559	1-216-864-11	SHORT CHIP				C629	1-117-893-11	ELECT	470µF	20%	250V
											(KV-27FS120/29FS120LN/29FS120LS ONLY)
C560	1-216-833-11	METAL CHIP	10K	5%	1/10W	C629	1-117-894-11	ELECT	560µF	20%	250V
C561	1-126-963-11	ELECT	4.7µF	20%	50V						(KV-29FA310LN/29FA310LS ONLY)
C562	1-104-666-11	ELECT	220µF	20%	25V	 C631	1-113-896-11	CERAMIC	220pF	10%	250V
C563	1-162-970-11	CERAMIC CHIP	0.01µF	10%	25V						(KV-27FS120/29FS120LN/29FS120LS ONLY)
C566	1-107-635-11	ELECT	4.7µF	20%	160V	C632	1-126-967-11	ELECT	47µF	20%	50V
											(KV-27FS120/29FS120LN/29FS120LS ONLY)
C571	1-104-665-11	ELECT	100µF	20%	25V	C633	1-136-479-11	FILM	0.001µF	5%	100V
C581	1-136-161-00	FILM	0.047µF	5%	50V						(KV-27FS120/29FS120LN/29FS120LS ONLY)
C582	1-106-387-00	MYLAR	0.068µF	10%	200V	C634	1-126-947-11	ELECT	47µF	20%	35V
C585	1-104-666-11	ELECT	220µF	20%	25V						(KV-27FS120/29FS120LN/29FS120LS ONLY)
C588	1-137-417-11	MYLAR	0.015µF	10%	100V	C635	1-126-963-11	ELECT	4.7µF	20%	50V
											(KV-27FS120/29FS120LN/29FS120LS ONLY)
C589	1-128-560-11	ELECT	22µF	20%	100V	C636	1-127-715-91	CERAMIC CHIP	0.22µF	10%	16V
C590	1-126-964-11	ELECT	10µF	20%	50V						(KV-27FS120/29FS120LN/29FS120LS ONLY)
C594	1-123-024-21	ELECT	33µF		160V	C637	1-127-715-91	CERAMIC CHIP	0.22µF	10%	16V
C595	1-104-666-11	ELECT	220µF	20%	25V						(KV-27FS120/29FS120LN/29FS120LS ONLY)
C597	1-104-666-11	ELECT	220µF	20%	25V	C638	1-104-665-11	ELECT	100µF	20%	25V
											(KV-29FS120LS/29FA310LS ONLY)
C600	1-126-964-11	ELECT	10µF	20%	50V						
C601	1-117-703-11	CERAMIC	0.0047µF		250V						
											(KV-29FS120LS/29FA310LS ONLY)


NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.








REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES	
C640	1-164-645-11	CERAMIC (KV-27FS120/29FS120LN/29FS120LS ONLY)	1000pF 10% 50V	*	CN515	1-580-798-11	CONNECTOR PIN (DY) 6P	
C642	1-126-969-11	ELECT (KV-27FS120/29FS120LN/29FS120LS ONLY)	220 μ F 20% 50V	*	CN585	1-564-511-11	PLUG, CONNECTOR 8P	
C643	1-130-777-00	MYLAR (KV-27FS120/29FS120LN/29FS120LS ONLY)	0.1 μ F 5% 100V	\triangle	CN600	1-580-843-11	PIN, CONNECTOR (POWER)	
C645	1-162-964-11	CERAMIC CHIP (KV-27FS120/29FS120LN/29FS120LS ONLY)	0.001 μ F 10% 50V	*	CN601	1-580-843-11	PIN, CONNECTOR (POWER) (KV-29FA310LN/29FA310LS ONLY)	
C647	1-126-947-11	ELECT (KV-27FS120/29FS120LN/29FS120LS ONLY)	47 μ F 20% 35V	*	CN602	1-564-509-11	PLUG, CONNECTOR 6P (KV-29FA310LN/29FA310LS ONLY)	
C648	1-104-330-91	CERAMIC (KV-27FS120/29FS120LN/29FS120LS ONLY)	470pF 10% 1KV	DIODE				
C650	1-126-942-61	ELECT (KV-27FS120/29FS120LN/29FS120LS ONLY)	1000 μ F 20% 25V	D002	8-719-109-89	DIODE	RD5.6ESB2	
C651	1-126-942-61	ELECT (KV-27FS120/29FS120LN/29FS120LS ONLY)	1000 μ F 20% 25V	D003	8-719-110-17	DIODE	RD10ESB2	
C652	1-164-227-11	CERAMIC CHIP (KV-27FS120/29FS120LN/29FS120LS ONLY)	0.022 μ F 10% 25V	D004	8-719-110-17	DIODE	RD10ESB2	
C655	1-104-330-91	CERAMIC (KV-27FS120/29FS120LN/29FS120LS ONLY)	470pF 10% 1KV	D005	8-719-110-17	DIODE	RD10ESB2	
C660	1-126-947-11	ELECT	47 μ F 20% 35V	D006	8-719-921-44	DIODE	MTZJ-5.1C	
C661	1-104-665-11	ELECT	100 μ F 20% 25V	D007	8-719-982-22	DIODE	MTZJ-30D	
C665	1-104-665-11	ELECT	100 μ F 20% 25V	D046	8-719-109-89	DIODE	RD5.6ESB2	
C672	1-137-756-22	FILM (KV-27FS120/29FS120LN/29FS120LS ONLY)	22000pF 3% 800V	D047	8-719-109-89	DIODE	RD5.6ESB2	
C673	1-126-963-11	ELECT	4.7 μ F 20% 50V	D050	8-719-510-02	DIODE	D1NS4	
\triangle C680	1-117-699-11	CERAMIC	0.001 μ F 20% 250V	D051	6-500-175-01	DIODE	1E3-TB	
C690	1-162-970-11	CERAMIC CHIP	0.01 μ F 10% 25V	D052	8-719-109-89	DIODE	RD5.6ESB2	
C901	1-218-712-11	METAL CHIP	6.8K 0.50% 1/10W	D200	8-719-929-15	DIODE	HZS9.1NB2	
CONNECTOR				D201	8-719-929-15	DIODE	HZS9.1NB2	
*	CN002	1-564-510-11	PLUG, CONNECTOR (KV-27FS120/29FS120LN/29FS120LS ONLY)	7P	D202	8-719-929-15	DIODE	HZS9.1NB2
*	CN002	1-564-509-11	PLUG, CONNECTOR (KV-29FA310LN/29FA310LS ONLY)	6P	D203	8-719-929-15	DIODE	HZS9.1NB2
*	CN003	1-560-124-00	PLUG, CONNECTOR (2.5MM)	4P	D204	8-719-929-15	DIODE	HZS9.1NB2
*	CN004	1-564-510-11	PLUG, CONNECTOR	7P	D205	8-719-929-15	DIODE	HZS9.1NB2
*	CN401	1-564-507-11	PLUG, CONNECTOR	4P	D206	8-719-070-62	DIODE	PDZ9.1B-115
*	CN404	1-564-507-11	PLUG, CONNECTOR (KV-29FA310LN/29FA310LS ONLY)	4P	D207	8-719-404-50	DIODE	MA111-TX
*	CN501	1-573-963-11	PIN, CONNECTOR (PC BOARD)	3P	D208	8-719-929-15	DIODE	HZS9.1NB2
*	CN506	1-564-507-11	PLUG, CONNECTOR (KV-27FS120/29FS120LN/29FS120LS ONLY)	4P	D209	8-719-404-50	DIODE	MA111-TX
					D230	8-719-108-12	DIODE	RD9.1EW
					D231	8-719-108-12	DIODE	RD9.1EW
					D232	8-719-108-12	DIODE	RD9.1EW
					D234	8-719-108-12	DIODE	RD9.1EW
					D235	8-719-108-12	DIODE	RD9.1EW
					D236	8-719-108-12	DIODE	RD9.1EW
					D237	8-719-108-12	DIODE	RD9.1EW
					D317	8-719-108-12	DIODE	RD9.1EW
					D321	8-719-110-17	DIODE	RD10ESB2
					D351	8-719-109-66	DIODE	RD3.3ESB2
					D390	8-719-404-50	DIODE	MA111-TX
					D401	8-719-921-63	DIODE	MTZJ-7.5B
					D405	8-719-991-33	DIODE	1SS133T-77

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.



REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
D412	1-216-864-11	SHORT CHIP		D614	8-719-057-52	DIODE	EZ0150AV1
D414	8-719-921-63	DIODE	MTZJ-7.5B			(KV-27FS120/29FS120LN/29FS120LS ONLY)	
D430	8-719-929-15	DIODE	HZS9.1NB2	D615	6-500-177-01	DIODE	MA7D50
D431	8-719-929-15	DIODE	HZS9.1NB2			(KV-27FS120/29FS120LN/29FS120LS ONLY)	
D500	8-719-404-50	DIODE	MA111-TX	D618	8-719-979-64	DIODE	UF4005PKG23
						(KV-27FS120/29FS120LN/29FS120LS ONLY)	
D501	8-719-404-50	DIODE	MA111-TX	D620	8-719-911-19	DIODE	1SS119-25
D505	8-719-081-00	DIODE	BY228/A52A/	D621	8-719-510-37	DIODE	D5LC20U
D506	8-719-312-10	DIODE	RU4AM-T3			(KV-27FS120/29FS120LN/29FS120LS ONLY)	
D507	8-719-991-33	DIODE	1SS133T-77	D624	8-719-510-73	DIODE	S3L20UF4
D508	8-719-404-50	DIODE	MA111-TX			(KV-27FS120/29FS120LN/29FS120LS ONLY)	
D510	8-719-081-00	DIODE	BY228/A52A/	D628	8-719-404-50	DIODE	MA111-TX
D513	8-719-404-50	DIODE	MA111-TX	D629	8-719-110-31	DIODE	RD12ESB2
D514	8-719-908-03	DIODE	GP08D	D631	6-500-175-01	DIODE	1E3-TB
D515	8-719-908-03	DIODE	GP08D			(KV-27FS120/29FS120LN/29FS120LS ONLY)	
D525	8-719-991-33	DIODE	1SS133T-77	D641	8-719-991-33	DIODE	1SS133T-77
D526	8-719-074-25	DIODE	PG104R	D642	8-719-982-22	DIODE	MTZJ-30D
D528	8-719-991-33	DIODE	1SS133T-77	D644	8-719-110-31	DIODE	RD12ESB2
D545	8-719-908-03	DIODE	GP08D	D645	8-719-109-89	DIODE	RD5.6ESB2
D558	8-719-404-50	DIODE	MA111-TX	D650	8-719-109-89	DIODE	RD5.6ESB2
D559	8-719-404-50	DIODE	MA111-TX				
D562	8-719-991-33	DIODE	1SS133T-77				
 D566	8-719-979-84	DIODE	EGP20DPKG23	FUSE			
 D567	8-719-991-33	DIODE	1SS133T-77	 F601	1-532-506-51	FUSE	6.3A 250V
 D568	8-719-921-63	DIODE	MTZJ-7.5B			(KV-29FS120LS/29FA310LS ONLY)	
D569	8-719-921-44	DIODE	MTZJ-5.1C	 F601	1-576-193-11	FUSE	6.3A 125V
						(KV-27FS120/29FA310LN/29FS120LN ONLY)	
D587	8-719-074-25	DIODE	PG104R				
D589	8-719-991-33	DIODE	1SS133T-77	FERRITE BEAD			
D596	8-719-979-85	DIODE	EGP20G	FB301	1-410-397-21	FERRITE	1.1µH
D598	8-719-979-85	DIODE	EGP20G	FB505	1-410-397-21	FERRITE	1.1µH
D603	8-719-064-12	DIODE	S1NB60-4062	FB506	1-410-397-21	FERRITE	1.1µH
				FB522	1-410-397-21	FERRITE	1.1µH
D604	6-500-890-01	DIODE	1N5406G-EB	FB601	1-410-397-21	FERRITE	1.1µH
		(KV-27FS120/29FA310LN/29FS120LN ONLY)				(KV-27FS120/29FS120LN/29FS120LS ONLY)	
D605	8-719-510-53	DIODE	D4SB60L				
		(KV-29FS120LS/29FA310LS ONLY)					
D606	6-500-890-01	DIODE	1N5406G-EB	FB602	1-410-397-21	FERRITE	1.1µH
		(KV-27FS120/29FA310LN/29FS120LN ONLY)				(KV-27FS120/29FS120LN/29FS120LS ONLY)	
D611	8-719-510-73	DIODE	S3L20UF4	FB603	1-410-397-21	FERRITE	1.1µH
		(KV-27FS120/29FS120LS/29FS120LN ONLY)				(KV-27FS120/29FS120LN/29FS120LS ONLY)	
D612	8-719-068-00	DIODE	ERC04-06SE	FB604	1-410-397-21	FERRITE	1.1µH
		(KV-27FS120/29FA310LN/29FS120LN ONLY)				(KV-27FS120/29FS120LN/29FS120LS ONLY)	
D613	8-719-068-00	DIODE	ERC04-06SE	FB605	1-410-397-21	FERRITE	1.1µH
		(KV-27FS120/29FA310LN/29FS120LN ONLY)		FB616	1-469-578-11	FERRITE	1.1µH
						(KV-27FS120/29FS120LN/29FS120LS ONLY)	




REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
FB617	1-469-578-11	FERRITE (KV-27FS120/29FS120LN/29FS120LS ONLY)	1.1μH	CHIP CONDUCTOR			
		FILTER		JR2	1-216-864-11	SHORT CHIP	
FL001	1-239-803-11	ENCAPSULATED COMPONENT		JR6	1-216-864-11	SHORT CHIP	
		IC		JR7	1-216-864-11	SHORT CHIP	
IC001	6-804-178-01	IC	M65582AUF-XXXFP	JR12	1-216-864-11	SHORT CHIP	
IC002	6-704-004-01	IC	BR24L16F-WE2	JR44	1-216-864-11	SHORT CHIP	
IC003	8-759-352-91	IC	PST9143NL	JR102	1-216-864-11	SHORT CHIP	
IC321	8-759-353-00	IC	NJM2534M(TE2)	JR128	1-216-864-11	SHORT CHIP	
IC400	6-703-190-01	IC (KV-27FS120/29FS120LN/29FS120LS ONLY)	NJW1134AGK1-TE2	JR201	1-216-864-11	SHORT CHIP	
IC400	6-706-033-01	IC (KV-29FA310LN/29FA310LS ONLY)	W1172JK1-TE	JR207	1-216-864-11	SHORT CHIP	
IC404	6-705-054-01	IC	TDA8947J	JR209	1-216-864-11	SHORT CHIP	
IC545	8-759-696-71	IC	STV9379A	JR211	1-216-864-11	SHORT CHIP	
IC561	8-759-700-07	IC	NJM2903M	JR212	1-216-864-11	SHORT CHIP	
IC565	8-759-700-44	IC	NJM2902M	JR213	1-216-864-11	SHORT CHIP	
IC600	6-705-810-01	IC (KV-27FS120/29FS120LN/29FS120LS ONLY)	MCZ3001DB	JR214	1-216-864-11	SHORT CHIP	
IC603	6-705-818-01	IC (KV-27FS120/29FS120LN/29FS120LS ONLY)	MC7809CF	JR215	1-216-864-11	SHORT CHIP	
IC603	6-705-466-01	IC (KV-29FA310LN/29FA310LS ONLY)	BA90BC0T	JR216	1-216-864-11	SHORT CHIP (KV-27FS120/29FS120LN/29FS120LS ONLY)	
IC604	8-749-012-13	IC (KV-27FS120/29FS120LN/29FS120LS ONLY)	DM-58	JR255	1-216-864-11	SHORT CHIP	
IC608	8-759-450-47	IC	BA05T	JR301	1-216-864-11	SHORT CHIP	
IC633	6-703-080-01	IC	LF33CV	JR302	1-216-864-11	SHORT CHIP	
		JACK		JR303	1-216-864-11	SHORT CHIP	
J200	1-794-119-11	TERMINAL BLOCK, S	4P	JR304	1-216-864-11	SHORT CHIP	
J202	1-794-118-11	JACK BLOCK, PIN	3P	JR305	1-216-864-11	SHORT CHIP	
* J203	1-817-461-11	PIN JACK BLOCK	5P	JR306	1-216-864-11	SHORT CHIP	
J205	1-794-116-11	JACK BLOCK, PIN (KV-27FS120/29FS120LN/29FS120LS ONLY)	2P	JR310	1-216-864-11	SHORT CHIP	
J205	1-818-352-11	PIN JACK W/ DIN CONNECTOR (KV-29FA310LN/29FA310LS ONLY)		JR311	1-216-864-11	SHORT CHIP	
				JR312	1-216-864-11	SHORT CHIP	
				JR315	1-216-864-11	SHORT CHIP	
				JR317	1-216-864-11	SHORT CHIP	
				JR401	1-216-864-11	SHORT CHIP	
				JR411	1-216-864-11	SHORT CHIP	
				JR485	1-216-864-11	SHORT CHIP	
				JR486	1-216-864-11	SHORT CHIP	
				JR504	1-216-864-11	SHORT CHIP	
				JR585	1-216-864-11	SHORT CHIP	
				JR586	1-216-864-11	SHORT CHIP	
				JR1502	1-216-864-11	SHORT CHIP	
				JUMPER WIRE			
				JW57	1-249-409-11	CARBON	220 5% 1/4W




REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R007	1-400-427-21	FERRITE	0μH			R085	1-216-864-11	SHORT CHIP			
R015	1-216-833-11	METAL CHIP	10K	5%	1/10W	R086	1-216-821-11	METAL CHIP	1K	5%	1/10W
R027	1-218-732-11	METAL CHIP	47K	0.50%	1/10W	R087	1-247-807-31	CARBON	100	5%	1/4W
R028	1-249-409-11	CARBON	220	5%	1/4W	R088	1-216-864-11	SHORT CHIP			
R029	1-249-409-11	CARBON	220	5%	1/4W	R090	1-216-837-11	METAL CHIP	22K	5%	1/10W
R030	1-249-409-11	CARBON	220	5%	1/4W	R091	1-216-841-11	METAL CHIP	47K	5%	1/10W
R031	1-216-813-11	METAL CHIP	220	5%	1/10W	R092	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R032	1-216-813-11	METAL CHIP	220	5%	1/10W	R093	1-216-841-11	METAL CHIP	47K	5%	1/10W
R033	1-249-409-11	CARBON	220	5%	1/4W	R094	1-414-229-11	FERRITE	0μH		
R035	1-216-809-11	METAL CHIP	100	5%	1/10W	R095	1-216-813-11	METAL CHIP	220	5%	1/10W
R037	1-216-833-11	METAL CHIP	10K	5%	1/10W	R096	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R038	1-216-821-11	METAL CHIP	1K	5%	1/10W	R098	1-216-839-11	METAL CHIP	33K	5%	1/10W
R039	1-216-815-11	METAL CHIP	330	5%	1/10W	R101	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R040	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R102	1-216-837-11	METAL CHIP	22K	5%	1/10W
R041	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R103	1-216-833-11	METAL CHIP	10K	5%	1/10W
R042	1-216-813-11	METAL CHIP	220	5%	1/10W	R105	1-216-864-11	SHORT CHIP			
R043	1-216-813-11	METAL CHIP	220	5%	1/10W	R107	1-414-229-11	FERRITE	0μH		
R044	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R108	1-414-229-11	FERRITE	0μH		
R045	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R109	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R047	1-249-409-11	CARBON	220	5%	1/4W	R110	1-249-409-11	CARBON	220	5%	1/4W
R048	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R111	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R049	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R112	1-249-425-11	CARBON	4.7K	5%	1/4W
R050	1-249-425-11	CARBON	4.7K	5%	1/4W	R115	1-216-817-11	METAL CHIP	470	5%	1/10W
R051	1-249-417-11	CARBON	1K	5%	1/4W	R116	1-216-853-11	METAL CHIP	470K	5%	1/10W
R052	1-216-813-11	METAL CHIP	220	5%	1/10W	R200	1-216-813-11	METAL CHIP	220	5%	1/10W
R053	1-249-433-11	CARBON	22K	5%	1/4W	R202	1-216-845-11	METAL CHIP	100K	5%	1/10W
R054	1-249-433-11	CARBON	22K	5%	1/4W	R203	1-216-845-11	METAL CHIP	100K	5%	1/10W
R055	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R210	1-216-845-11	METAL CHIP	100K	5%	1/10W
R056	1-216-833-11	METAL CHIP	10K	5%	1/10W	R211	1-249-409-11	CARBON	220	5%	1/4W
R057	1-249-417-11	CARBON	1K	5%	1/4W	R212	1-249-409-11	CARBON	220	5%	1/4W
R058	1-249-429-11	CARBON	10K	5%	1/4W	R213	1-216-845-11	METAL CHIP	100K	5%	1/10W
R059	1-249-417-11	CARBON	1K	5%	1/4W	R215	1-216-853-11	METAL CHIP	470K	5%	1/10W
R060	1-249-409-11	CARBON	220	5%	1/4W	R216	1-216-853-11	METAL CHIP	470K	5%	1/10W
R061	1-249-429-11	CARBON	10K	5%	1/4W	R217	1-249-409-11	CARBON	220	5%	1/4W
R062	1-249-413-11	CARBON	470	5%	1/4W	R218	1-216-813-11	METAL CHIP	220	5%	1/10W
R063	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R220	1-216-813-11	METAL CHIP	220	5%	1/10W
R070	1-249-409-11	CARBON	220	5%	1/4W	R221	1-249-409-11	CARBON	220	5%	1/4W
R072	1-249-425-11	CARBON	4.7K	5%	1/4W	R222	1-249-409-11	CARBON	220	5%	1/4W
R076	1-247-807-31	CARBON	100	5%	1/4W	R227	1-218-285-11	METAL CHIP	75	5%	1/10W
R080	1-216-833-11	METAL CHIP	10K	5%	1/10W	R229	1-218-285-11	METAL CHIP	75	5%	1/10W
R081	1-216-841-11	METAL CHIP	47K	5%	1/10W	R230	1-218-285-11	METAL CHIP	75	5%	1/10W
R082	1-216-857-11	METAL CHIP	1M	5%	1/10W	R250	1-216-821-11	METAL CHIP	1K	5%	1/10W
R083	1-216-847-11	METAL CHIP	150K	5%	1/10W	R251	1-216-821-11	METAL CHIP	1K	5%	1/10W
R084	1-216-819-11	METAL CHIP	680	5%	1/10W	R303	1-216-863-11	METAL CHIP	3.3M	5%	1/10W









REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R305	1-218-285-11	METAL CHIP	75	5%	1/10W	R405	1-216-833-11	METAL CHIP	10K	5%	1/10W
R308	1-216-821-11	METAL CHIP	1K	5%	1/10W	R406	1-216-813-11	METAL CHIP	220	5%	1/10W
R309	1-216-833-11	METAL CHIP	10K	5%	1/10W	R407	1-216-813-11	METAL CHIP	220	5%	1/10W
R310	1-216-821-11	METAL CHIP	1K	5%	1/10W	R408	1-216-864-11	SHORT CHIP			
R311	1-216-813-11	METAL CHIP	220	5%	1/10W	R409	1-216-864-11	SHORT CHIP			
R312	1-218-867-11	METAL CHIP	6.8K	0.50%	1/10W	R410	1-216-833-11	METAL CHIP	10K	5%	1/10W
R313	1-216-864-11	SHORT CHIP				R411	1-216-833-11	METAL CHIP	10K	5%	1/10W
R314	1-216-833-11	METAL CHIP	10K	5%	1/10W	R415	1-216-809-11	METAL CHIP	100	5%	1/10W
R315	1-216-813-11	METAL CHIP	220	5%	1/10W			(KV-29FA310LN/29FA310LS ONLY)			
R316	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R418	1-216-809-11	METAL CHIP	100	5%	1/10W
R317	1-216-813-11	METAL CHIP	220	5%	1/10W			(KV-29FA310LN/29FA310LS ONLY)			
R318	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R419	1-216-864-11	SHORT CHIP			
R319	1-216-813-11	METAL CHIP	220	5%	1/10W			(KV-27FS120/29FS120LN/29FS120LS ONLY)			
R320	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R420	1-216-864-11	SHORT CHIP			
R321	1-247-807-31	CARBON	100	5%	1/4W			(KV-27FS120/29FS120LN/29FS120LS ONLY)			
R322	1-218-684-11	METAL CHIP	470	0.50%	1/10W	R421	1-216-864-11	SHORT CHIP			
R323	1-215-415-00	METAL	560	1%	1/4W	R422	1-216-833-11	METAL CHIP	10K	5%	1/10W
R324	1-216-821-11	METAL CHIP	1K	5%	1/10W	R427	1-216-841-11	METAL CHIP	47K	5%	1/10W
R325	1-216-864-11	SHORT CHIP				R429	1-216-841-11	METAL CHIP	47K	5%	1/10W
R326	1-400-427-21	FERRITE	0μH			R430	1-216-845-11	METAL CHIP	100K	5%	1/10W
R328	1-400-427-21	FERRITE	0μH			R431	1-216-845-11	METAL CHIP	100K	5%	1/10W
R330	1-218-285-11	METAL CHIP	75	5%	1/10W	R433	1-216-809-11	METAL CHIP	100	5%	1/10W
R335	1-216-813-11	METAL CHIP	220	5%	1/10W	R434	1-216-864-11	SHORT CHIP			
R337	1-216-801-11	METAL CHIP	22	5%	1/10W	R442	1-216-809-11	METAL CHIP	100	5%	1/10W
R338	1-216-864-11	SHORT CHIP				R450	1-249-425-11	CARBON	4.7K	5%	1/4W
R339	1-216-813-11	METAL CHIP	220	5%	1/10W	R477	1-216-819-11	METAL CHIP	680	5%	1/10W
R351	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R478	1-216-833-11	METAL CHIP	10K	5%	1/10W
R352	1-216-853-11	METAL CHIP	470K	5%	1/10W	R479	1-216-821-11	METAL CHIP	1K	5%	1/10W
R363	1-218-285-11	METAL CHIP	75	5%	1/10W	R499	1-216-845-11	METAL CHIP	100K	5%	1/10W
R364	1-218-285-11	METAL CHIP	75	5%	1/10W	R501	1-249-411-11	CARBON	330	5%	1/4W
R370	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R502	1-249-425-11	CARBON	4.7K	5%	1/4W
R371	1-216-849-11	METAL CHIP	220K	5%	1/10W	R503	1-215-919-11	METAL OXIDE	2.2K	5%	3W
R372	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R504	1-249-425-11	CARBON	4.7K	5%	1/4W
R382	1-216-863-11	METAL CHIP	3.3M	5%	1/10W	R507	1-216-833-11	METAL CHIP	10K	5%	1/10W
R390	1-216-864-11	SHORT CHIP				R510	1-260-328-11	CARBON	1K	5%	1/2W
R391	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R513	1-215-908-00	METAL OXIDE	33	5%	3W
R392	1-216-818-11	METAL CHIP	560	5%	1/10W	R514	1-215-910-00	METAL OXIDE	68	5%	3W
R393	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R515	1-215-882-00	METAL OXIDE	22	5%	2W
R394	1-216-833-11	METAL CHIP	10K	5%	1/10W	R517	1-216-839-11	METAL CHIP	33K	5%	1/10W
R400	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R520	1-216-833-11	METAL CHIP	10K	5%	1/10W
R401	1-216-809-11	METAL CHIP	100	5%	1/10W	R521	1-216-819-11	METAL CHIP	680	5%	1/10W
R402	1-216-864-11	SHORT CHIP				R522	1-249-411-11	CARBON	330	5%	1/4W
R403	1-216-809-11	METAL CHIP	100	5%	1/10W	R524	1-218-867-11	METAL CHIP	6.8K	0.50%	1/10W
R404	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R525	1-215-884-11	METAL OXIDE	47	5%	2W


NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

A component identified by this  symbol indicates that it has been carefully factory-selected to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.









REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R526	1-218-724-11	METAL CHIP	22K	0.50%	1/10W	R583	1-249-377-11	CARBON	0.47	5%	1/4W
R527	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R584	1-215-451-00	METAL	18K	1%	1/4W
R528	1-216-816-11	METAL CHIP	390	5%	1/10W	R585	1-215-447-00	METAL	12K	1%	1/4W
R529	1-218-720-11	METAL CHIP	15K	0.50%	1/10W	R586	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W
R530	1-218-865-11	METAL CHIP	5.6K	0.50%	1/10W	R587	1-249-401-11	CARBON	47	5%	1/4W
R533	1-218-712-11	METAL CHIP	6.8K	0.50%	1/10W	R588	1-215-882-00	METAL OXIDE	22	5%	2W
R534	1-218-720-11	METAL CHIP	15K	0.50%	1/10W	R589	1-247-895-91	CARBON	470K	5%	1/4W
R535	1-218-865-11	METAL CHIP	5.6K	0.50%	1/10W	R590	1-249-429-11	CARBON	10K	5%	1/4W
R536	1-216-833-11	METAL CHIP	10K	5%	1/10W	R591	1-216-363-00	METAL OXIDE	0.33	5%	2W
R537	1-216-855-11	METAL CHIP	680K	5%	1/10W	R592	1-249-441-11	CARBON	100K	5%	1/4W
R539	1-216-864-11	SHORT CHIP				R593	1-249-429-11	CARBON	10K	5%	1/4W
R540	1-249-429-11	CARBON	10K	5%	1/4W	R594	1-249-418-11	CARBON	1.2K	5%	1/4W
R542	1-215-445-00	METAL	10K	1%	1/4W	R595	1-247-895-91	CARBON	470K	5%	1/4W
R543	1-216-368-11	METAL OXIDE	0.82	5%	2W	R596	1-249-377-11	CARBON	0.47	5%	1/4W
R544	1-249-389-11	CARBON	4.7	5%	1/4W	R597	1-216-849-11	METAL CHIP	220K	5%	1/10W
R545	1-215-890-11	METAL OXIDE	470	5%	2W	R598	1-249-377-11	CARBON	0.47	5%	1/4W
R546	1-249-385-11	CARBON	2.2	5%	1/4W	R601	1-240-262-11	CEMENTED	0.68	5%	10W
R547	1-215-445-00	METAL	10K	1%	1/4W			(KV-27FS120/29FA310LN/29FS120LN ONLY)			
R548	1-218-720-11	METAL CHIP	15K	0.50%	1/10W	R601	1-202-968-11	CEMENTED	1.2	5%	10W
R549	1-216-841-11	METAL CHIP	47K	5%	1/10W			(KV-29FS120LS/29FA310LS ONLY)			
R550	1-216-817-11	METAL CHIP	470	5%	1/10W	R602	1-240-262-11	CEMENTED	0.68	5%	10W
R551	1-216-829-11	METAL CHIP	4.7K	5%	1/10W			(KV-27FS120/29FA310LN/29FS120LN ONLY)			
R553	1-216-821-11	METAL CHIP	1K	5%	1/10W	R602	1-202-968-11	CEMENTED	1.2	5%	10W
R554	1-216-827-11	METAL CHIP	3.3K	5%	1/10W			(KV-29FS120LS/29FA310LS ONLY)			
R555	1-216-833-11	METAL CHIP	10K	5%	1/10W	 R603	1-219-513-11	METAL	4.7M	5%	1/2W
R556	1-216-825-11	METAL CHIP	2.2K	5%	1/10W			(KV-27FS120/29FA310LN/29FS120LN ONLY)			
R557	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R604	1-216-821-11	METAL CHIP	1K	5%	1/10W
R560	1-216-821-11	METAL CHIP	1K	5%	1/10W	R605	1-216-833-11	METAL CHIP	10K	5%	1/10W
R561	1-216-833-11	METAL CHIP	10K	5%	1/10W	R606	1-216-833-11	METAL CHIP	10K	5%	1/10W
R562	1-249-429-11	CARBON	10K	5%	1/4W	R607	1-216-857-11	METAL CHIP	1M	5%	1/10W
R563	1-218-871-11	METAL CHIP	10K	0.50%	1/10W	R608	1-215-924-00	METAL OXIDE	15K	5%	3W
  R564	1-218-730-11	METAL CHIP	39K	0.50%	1/10W	R609	1-202-962-11	CEMENTED	3.3	5%	10W
 R565	1-218-716-11	METAL CHIP	10K	0.50%	1/10W	R611	1-240-262-11	CEMENTED	0.68	5%	10W
 R566	1-215-469-00	METAL	100K	1%	1/4W			(KV-27FS120/29FA310LN/29FS120LN ONLY)			
R567	1-215-927-00	METAL OXIDE	47K	5%	3W	R611	1-202-968-11	CEMENTED	1.2	5%	10W
R568	1-215-399-00	METAL	120	1%	1/4W			(KV-29FS120LS/29FA310LS ONLY)			
R569	1-249-429-11	CARBON	10K	5%	1/4W	R612	1-260-131-11	CEMENTED	470K	5%	1/2W
R570	1-218-716-11	METAL CHIP	10K	0.50%	1/10W			(KV-29FS120LS/29FA310LS ONLY)			
R572	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R613	1-240-262-11	CEMENTED	0.68	5%	10W
R573	1-216-829-11	METAL CHIP	4.7K	5%	1/10W			(KV-27FS120/29FA310LN/29FS120LN ONLY)			
R574	1-216-833-11	METAL CHIP	10K	5%	1/10W	R613	1-202-968-11	CEMENTED	1.2	5%	10W
R575	1-249-389-11	CARBON	4.7	5%	1/4W			(KV-29FS120LS/29FA310LS ONLY)			
R578	1-249-429-11	CARBON	10K	5%	1/4W	R614	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R581	1-249-441-11	CARBON	100K	5%	1/4W						


NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.













REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R615	1-202-933-61	FUSIBLE (KV-27FS120/29FS120LN/29FS120LS ONLY)	0.1	10%	1/2W	R667	1-216-833-11	METAL CHIP (KV-27FS120/29FS120LN/29FS120LS ONLY)	10K	5%	1/10W
R616	1-216-821-11	METAL CHIP (KV-27FS120/29FS120LN/29FS120LS ONLY)	1K	5%	1/10W	R668	1-249-418-11	CARBON (KV-27FS120/29FS120LN/29FS120LS ONLY)	1.2K	5%	1/4W
R617	1-216-821-11	METAL CHIP (KV-27FS120/29FS120LN/29FS120LS ONLY)	1K	5%	1/10W	R670	1-216-833-11	METAL CHIP (KV-27FS120/29FS120LN/29FS120LS ONLY)	10K	5%	1/10W
R619	1-249-389-11	CARBON (KV-27FS120/29FS120LN/29FS120LS ONLY)	4.7	5%	1/4W	R671	1-243-979-71	METAL OXIDE (KV-27FS120/29FS120LN/29FS120LS ONLY)	0.1	5%	2W
R620	1-216-353-00	METAL OXIDE	2.2	5%	1W	R680	1-216-864-11	SHORT CHIP			
R625	1-249-413-11	CARBON (KV-27FS120/29FS120LN/29FS120LS ONLY)	470	5%	1/4W	R687	1-202-968-11	CEMENTED (KV-29FS120LS/29FA310LS ONLY)	1.2	5%	10W
R626	1-218-716-11	METAL CHIP (KV-27FS120/29FS120LN/29FS120LS ONLY)	10K	0.50%	1/10W	R687	1-240-262-11	CEMENTED (KV-27FS120/29FA310LN/29FS120LN ONLY)	0.68	5%	10W
R627	1-215-481-00	METAL (KV-27FS120/29FS120LN/29FS120LS ONLY)	330K	1%	1/4W	 R699	1-218-265-11	METAL CHIP (KV-29FS120LS/29FA310LS ONLY)	8.2M	5%	1W
R628	1-260-131-11	CEMENTED (KV-29FS120LS/29FA310LS ONLY)	470K	5%	1/2W	R801	1-218-716-11	METAL CHIP	10K	0.50%	1/10W
R629	1-215-481-00	METAL (KV-27FS120/29FS120LN/29FS120LS ONLY)	330K	1%	1/4W	R802	1-218-714-11	METAL CHIP	8.2K	0.50%	1/10W
R630	1-215-481-00	METAL (KV-27FS120/29FS120LN/29FS120LS ONLY)	330K	1%	1/4W	R803	1-218-719-11	METAL CHIP	13K	0.50%	1/10W
R631	1-218-718-11	METAL CHIP (KV-27FS120/29FS120LN/29FS120LS ONLY)	12K	0.50%	1/10W	R812	1-218-716-11	METAL CHIP	10K	0.50%	1/10W
R632	1-216-809-11	METAL CHIP (KV-27FS120/29FS120LN/29FS120LS ONLY)	100	5%	1/10W	R813	1-218-716-11	METAL CHIP	10K	0.50%	1/10W
R634	1-215-905-11	METAL OXIDE	10	5%	3W	R814	1-218-736-11	METAL CHIP	68K	0.50%	1/10W
R640	1-249-417-11	CARBON (KV-27FS120/29FS120LN/29FS120LS ONLY)	1K	5%	1/4W	R815	1-218-732-11	METAL CHIP	47K	0.50%	1/10W
R641	1-202-968-11	CEMENTED (KV-29FS120LS/29FA310LS ONLY)	1.2	5%	10W	R850	1-215-453-00	METAL	22K	1%	1/4W
R641	1-240-262-11	CEMENTED (KV-27FS120/29FA310LN/29FS120LN ONLY)	0.68	5%	10W	 R851	1-216-821-11	METAL CHIP	1K	5%	1/10W
R647	1-216-811-11	METAL CHIP (KV-27FS120/29FS120LN/29FS120LS ONLY)	150	5%	1/10W	R852	1-218-889-11	METAL CHIP	56K	0.50%	1/10W
R650	1-249-415-11	CARBON	680	5%	1/4W	R862	1-216-813-11	METAL CHIP	220	5%	1/10W
R651	1-249-441-11	CARBON (KV-27FS120/29FS120LN/29FS120LS ONLY)	100K	5%	1/4W	R890	1-216-843-11	METAL CHIP	68K	5%	1/10W
R652	1-249-441-11	CARBON (KV-27FS120/29FS120LN/29FS120LS ONLY)	100K	5%	1/4W	R893	1-216-864-11	SHORT CHIP			
R658	1-249-393-11	CARBON (KV-27FS120/29FS120LN/29FS120LS ONLY)	10	5%	1/4W	R901	1-218-714-11	METAL CHIP	8.2K	0.50%	1/10W
R659	1-249-393-11	CARBON (KV-27FS120/29FS120LN/29FS120LS ONLY)	10	5%	1/4W	RELAY					
R660	1-216-833-11	METAL CHIP (KV-27FS120/29FS120LN/29FS120LS ONLY)	10K	5%	1/10W	RY501	1-755-198-11	RELAY, AC POWER			
						 RY600	1-755-395-11	RELAY (AC POWER)			
						SWITCH					
						SW515	1-572-707-11	SWITCH, LEVER			
						TRANSFORMER					
						T505	1-433-836-11	TRANSFORMER, HORIZONTAL DRIVE			
						 T510	1-437-610-11	TRANSFORMER, FERRITE (PMT)			
						 T511	1-433-850-11	TRANSFORMER, HORIZONTAL LINEAR			

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.




REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
 T585	1-453-310-21	FBT ASSY NX-4521//X4J4		C2777	1-126-963-11	ELECT	4.7µF 20% 50V
 T601	1-435-617-11	TRANSFORMER, LINE FILTER		C2778	1-126-947-11	ELECT	47µF 20% 35V
 T602	1-435-675-11	TRANSFORMER, STANDBY (KV-27FS120/29FA310LN/29FS120LN ONLY)		C3701	1-126-947-11	ELECT	47µF 20% 35V
 T602	1-435-676-11	TRANSFORMER, STANDBY (KV-29FS120LS/29FA310LS ONLY)		C3702	1-136-497-81	FILM	0.1µF 5% 50V
 T603	1-439-898-21	CONVERTER TRANSFORMER (KV-27FS120/29FS120LN/29FS120LS ONLY)		C3703	1-126-947-11	ELECT	47µF 20% 35V
THERMISTOR				C3708	1-136-497-81	FILM	0.1µF 5% 50V
 THP501	1-804-313-11	THERMISTOR, PTC (KV-27FS120/29FA310LN/29FS120LN ONLY)		C3780	1-162-926-11	CERAMIC CHIP	82pF 5% 50V
 THP501	1-803-540-11	THERMISTOR, PTC (KV-29FS120LS/29FA310LS ONLY)		C3781	1-162-926-11	CERAMIC CHIP	82pF 5% 50V
TUNER				C3782	1-162-926-11	CERAMIC CHIP	82pF 5% 50V
 TU101	8-598-593-50	TUNER, FSS BTF-WA421		C3901	1-107-667-11	ELECT	2.2µF 20% 400V
VARISTOR				C3902	1-107-364-11	MYLAR	0.01µF 10% 200V
 VDR600	1-810-974-21	VARISTOR (KV-27FS120/29FA310LN/29FS120LN ONLY)		C3903	1-126-935-11	ELECT	470µF 20% 16V
 VDR600	1-803-967-11	VARISTOR (KV-29FS120LS/29FA310LS ONLY)		C3904	1-130-471-00	MYLAR	0.001µF 5% 50V
CRYSTAL				C3905	1-107-364-11	MYLAR	0.01µF 10% 200V
X001	1-795-006-21	VIBRATOR, CRYSTAL		C3906	1-130-471-00	MYLAR	0.001µF 5% 50V
X301	1-781-377-21	VIBRATOR, CRYSTAL		C3907	1-107-638-11	ELECT	33µF 20% 160V
CONNECTOR				C3908	1-126-935-11	ELECT	470µF 20% 16V
CW BOARD, MOUNTED				C3909	1-104-999-11	MYLAR	0.1µF 5% 200V
4-382-854-11				C3910	1-104-999-11	MYLAR	0.1µF 5% 200V
CAPACITOR				C3911	1-104-665-11	ELECT	100µF 20% 25V
C2751	1-107-652-11	ELECT	10µF 20% 250V	C3912	1-126-935-11	ELECT	470µF 20% 16V
C2752	1-162-114-00	CERAMIC	0.0047µF 2KV	C3913	1-126-933-11	ELECT	100µF 20% 16V
C2753	1-137-528-11	MYLAR	0.1µF 10% 250V	C3914	1-130-491-00	MYLAR	0.047µF 5% 50V
C2754	1-102-074-00	CERAMIC	0.001µF 10% 50V	C3915	1-162-970-11	CERAMIC CHIP	0.01µF 10% 25V
C2755	1-107-651-11	ELECT	4.7µF 20% 250V	C3930	1-104-655-91	ELECT	470µF 20% 6.3V
C2774	1-126-960-11	ELECT	1µF 20% 50V	C3931	1-104-655-91	ELECT	470µF 20% 6.3V
C2775	1-126-935-11	ELECT	470µF 20% 16V	CONNECTOR			
				CN2707	1-564-506-11	PLUG, CONNECTOR 3P	
				* CN2752	1-564-512-11	PLUG, CONNECTOR 9P	
				CN2753	1-785-879-11	CONNECTOR, ONE TOUCH	
				CN2755	1-695-915-11	TAB (CONTACT)	
				* CN3903	1-564-506-11	PLUG, CONNECTOR 3P	
				DIODE			
				D2701	8-719-108-12	DIODE	RD9.1EW
				D2754	8-719-901-83	DIODE	1SS83
				D2755	8-719-901-83	DIODE	1SS83
				D2756	8-719-901-83	DIODE	1SS83
				D2758	8-719-074-25	DIODE	PG104R
				D3762	8-719-404-50	DIODE	MA111-TX
				D3763	8-719-404-50	DIODE	MA111-TX
				D3772	8-719-404-50	DIODE	MA111-TX


NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.





REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
D3773	8-719-404-50	DIODE	MA111-TX	Q3762	8-729-422-27	TRANSISTOR	2SD601A-Q
D3782	8-719-404-50	DIODE	MA111-TX	Q3763	8-729-422-27	TRANSISTOR	2SD601A-Q
D3783	8-719-404-50	DIODE	MA111-TX	Q3771	8-729-422-27	TRANSISTOR	2SD601A-Q
D3901	8-719-110-86	DIODE	RD39ESB	Q3772	8-729-422-27	TRANSISTOR	2SD601A-Q
D3902	8-719-110-86	DIODE	RD39ESB	Q3773	8-729-422-27	TRANSISTOR	2SD601A-Q
D3903	8-719-991-33	DIODE	1SS133T-77	Q3781	8-729-422-27	TRANSISTOR	2SD601A-Q
D3905	8-719-510-02	DIODE	D1NS4	Q3782	8-729-422-27	TRANSISTOR	2SD601A-Q
D3906	8-719-404-50	DIODE	MA111-TX	Q3783	8-729-422-27	TRANSISTOR	2SD601A-Q
D3907	8-719-404-50	DIODE	MA111-TX	Q3901	8-729-053-87	TRANSISTOR	KTC4370A
D3908	8-719-404-50	DIODE	MA111-TX	Q3902	6-550-247-01	TRANSISTOR	KTA1659A
FERRITE BEAD				Q3903	8-729-422-27	TRANSISTOR	2SD601A-Q
FB3700	1-410-397-21	FERRITE	1.1 μ H	Q3904	8-729-422-27	TRANSISTOR	2SD601A-Q
FB3701	1-410-397-21	FERRITE	1.1 μ H	Q3905	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX
FB3702	1-410-397-21	FERRITE	1.1 μ H	Q3906	8-729-120-28	TRANSISTOR	2SC1623-L5L6
FB3703	1-410-397-21	FERRITE	1.1 μ H	Q3907	8-729-120-28	TRANSISTOR	2SC1623-L5L6
IC				Q3908	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX
IC2751	8-759-562-43	IC	TDA6108JF/N1B	RESISTOR			
IC3701	8-759-803-42	IC	LA6500-FA	R2756	1-260-328-11	CARBON	1K 5% 1/2W
JACK				R2757	1-260-328-11	CARBON	1K 5% 1/2W
\triangle J2751	1-451-544-11	SOCKET, CRT		R2758	1-260-328-11	CARBON	1K 5% 1/2W
CHIP CONDUCTOR				R2760	1-260-087-11	CARBON	100 5% 1/2W
JR3910	1-216-864-11	SHORT CHIP		R2761	1-216-375-00	METAL OXIDE	3.3 5% 2W
COIL				R2762	1-216-375-00	METAL OXIDE	3.3 5% 2W
L2751	1-408-613-31	INDUCTOR	68 μ H	R2763	1-247-807-31	CARBON	100 5% 1/4W
L3710	1-410-387-11	INDUCTOR	33 μ H	R2764	1-247-807-31	CARBON	100 5% 1/4W
L3711	1-410-387-11	INDUCTOR	33 μ H	R2765	1-247-807-31	CARBON	100 5% 1/4W
L3712	1-410-387-11	INDUCTOR	33 μ H	R2766	1-247-807-31	CARBON	100 5% 1/4W
L3901	1-412-528-11	INDUCTOR	18 μ H	R2767	1-247-807-31	CARBON	100 5% 1/4W
TRANSISTOR				R2768	1-247-807-31	CARBON	100 5% 1/4W
Q2772	8-729-422-27	TRANSISTOR	2SD601A-Q	R2770	1-260-132-11	CARBON	560K 5% 1/2W
Q3710	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX	R2785	1-249-399-11	CARBON	33 5% 1/4W
Q3711	8-729-422-27	TRANSISTOR	2SD601A-Q	R2788	1-249-421-11	CARBON	2.2K 5% 1/4W
Q3712	8-729-422-27	TRANSISTOR	2SD601A-Q	R2789	1-249-425-11	CARBON	4.7K 5% 1/4W
Q3761	8-729-422-27	TRANSISTOR	2SD601A-Q	R3700	1-249-433-11	CARBON	22K 5% 1/4W
				R3701	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R3702	1-216-813-11	METAL CHIP	220 5% 1/10W
				R3704	1-249-419-11	CARBON	1.5K 5% 1/4W
				R3705	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R3706	1-249-381-11	CARBON	1 5% 1/4W
				R3707	1-249-383-11	CARBON	1.5 5% 1/4W
				R3710	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R3711	1-218-692-11	METAL CHIP	1K 0.50% 1/10W


NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.





REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
COIL							
L1805	1-406-677-11	INDUCTOR	10MH	C1643	1-136-165-00	FILM	0.1µF 5% 50V
				C1645	1-136-479-11	FILM	0.001µF 5% 100V
				C1647	1-126-947-11	ELECT	47µF 20% 35V
				C1648	1-164-143-11	CERAMIC	0.001µF 10% 1KV
				C1649	1-164-143-11	CERAMIC	0.001µF 10% 1KV
TRANSISTOR							
Q1810	8-729-043-95	TRANSISTOR	2SC3840(3)	C1650	1-100-120-51	ELECT	1000µF 20% 35V
				C1652	1-137-374-11	MYLAR	0.047µF 5% 50V
				C1669	1-164-625-11	CERAMIC	680pF 10% 500V
				C1670	1-164-625-11	CERAMIC	680pF 10% 500V
				C1672	1-165-953-11	FILM	47000pF 3% 800V
RESISTOR							
R1845	1-249-441-11	CARBON	100K 5% 1/4W	C1680	1-117-228-71	MYLAR	2.2µF 10% 450V
R1846	1-249-441-11	CARBON	100K 5% 1/4W	C1815	1-129-718-00	FILM	0.022µF 5% 630V
R1847	1-249-441-11	CARBON	100K 5% 1/4W	C1816	1-102-244-00	CERAMIC	220pF 10% 500V
R1848	1-215-894-11	METAL OXIDE	2.2K 5% 2W	C1817	1-129-709-91	FILM	0.0039µF 5% 630V
R1849	1-215-923-00	METAL OXIDE	10K 5% 3W	C1818	1-164-645-11	CERAMIC	1000pF 10% 500V
R1850	1-215-923-00	METAL OXIDE	10K 5% 3W	C1819	1-102-244-00	CERAMIC	220pF 10% 500V
R1851	1-215-922-11	METAL OXIDE	6.8K 5% 3W	C1820	1-109-954-11	ELECT	0.47µF 20% 160V
R1852	1-215-922-11	METAL OXIDE	6.8K 5% 3W				
TRANSFORMER				CONNECTOR			
T1801	1-433-533-12	TRANSFORMER, FERRITE (DFT)		* CN1600	1-580-843-11	PIN, CONNECTOR (POWER)	
GD							
*	A-1410-927-A	GD (COM) BOARD, MOUNTED					
		(KV-29FA310LN/29FA310LS ONLY)					
	1-900-807-96	WIRE ASSY, G2 LEAD 180					
	4-382-854-11	SCREW (M3X10), P, SW (+)					
CAPACITOR				DIODE			
C1602	1-137-150-11	FILM	0.01µF 5% 100V	D1611	8-719-062-40	DIODE	D4SBL20µF3
C1604	1-164-625-11	CERAMIC	680pF 10% 500V	D1614	8-719-057-52	DIODE	EZ0150AV1
C1609	1-164-625-11	CERAMIC	680pF 10% 500V	D1615	8-719-062-40	DIODE	D4SBL20µF3
C1616	1-126-943-11	ELECT	2200µF 20% 25V	D1618	8-719-979-64	DIODE	µF4005PKG23
C1617	1-123-024-21	ELECT	33µF 160V	D1621	6-500-181-01	DIODE	MA6D50
C1620	1-137-150-11	FILM	0.01µF 5% 100V	D1631	6-500-175-01	DIODE	1E3-TB
C1624	1-107-636-11	ELECT	10µF 20% 160V	D1809	8-719-110-41	DIODE	RD15ESB2
C1633	1-136-479-11	FILM	0.001µF 5% 100V	D1810	8-719-970-87	DIODE	ERA38-06
C1634	1-126-964-11	ELECT	10µF 20% 50V	D1811	8-719-970-87	DIODE	ERA38-06
C1635	1-126-963-11	ELECT	4.7µF 20% 50V	D1812	8-719-081-93	DIODE	1N4937/23
C1637	1-136-165-00	FILM	0.1µF 5% 50V	FERRITE BEAD			
C1642	1-126-969-11	ELECT	220µF 20% 50V	FB1602	1-410-397-21	FERRITE	1.1µH
				FB1604	1-410-397-21	FERRITE	1.1µH
				FB1609	1-410-397-21	FERRITE	1.1µH
				FB1616	1-410-397-21	FERRITE	1.1µH
				FB1617	1-410-397-21	FERRITE	1.1µH

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
IC						R1660	1-249-429-11	CARBON	10K	5%	1/4W
IC1600	6-705-810-01	IC	MCZ3001DB			R1667	1-249-429-11	CARBON	10K	5%	1/4W
IC1601	8-749-012-13	IC	DM-58			R1668	1-249-418-11	CARBON	1.2K	5%	1/4W
COIL						R1670	1-249-429-11	CARBON	10K	5%	1/4W
L1600	1-406-977-21	INDUCTOR	100µH			R1671	1-243-979-71	METAL OXIDE	0.1	5%	2W
L1604	1-412-525-31	INDUCTOR	10µH			R1672	1-243-979-71	METAL OXIDE	0.1	5%	2W
L1608	1-412-529-81	INDUCTOR	22µH			R1845	1-249-441-11	CARBON	100K	5%	1/4W
L1805	1-406-677-11	INDUCTOR	10MH			R1846	1-249-441-11	CARBON	100K	5%	1/4W
PHOTO COUPLER						R1847	1-249-441-11	CARBON	100K	5%	1/4W
PH1602	8-749-924-35	PHOTO COUPLER	ON3171-R			R1848	1-215-894-11	METAL OXIDE	2.2K	5%	2W
IC LINK						R1849	1-215-923-00	METAL OXIDE	10K	5%	3W
PS1401	1-576-337-21	IC LINK	2.7A	50V		R1850	1-215-923-00	METAL OXIDE	10K	5%	3W
TRANSISTOR						R1851	1-215-922-11	METAL OXIDE	6.8K	5%	3W
Q1600	8-729-052-32	TRANSISTOR	IRFIB7N50A-LF31			R1852	1-215-922-11	METAL OXIDE	6.8K	5%	3W
Q1601	8-729-052-32	TRANSISTOR	IRFIB7N50A-LF31			TRANSFORMER					
Q1810	8-729-043-95	TRANSISTOR	2SC3840(3)			 T1604	1-437-606-12	COVERTER TRANSFORMER			
RESISTOR						T1801	1-433-533-12	TRANSFORMER, FERRITE (DFT)			
 R1615	1-202-933-61	FUSIBLE	0.1	10%	1/2W	HR					
R1616	1-249-418-11	CARBON	1.2K	5%	1/4W	* A-1415-629-A HR (VAR) BOARD, MOUNTED					
R1617	1-249-417-11	CARBON	1K	5%	1/4W	(KV-29FA310LN/29FA310LS ONLY)					
R1619	1-249-377-11	CARBON	0.47	5%	1/4W	CAPACITOR					
R1620	1-215-857-71	METAL OXIDE	10	5%	1W	C3001	1-104-665-11	ELECT	100µF	20%	25V
R1625	1-249-413-11	CARBON	470	5%	1/4W	CONNECTOR					
R1626	1-215-443-00	METAL	8.2K	1%	1/4W	* CN3001	1-564-521-11	PLUG, CONNECTOR	6P		
R1629	1-245-478-21	METAL	470K	1%	1/4W	DIODE					
R1630	1-245-478-21	METAL	470K	1%	1/4W	D3001	8-719-109-89	DIODE	RD5.6ESB2		
R1631	1-215-449-00	METAL	15K	1%	1/4W	D3002	8-719-057-09	DIODE	LNJ801LPDJA		
R1632	1-215-397-00	METAL	100	1%	1/4W	IC					
R1640	1-249-417-11	CARBON	1K	5%	1/4W	IC3001	8-742-211-20	HYB IC	SBX3071-71		
R1647	1-215-396-00	METAL	91	1%	1/4W						
R1650	1-249-441-11	CARBON	100K	5%	1/4W						
R1651	1-249-441-11	CARBON	100K	5%	1/4W						
R1658	1-249-393-11	CARBON	10	5%	1/4W						
R1659	1-249-393-11	CARBON	10	5%	1/4W						



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
RESISTOR						R1009	1-249-421-11	CARBON	2.2K	5%	1/4W
R3001	1-249-417-11	CARBON	1K	5%	1/4W	R1010	1-249-416-11	CARBON	820	5%	1/4W
R3014	1-247-807-31	CARBON	100	5%	1/4W	R1011	1-249-415-11	CARBON	680	5%	1/4W
SWITCH						R1201	1-249-419-11	CARBON	1.5K	5%	1/4W
S3006	1-786-338-12	SWITCH, TACTILE				R1202	1-249-421-11	CARBON	2.2K	5%	1/4W
CAPACITOR						R1203	1-249-427-11	CARBON	6.8K	5%	1/4W
C1001	1-104-665-11	ELECT	100µF	20%	25V	R1234	1-247-804-11	CARBON	75	5%	1/4W
C1234	1-126-960-11	ELECT	1µF	20%	50V	R1235	1-249-409-11	CARBON	220	5%	1/4W
C1235	1-126-960-11	ELECT	1µF	20%	50V	R1236	1-249-441-11	CARBON	100K	5%	1/4W
DIODE						R1237	1-249-409-11	CARBON	220	5%	1/4W
D1001	8-719-929-15	DIODE	HZS9.1NB2			R1238	1-249-441-11	CARBON	100K	5%	1/4W
D1002	8-719-070-80	DIODE	LNK0120022G			SWITCH					
D1003	8-719-929-15	DIODE	HZS9.1NB2			S1001	1-692-431-21	SWITCH, TACTILE			
D1004	8-719-109-89	DIODE	RD5.6ESB2			S1002	1-692-431-21	SWITCH, TACTILE			
D1005	8-719-109-89	DIODE	RD5.6ESB2			S1003	1-692-431-21	SWITCH, TACTILE			
D1233	8-719-108-12	DIODE	RD9.1EW			S1004	1-692-431-21	SWITCH, TACTILE			
D1235	8-719-108-12	DIODE	RD9.1EW			S1005	1-692-431-21	SWITCH, TACTILE			
D1236	8-719-108-12	DIODE	RD9.1EW			S1006	1-692-431-21	SWITCH, TACTILE			
IC						S1007	1-762-816-11	SWITCH, TACTILE			
IC1001	8-742-212-20	HYB IC	SBX3081-71			S1008	1-762-816-11	SWITCH, TACTILE			
JACK						DIODE					
J1231	1-794-048-11	JACK, PIN 3P				C2234	1-137-194-81	FILM	0.47µF	5%	50V
RESISTOR						C2235	1-137-194-81	FILM	0.47µF	5%	50V
R1004	1-249-417-11	CARBON	1K	5%	1/4W	JACK					
R1007	1-247-807-31	CARBON	100	5%	1/4W	J2231	1-794-048-11	JACK, PIN 3P			
R1008	1-249-427-11	CARBON	6.8K	5%	1/4W						

HS

* **A-1415-674-A HS BOARD, MOUNTED**
(ALL EXCEPT KV-29FA310LN/29FA310LS)

HU

* **A-1415-631-A HU (VAR) BOARD, MOUNTED**



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
RESISTOR						C2414	1-126-963-11	ELECT	4.7μF	20%	50V
R1001	1-249-427-11	CARBON	6.8K	5%	1/4W	C2415	1-126-967-11	ELECT	47μF	20%	50V
R1002	1-249-421-11	CARBON	2.2K	5%	1/4W	C2416	1-164-172-11	CERAMIC CHIP	0.0056μF	10%	25V
R1003	1-249-419-11	CARBON	1.5K	5%	1/4W	C2417	1-162-968-11	CERAMIC CHIP	0.0047μF	10%	50V
R2008	1-249-427-11	CARBON	6.8K	5%	1/4W	C2418	1-125-891-11	CERAMIC CHIP	0.47μF	10%	10V
R2009	1-249-421-11	CARBON	2.2K	5%	1/4W	C2419	1-127-715-91	CERAMIC CHIP	0.22μF	10%	16V
R2010	1-249-416-11	CARBON	820	5%	1/4W	C2420	1-126-959-11	ELECT	0.47μF	20%	50V
R2011	1-249-415-11	CARBON	680	5%	1/4W	C2421	1-126-959-11	ELECT	0.47μF	20%	50V
R2235	1-249-409-11	CARBON	220	5%	1/4W	C2422	1-127-715-91	CERAMIC CHIP	0.22μF	10%	16V
R2236	1-249-441-11	CARBON	100K	5%	1/4W	C2423	1-165-176-11	CERAMIC CHIP	0.047μF	10%	16V
R2237	1-249-409-11	CARBON	220	5%	1/4W	C2424	1-162-969-11	CERAMIC CHIP	0.0068μF	10%	25V
R2238	1-249-441-11	CARBON	100K	5%	1/4W	C2425	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
R2240	1-247-804-11	CARBON	75	5%	1/4W	C2426	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
SWITCH						C2427	1-126-947-11	ELECT	47μF	20%	35V
S1007	1-762-816-11	SWITCH, TACTILE				C2428	1-126-943-11	ELECT	2200μF	20%	25V
S1008	1-762-816-11	SWITCH, TACTILE				C2429	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
S2001	1-692-431-21	SWITCH, TACTILE				C2430	1-126-960-11	ELECT	1μF	20%	50V
S2002	1-692-431-21	SWITCH, TACTILE				C2431	1-126-963-11	ELECT	4.7μF	20%	50V
S2003	1-692-431-21	SWITCH, TACTILE				C2432	1-126-963-11	ELECT	4.7μF	20%	50V
S2004	1-692-431-21	SWITCH, TACTILE				C2433	1-127-715-91	CERAMIC CHIP	0.22μF	10%	16V
S2005	1-692-431-21	SWITCH, TACTILE				C2434	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
CAPACITOR						C2435	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C2401	1-130-495-00	MYLAR	0.1μF	5%	50V	C2436	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C2402	1-130-495-00	MYLAR	0.1μF	5%	50V	C2437	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C2403	1-126-964-11	ELECT	10μF	20%	50V	C2438	1-164-227-11	CERAMIC CHIP	0.022μF	10%	25V
C2404	1-162-968-11	CERAMIC CHIP	0.0047μF	10%	50V	C2439	1-164-227-11	CERAMIC CHIP	0.022μF	10%	25V
C2405	1-126-965-91	ELECT	22μF	20%	50V	C2440	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C2406	1-126-964-11	ELECT	10μF	20%	50V	C2441	1-115-412-11	CERAMIC CHIP	680pF	5%	25V
C2407	1-126-964-11	ELECT	10μF	20%	50V	C2442	1-165-176-11	CERAMIC CHIP	0.047μF	10%	16V
C2408	1-162-969-11	CERAMIC CHIP	0.0068μF	10%	25V	C2443	1-115-412-11	CERAMIC CHIP	680pF	5%	25V
C2410	1-126-969-11	ELECT	220μF	20%	50V	C2444	1-165-176-11	CERAMIC CHIP	0.047μF	10%	16V
C2411	1-126-965-91	ELECT	22μF	20%	50V	C2445	1-126-965-91	ELECT	22μF	20%	50V
C2412	1-137-194-81	FILM	0.47μF	5%	50V	C2446	1-130-495-00	MYLAR	0.1μF	5%	50V
C2413	1-100-120-51	ELECT	1000μF	20%	35V	C2447	1-130-495-00	MYLAR	0.1μF	5%	50V
						C2448	1-137-190-91	FILM	0.22μF	5%	50V
						C2449	1-165-176-11	CERAMIC CHIP	0.047μF	10%	16V
						C2450	1-126-963-11	ELECT	4.7μF	20%	50V
						C2451	1-162-967-11	CERAMIC CHIP	0.0033μF	10%	50V
						C2452	1-164-677-11	CERAMIC CHIP	0.033μF	10%	16V
						C2453	1-162-968-11	CERAMIC CHIP	0.0047μF	10%	50V
						C2454	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
						C2455	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
						C2456	1-126-963-11	ELECT	4.7μF	20%	50V
						C2457	1-126-963-11	ELECT	4.7μF	20%	50V



* **A-1410-921-A K BOARD, MOUNTED**
(KV-29FA310LN/29FA310LS ONLY)

4-382-854-11 SCREW (M3X10), P, SW (+)



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C2458	1-126-963-11	ELECT	4.7μF	20%	50V	DIODE					
C2459	1-126-965-91	ELECT	22μF	20%	50V	D2400	8-719-404-50	DIODE	MA111-TX		
C2460	1-137-194-81	FILM	0.47μF	5%	50V	D2401	8-719-070-60	DIODE	PDZ7.5B-115		
C2461	1-126-963-11	ELECT	4.7μF	20%	50V	IC					
C2462	1-126-963-11	ELECT	4.7μF	20%	50V	IC2401	6-705-054-01	IC	TDA8947J		
C2463	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	IC2402	8-759-100-96	IC	UPC4558G2		
C2464	1-126-960-11	ELECT	1μF	20%	50V	IC2403	6-706-034-01	IC	NJW1164M-TE2		
C2465	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	IC2404	8-759-165-01	IC	NJM2177AFG1		
C2466	1-162-968-11	CERAMIC CHIP	0.0047μF	10%	50V	IC2405	8-759-686-15	IC	NJM2180M (TE2)		
C2467	1-164-677-11	CERAMIC CHIP	0.033μF	10%	16V	CHIP CONDUCTOR					
C2468	1-162-967-11	CERAMIC CHIP	0.0033μF	10%	50V	JR2401	1-216-864-11	SHORT CHIP			
C2469	1-130-495-00	MYLAR	0.1μF	5%	50V	JR2402	1-216-864-11	SHORT CHIP			
C2470	1-162-968-11	CERAMIC CHIP	0.0047μF	10%	50V	JR2410	1-216-864-11	SHORT CHIP			
C2471	1-162-968-11	CERAMIC CHIP	0.0047μF	10%	50V	JR2411	1-216-864-11	SHORT CHIP			
C2472	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	JR2420	1-216-864-11	SHORT CHIP			
C2473	1-126-964-11	ELECT	10μF	20%	50V	JR2421	1-216-864-11	SHORT CHIP			
C2474	1-126-964-11	ELECT	10μF	20%	50V	IC LINK					
C2475	1-126-968-11	ELECT	100μF	20%	50V	PS2401	1-576-337-21	IC LINK	2.7A	50V	
C2476	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	TRANSISTOR					
C2477	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	Q2400	8-729-120-28	TRANSISTOR	2SC1623-L5L6		
C2478	1-162-968-11	CERAMIC CHIP	0.0047μF	10%	50V	Q2401	8-729-120-28	TRANSISTOR	2SC1623-L5L6		
C2479	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	Q2410	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX		
C2480	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	Q2411	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX		
C2481	1-162-968-11	CERAMIC CHIP	0.0047μF	10%	50V	Q2412	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX		
C2482	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	Q2413	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX		
C2484	1-130-495-00	MYLAR	0.1μF	5%	50V	Q2414	8-729-422-27	TRANSISTOR	2SD601A-Q		
C2485	1-130-495-00	MYLAR	0.1μF	5%	50V	Q2418	8-729-120-28	TRANSISTOR	2SC1623-L5L6		
C2486	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	Q2419	8-729-120-28	TRANSISTOR	2SC1623-L5L6		
C2487	1-127-715-91	CERAMIC CHIP	0.22μF	10%	16V	RESISTOR					
C2488	1-162-968-11	CERAMIC CHIP	0.0047μF	10%	50V	R2401	1-216-845-11	METAL CHIP	100K	5%	1/10W
C2489	1-127-715-91	CERAMIC CHIP	0.22μF	10%	16V	R2402	1-216-833-11	METAL CHIP	10K	5%	1/10W
C2490	1-104-665-11	ELECT	100μF	20%	25V	R2403	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
C2493	1-126-935-11	ELECT	470μF	20%	16V	R2404	1-216-835-11	METAL CHIP	15K	5%	1/10W
C2494	1-126-935-11	ELECT	470μF	20%	16V	R2405	1-218-895-11	METAL CHIP	100K	0.50%	1/10W
C2495	1-126-935-11	ELECT	470μF	20%	16V	R2406	1-218-714-11	METAL CHIP	8.2K	0.50%	1/10W
C2496	1-126-935-11	ELECT	470μF	20%	16V	R2407	1-216-835-11	METAL CHIP	15K	5%	1/10W
C2499	1-164-315-11	CERAMIC CHIP	470pF	5%	50V						
CONNECTOR											
*	CN2401	1-564-510-11	PLUG, CONNECTOR	7P							
*	CN2402	1-564-508-11	PLUG, CONNECTOR	5P							



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R2408	1-218-868-11	METAL CHIP	7.5K	0.50%	1/10W	R2454	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2409	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2455	1-216-809-11	METAL CHIP	100	5%	1/10W
R2410	1-216-835-11	METAL CHIP	15K	5%	1/10W	R2456	1-216-809-11	METAL CHIP	100	5%	1/10W
R2411	1-216-841-11	METAL CHIP	47K	5%	1/10W	R2457	1-216-864-11	SHORT CHIP			
R2412	1-218-868-11	METAL CHIP	7.5K	0.50%	1/10W	R2458	1-216-861-11	METAL CHIP	2.2M	5%	1/10W
R2413	1-216-841-11	METAL CHIP	47K	5%	1/10W	R2459	1-216-853-11	METAL CHIP	470K	5%	1/10W
R2414	1-216-835-11	METAL CHIP	15K	5%	1/10W	R2460	1-218-714-11	METAL CHIP	8.2K	0.50%	1/10W
R2415	1-220-397-11	METAL CHIP	4.7M	5%	1/10W	R2461	1-216-839-11	METAL CHIP	33K	5%	1/10W
R2416	1-216-837-11	METAL CHIP	22K	5%	1/10W	R2462	1-218-296-11	METAL CHIP	75K	5%	1/10W
R2417	1-216-837-11	METAL CHIP	22K	5%	1/10W	R2463	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R2418	1-216-809-11	METAL CHIP	100	5%	1/10W	R2464	1-218-331-11	METAL CHIP	51K	5%	1/10W
R2419	1-216-809-11	METAL CHIP	100	5%	1/10W	R2465	1-216-824-11	METAL CHIP	1.8K	5%	1/10W
R2420	1-216-837-11	METAL CHIP	22K	5%	1/10W	R2466	1-218-866-11	METAL CHIP	6.2K	0.50%	1/10W
R2421	1-216-837-11	METAL CHIP	22K	5%	1/10W	R2467	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2422	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2468	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2423	1-216-840-11	METAL CHIP	39K	5%	1/10W	R2469	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2424	1-216-840-11	METAL CHIP	39K	5%	1/10W	R2470	1-216-840-11	METAL CHIP	39K	5%	1/10W
R2425	1-216-840-11	METAL CHIP	39K	5%	1/10W	R2471	1-216-824-11	METAL CHIP	1.8K	5%	1/10W
R2426	1-216-817-11	METAL CHIP	470	5%	1/10W	R2472	1-218-331-11	METAL CHIP	51K	5%	1/10W
R2427	1-216-817-11	METAL CHIP	470	5%	1/10W	R2473	1-216-861-11	METAL CHIP	2.2M	5%	1/10W
R2428	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R2474	1-216-839-11	METAL CHIP	33K	5%	1/10W
R2429	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R2475	1-218-296-11	METAL CHIP	75K	5%	1/10W
R2430	1-216-809-11	METAL CHIP	100	5%	1/10W	R2476	1-216-835-11	METAL CHIP	15K	5%	1/10W
R2431	1-216-809-11	METAL CHIP	100	5%	1/10W	R2477	1-216-835-11	METAL CHIP	15K	5%	1/10W
R2432	1-216-864-11	SHORT CHIP				R2478	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2433	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2479	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2434	1-218-895-11	METAL CHIP	100K	0.50%	1/10W	R2480	1-218-331-11	METAL CHIP	51K	5%	1/10W
R2435	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2481	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R2436	1-216-821-11	METAL CHIP	1K	5%	1/10W	R2482	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2437	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2483	1-216-837-11	METAL CHIP	22K	5%	1/10W
R2438	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2484	1-216-828-11	METAL CHIP	3.9K	5%	1/10W
R2439	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2485	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2440	1-216-837-11	METAL CHIP	22K	5%	1/10W	R2486	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2441	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2487	1-218-717-11	METAL CHIP	11K	0.50%	1/10W
R2442	1-216-821-11	METAL CHIP	1K	5%	1/10W	R2488	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R2443	1-216-841-11	METAL CHIP	47K	5%	1/10W	R2489	1-216-835-11	METAL CHIP	15K	5%	1/10W
R2446	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2490	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2447	1-216-821-11	METAL CHIP	1K	5%	1/10W	R2491	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2448	1-216-845-11	METAL CHIP	100K	5%	1/10W	R2492	1-216-837-11	METAL CHIP	22K	5%	1/10W
R2449	1-216-841-11	METAL CHIP	47K	5%	1/10W	R2493	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2450	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2494	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2451	1-216-845-11	METAL CHIP	100K	5%	1/10W	R2495	1-218-292-11	METAL CHIP	20K	5%	1/10W
R2452	1-216-821-11	METAL CHIP	1K	5%	1/10W	R2496	1-216-847-11	METAL CHIP	150K	5%	1/10W
R2453	1-216-841-11	METAL CHIP	47K	5%	1/10W	R2497	1-216-823-11	METAL CHIP	1.5K	5%	1/10W



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES																																																																																																																																																																																																																																																														
R2498	1-216-837-11	METAL CHIP	22K	5%	1/10W	DIODE																																																																																																																																																																																																																																																																	
R2499	1-216-837-11	METAL CHIP	22K	5%	1/10W	D2801	8-719-109-89	DIODE	RD5.6ESB2																																																																																																																																																																																																																																																														
R2500	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	D2802	8-719-991-33	DIODE	1SS133T-77																																																																																																																																																																																																																																																														
R2501	1-216-837-11	METAL CHIP	22K	5%	1/10W	D2804	8-719-302-43	DIODE	EL1Z																																																																																																																																																																																																																																																														
R2502	1-216-837-11	METAL CHIP	22K	5%	1/10W	D2805	8-719-991-33	DIODE	1SS133T-77																																																																																																																																																																																																																																																														
R2503	1-216-837-11	METAL CHIP	22K	5%	1/10W	D2806	8-719-991-33	DIODE	1SS133T-77																																																																																																																																																																																																																																																														
R2504	1-216-837-11	METAL CHIP	22K	5%	1/10W	D2807	8-719-210-21	DIODE	11EQS04																																																																																																																																																																																																																																																														
R2505	1-216-841-11	METAL CHIP	47K	5%	1/10W	D2808	8-719-991-33	DIODE	1SS133T-77																																																																																																																																																																																																																																																														
R2507	1-216-809-11	METAL CHIP	100	5%	1/10W	D2813	8-719-991-33	DIODE	1SS133T-77																																																																																																																																																																																																																																																														
R2519	1-216-821-11	METAL CHIP	1K	5%	1/10W	IC																																																																																																																																																																																																																																																																	
R2520	1-216-821-11	METAL CHIP	1K	5%	1/10W	IC2801	6-701-598-01	IC	UPC5023CS-184																																																																																																																																																																																																																																																														
R2521	1-216-833-11	METAL CHIP	10K	5%	1/10W	COIL																																																																																																																																																																																																																																																																	
R2522	1-216-841-11	METAL CHIP	47K	5%	1/10W	L2801	1-406-989-21	INDUCTOR	10MH																																																																																																																																																																																																																																																														
R2523	1-216-841-11	METAL CHIP	47K	5%	1/10W	L2802	1-419-633-11	INDUCTOR	10MH																																																																																																																																																																																																																																																														
R2524	1-216-864-11	SHORT CHIP				L2803	1-412-529-11	INDUCTOR	22μH																																																																																																																																																																																																																																																														
<div style="display: flex; align-items: center; margin-top: 20px;"> <div style="border: 1px solid black; padding: 2px 5px; margin-right: 10px;">V</div> <div> <p>* A-1410-924-A V BOARD, MOUNTED</p> <p>CAPACITOR</p> <table border="0"> <tr> <td>C2801</td> <td>1-128-578-11</td> <td>ELECT</td> <td>1μF</td> <td>20%</td> <td>100V</td> <td colspan="6">TRANSISTOR</td> </tr> <tr> <td>C2802</td> <td>1-126-964-11</td> <td>ELECT</td> <td>10μF</td> <td>20%</td> <td>50V</td> <td>Q2801</td> <td>8-729-422-27</td> <td>TRANSISTOR</td> <td colspan="3">2SD601A-Q</td> </tr> <tr> <td>C2803</td> <td>1-137-378-11</td> <td>MYLAR</td> <td>0.22μF</td> <td>5%</td> <td>50V</td> <td>Q2802</td> <td>8-729-424-02</td> <td>TRANSISTOR</td> <td colspan="3">2SB709A-QRS-TX</td> </tr> <tr> <td>C2804</td> <td>1-137-378-11</td> <td>MYLAR</td> <td>0.22μF</td> <td>5%</td> <td>50V</td> <td>Q2803</td> <td>8-729-424-02</td> <td>TRANSISTOR</td> <td colspan="3">2SB709A-QRS-TX</td> </tr> <tr> <td>C2805</td> <td>1-129-745-61</td> <td>FILM</td> <td>0.033μF</td> <td>5%</td> <td>400V</td> <td>Q2804</td> <td>8-729-424-02</td> <td>TRANSISTOR</td> <td colspan="3">2SB709A-QRS-TX</td> </tr> <tr> <td>C2808</td> <td>1-162-970-11</td> <td>CERAMIC CHIP</td> <td>0.01μF</td> <td>10%</td> <td>25V</td> <td>Q2805</td> <td>6-550-106-01</td> <td>TRANSISTOR</td> <td colspan="3">KTB764</td> </tr> <tr> <td>C2809</td> <td>1-128-934-91</td> <td>CERAMIC CHIP</td> <td>0.33μF</td> <td>20%</td> <td>10V</td> <td>Q2807</td> <td>8-729-931-45</td> <td>TRANSISTOR</td> <td colspan="3">IRF614</td> </tr> <tr> <td>C2810</td> <td>1-130-495-00</td> <td>MYLAR</td> <td>0.1μF</td> <td>5%</td> <td>50V</td> <td>Q2808</td> <td>6-550-106-01</td> <td>TRANSISTOR</td> <td colspan="3">KTB764</td> </tr> <tr> <td>C2811</td> <td>1-129-725-00</td> <td>FILM</td> <td>0.082μF</td> <td>5%</td> <td>400V</td> <td>Q2812</td> <td>8-729-026-39</td> <td>TRANSISTOR</td> <td colspan="3">2SA933AS-QT</td> </tr> <tr> <td>C2812</td> <td>1-162-970-11</td> <td>CERAMIC CHIP</td> <td>0.01μF</td> <td>10%</td> <td>25V</td> <td colspan="6">RESISTOR</td> </tr> <tr> <td>C2813</td> <td>1-126-933-11</td> <td>ELECT</td> <td>100μF</td> <td>20%</td> <td>16V</td> <td>R2800</td> <td>1-216-837-11</td> <td>METAL CHIP</td> <td>22K</td> <td>5%</td> <td>1/10W</td> </tr> <tr> <td>C2821</td> <td>1-162-970-11</td> <td>CERAMIC CHIP</td> <td>0.01μF</td> <td>10%</td> <td>25V</td> <td>R2801</td> <td>1-216-841-11</td> <td>METAL CHIP</td> <td>47K</td> <td>5%</td> <td>1/10W</td> </tr> <tr> <td>C2823</td> <td>1-130-967-00</td> <td>FILM</td> <td>0.0027μF</td> <td>5%</td> <td>50V</td> <td>R2802</td> <td>1-216-833-11</td> <td>METAL CHIP</td> <td>10K</td> <td>5%</td> <td>1/10W</td> </tr> <tr> <td>C2824</td> <td>1-165-176-11</td> <td>CERAMIC CHIP</td> <td>0.047μF</td> <td>10%</td> <td>16V</td> <td>R2803</td> <td>1-216-837-11</td> <td>METAL CHIP</td> <td>22K</td> <td>5%</td> <td>1/10W</td> </tr> <tr> <td>C2826</td> <td>1-162-927-11</td> <td>CERAMIC CHIP</td> <td>100pF</td> <td>5%</td> <td>50V</td> <td>R2804</td> <td>1-216-833-11</td> <td>METAL CHIP</td> <td>10K</td> <td>5%</td> <td>1/10W</td> </tr> <tr> <td>C2862</td> <td>1-126-964-11</td> <td>ELECT</td> <td>10μF</td> <td>20%</td> <td>50V</td> <td>R2805</td> <td>1-216-829-11</td> <td>METAL CHIP</td> <td>4.7K</td> <td>5%</td> <td>1/10W</td> </tr> <tr> <td colspan="12">CONNECTOR</td> </tr> <tr> <td>* CN2901</td> <td>1-564-507-11</td> <td>PLUG, CONNECTOR</td> <td colspan="3">4P</td> <td>R2807</td> <td>1-216-827-11</td> <td>METAL CHIP</td> <td>3.3K</td> <td>5%</td> <td>1/10W</td> </tr> <tr> <td>* CN2902</td> <td>1-770-723-11</td> <td>CONNECTOR, BOARD TO BOARD</td> <td colspan="3">8P</td> <td>R2808</td> <td>1-216-833-11</td> <td>METAL CHIP</td> <td>10K</td> <td>5%</td> <td>1/10W</td> </tr> <tr> <td>* CN2903</td> <td>1-564-506-11</td> <td>PLUG, CONNECTOR</td> <td colspan="3">3P</td> <td>R2809</td> <td>1-216-837-11</td> <td>METAL CHIP</td> <td>22K</td> <td>5%</td> <td>1/10W</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>R2811</td> <td>1-249-393-11</td> <td>CARBON</td> <td>10</td> <td>5%</td> <td>1/4W</td> </tr> </table></div></div>												C2801	1-128-578-11	ELECT	1μF	20%	100V	TRANSISTOR						C2802	1-126-964-11	ELECT	10μF	20%	50V	Q2801	8-729-422-27	TRANSISTOR	2SD601A-Q			C2803	1-137-378-11	MYLAR	0.22μF	5%	50V	Q2802	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX			C2804	1-137-378-11	MYLAR	0.22μF	5%	50V	Q2803	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX			C2805	1-129-745-61	FILM	0.033μF	5%	400V	Q2804	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX			C2808	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	Q2805	6-550-106-01	TRANSISTOR	KTB764			C2809	1-128-934-91	CERAMIC CHIP	0.33μF	20%	10V	Q2807	8-729-931-45	TRANSISTOR	IRF614			C2810	1-130-495-00	MYLAR	0.1μF	5%	50V	Q2808	6-550-106-01	TRANSISTOR	KTB764			C2811	1-129-725-00	FILM	0.082μF	5%	400V	Q2812	8-729-026-39	TRANSISTOR	2SA933AS-QT			C2812	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	RESISTOR						C2813	1-126-933-11	ELECT	100μF	20%	16V	R2800	1-216-837-11	METAL CHIP	22K	5%	1/10W	C2821	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	R2801	1-216-841-11	METAL CHIP	47K	5%	1/10W	C2823	1-130-967-00	FILM	0.0027μF	5%	50V	R2802	1-216-833-11	METAL CHIP	10K	5%	1/10W	C2824	1-165-176-11	CERAMIC CHIP	0.047μF	10%	16V	R2803	1-216-837-11	METAL CHIP	22K	5%	1/10W	C2826	1-162-927-11	CERAMIC CHIP	100pF	5%	50V	R2804	1-216-833-11	METAL CHIP	10K	5%	1/10W	C2862	1-126-964-11	ELECT	10μF	20%	50V	R2805	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	CONNECTOR												* CN2901	1-564-507-11	PLUG, CONNECTOR	4P			R2807	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	* CN2902	1-770-723-11	CONNECTOR, BOARD TO BOARD	8P			R2808	1-216-833-11	METAL CHIP	10K	5%	1/10W	* CN2903	1-564-506-11	PLUG, CONNECTOR	3P			R2809	1-216-837-11	METAL CHIP	22K	5%	1/10W							R2811	1-249-393-11	CARBON	10	5%	1/4W
C2801	1-128-578-11	ELECT	1μF	20%	100V	TRANSISTOR																																																																																																																																																																																																																																																																	
C2802	1-126-964-11	ELECT	10μF	20%	50V	Q2801	8-729-422-27	TRANSISTOR	2SD601A-Q																																																																																																																																																																																																																																																														
C2803	1-137-378-11	MYLAR	0.22μF	5%	50V	Q2802	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX																																																																																																																																																																																																																																																														
C2804	1-137-378-11	MYLAR	0.22μF	5%	50V	Q2803	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX																																																																																																																																																																																																																																																														
C2805	1-129-745-61	FILM	0.033μF	5%	400V	Q2804	8-729-424-02	TRANSISTOR	2SB709A-QRS-TX																																																																																																																																																																																																																																																														
C2808	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	Q2805	6-550-106-01	TRANSISTOR	KTB764																																																																																																																																																																																																																																																														
C2809	1-128-934-91	CERAMIC CHIP	0.33μF	20%	10V	Q2807	8-729-931-45	TRANSISTOR	IRF614																																																																																																																																																																																																																																																														
C2810	1-130-495-00	MYLAR	0.1μF	5%	50V	Q2808	6-550-106-01	TRANSISTOR	KTB764																																																																																																																																																																																																																																																														
C2811	1-129-725-00	FILM	0.082μF	5%	400V	Q2812	8-729-026-39	TRANSISTOR	2SA933AS-QT																																																																																																																																																																																																																																																														
C2812	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	RESISTOR																																																																																																																																																																																																																																																																	
C2813	1-126-933-11	ELECT	100μF	20%	16V	R2800	1-216-837-11	METAL CHIP	22K	5%	1/10W																																																																																																																																																																																																																																																												
C2821	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	R2801	1-216-841-11	METAL CHIP	47K	5%	1/10W																																																																																																																																																																																																																																																												
C2823	1-130-967-00	FILM	0.0027μF	5%	50V	R2802	1-216-833-11	METAL CHIP	10K	5%	1/10W																																																																																																																																																																																																																																																												
C2824	1-165-176-11	CERAMIC CHIP	0.047μF	10%	16V	R2803	1-216-837-11	METAL CHIP	22K	5%	1/10W																																																																																																																																																																																																																																																												
C2826	1-162-927-11	CERAMIC CHIP	100pF	5%	50V	R2804	1-216-833-11	METAL CHIP	10K	5%	1/10W																																																																																																																																																																																																																																																												
C2862	1-126-964-11	ELECT	10μF	20%	50V	R2805	1-216-829-11	METAL CHIP	4.7K	5%	1/10W																																																																																																																																																																																																																																																												
CONNECTOR																																																																																																																																																																																																																																																																							
* CN2901	1-564-507-11	PLUG, CONNECTOR	4P			R2807	1-216-827-11	METAL CHIP	3.3K	5%	1/10W																																																																																																																																																																																																																																																												
* CN2902	1-770-723-11	CONNECTOR, BOARD TO BOARD	8P			R2808	1-216-833-11	METAL CHIP	10K	5%	1/10W																																																																																																																																																																																																																																																												
* CN2903	1-564-506-11	PLUG, CONNECTOR	3P			R2809	1-216-837-11	METAL CHIP	22K	5%	1/10W																																																																																																																																																																																																																																																												
						R2811	1-249-393-11	CARBON	10	5%	1/4W																																																																																																																																																																																																																																																												



REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
R2815	1-215-862-11	METAL OXIDE	68 5% 1W			ACCESSORIES AND PACKING	
R2817	1-218-736-11	METAL CHIP	68K 0.50% 1/10W	*	4-041-259-05	BAG, PROTECTION	
R2818	1-216-809-11	METAL CHIP	100 5% 1/10W	*	4-102-073-01	CARTON, INDIVIDUAL (KV-29FA310LN/29FA310LS ONLY)	
R2819	1-216-841-11	METAL CHIP	47K 5% 1/10W	*	4-103-469-01	CARTON, INDIVIDUAL (KV-27FS120 ONLY)	
R2820	1-218-883-11	METAL CHIP	33K 0.50% 1/10W	*	4-103-471-01	CARTON, INDIVIDUAL (KV-29FS120LN/29FSLs ONLY)	
R2821	1-218-714-11	METAL CHIP	8.2K 0.50% 1/10W	*	4-088-874-01	CUSHION, LOWER (KV-27FS120/29FS120LN/29FS120LS ONLY)	
R2824	1-218-740-11	METAL CHIP	100K 0.50% 1/10W	*	4-102-075-01	CUSHION, LOWER (KV-29FA310LN/29FA310LS ONLY)	
R2825	1-216-845-11	METAL CHIP	100K 5% 1/10W	*	4-088-875-01	CUSHION, UPPER (KV-27FS120/29FS120LN/29FS120LS ONLY)	
R2826	1-249-421-11	CARBON	2.2K 5% 1/4W	*	4-102-074-01	CUSHION, UPPER (KV-29FA310LN/29FA310LS ONLY)	
R2827	1-218-708-11	METAL CHIP	4.7K 0.50% 1/10W	*	4-101-451-41	MANUAL, INSTRUCTION (KV-29FA310LN/29FA310LS ONLY)	
R2828	1-218-728-11	METAL CHIP	33K 0.50% 1/10W	*	4-101-456-21	MANUAL, INSTRUCTION (KV-27FS120 ONLY)	
R2829	1-216-853-11	METAL CHIP	470K 5% 1/10W	*	4-101-456-31	MANUAL, INSTRUCTION (KV-27FS120 CANADA ONLY)	
R2833	1-218-710-11	METAL CHIP	5.6K 0.50% 1/10W	*	4-101-456-41	MANUAL, INSTRUCTION (KV-29FS120LN/29FS120LS ONLY)	
R2834	1-218-704-11	METAL CHIP	3.3K 0.50% 1/10W	*			
R2837	1-218-871-11	METAL CHIP	10K 0.50% 1/10W	*			
R2840	1-218-702-11	METAL CHIP	2.7K 0.50% 1/10W				
R2841	1-218-706-11	METAL CHIP	3.9K 0.50% 1/10W				
R2842	1-218-700-11	METAL CHIP	2.2K 0.50% 1/10W				
R2855	1-218-706-11	METAL CHIP	3.9K 0.50% 1/10W				
R2856	1-218-871-11	METAL CHIP	10K 0.50% 1/10W				
R2857	1-218-875-11	METAL CHIP	15K 0.50% 1/10W				
R2860	1-218-716-11	METAL CHIP	10K 0.50% 1/10W				
R2864	1-218-668-11	METAL CHIP	100 0.50% 1/10W				
R2866	1-249-438-11	CARBON	56K 5% 1/4W				
R2870	1-216-825-11	METAL CHIP	2.2K 5% 1/10W				
R2876	1-216-821-11	METAL CHIP	1K 5% 1/10W				
R2890	1-218-728-11	METAL CHIP	33K 0.50% 1/10W				
R2893	1-216-839-11	METAL CHIP	33K 5% 1/10W				
						REMOTE COMMANDER	
					1-476-680-21	REMOTE COMMANDER (RM-Y180) (KV-29FA310LN/29FA310LS ONLY)	
					1-478-707-11	REMOTE COMMANDER (RM-Y195) (KV-27FS120/29FS120LN/29FS120LS ONLY)	
					4-978-977-11	BATTERY COVER (for RM-Y180/Y195)	

Sony Corporation
Sony Technology Center
Technical Services
Service Promotion Department

English
2004CJ74WEB-1
Printed in USA
© 2004.3

9-965-960-01

KV-27FS120/29FA310/29FS120

79

In an effort to reduce the size of this pdf file the tiled schematics are not attached to this Service Manual. To receive a complete set of the tiled schematics for this manual please submit a request to Nita Wardlaw at nita.wardlaw@am.sony.com.

SONY[®]

4-101-456-21

FD Trinitron
WEGA[®]

Operating Instructions

KV-27FS120

© 2004 by Sony Corporation

WARNING

To reduce the risk of fire or electric shock, do not expose the TV to rain or moisture.



This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Note to the CATV Installer

This reminder is provided to call the CATV system installer’s attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

SAFETY PRECAUTIONS

- Operate the TV only on 120 V AC.
- One blade of the power plug is wider than the other for safety purposes and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- If any liquid or solid object falls into the TV, unplug it and have it checked by qualified personnel before operating it further.

CAUTION

When using TV games, computers, and similar products with your TV, keep the brightness and contrast functions at low settings. If a fixed (non-moving) pattern is left on the screen for long periods of time at a high brightness or contrast setting, the image can be permanently imprinted onto the screen. Continuously watching the same channel can cause the imprint of station logos onto the TV screen. These types of imprints are not covered by your warranty because they are the results of misuse.



To reduce the risk of electric shock, do not use this polarized plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.



You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennas.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Protecting the TV

- To prevent internal heat build-up, do not block the ventilation openings.
- Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.

Note on Caption Vision

This television receiver provides display of television closed captioning in accordance with § 15.119 of the FCC rules. Use of this television for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster-cable company and/or program owner.

Owner’s Record

The model and serial numbers are located on the front cover of this manual and at the rear of your TV.

Trademarks and Copyrights

ENERGY STAR is a registered mark.



As an ENERGY STAR Partner, Sony has determined that this product or product model meets the ENERGY STAR® guidelines for energy efficiency.



“SRS and the (●) symbol are trademarks of SRS Labs, Inc.



Manufactured under license from BBE Sound, Inc. Licensed by BBE Sound, Inc. under USP 4638258, 5510752 and 5736897. BBE and BBE symbol are registered trademarks of BBE Sound, Inc.

WEGA, FD Trinitron, ClearEdge VM, Intelligent Picture, Steady Sound and Caption Vision are registered trademarks of Sony Corporation.

IMPORTANT SAFEGUARDS

For your protection, please read these instructions completely, and keep this manual for future reference. Carefully observe and comply with all warnings, cautions and instructions placed on the set, or described in the operating instructions or service manual.

WARNING

To guard against injury, the following basic safety precautions should be observed in the installation, use, and servicing of the set.

Use

Power Sources

This set should be operated only from the type of power source indicated on the serial/model plate. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, refer to the operating instructions.



Grounding or Polarization

This set may be equipped with a polarized alternating current line plug (a plug having one blade wider than other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

For the set with a polarized AC power cord plug


This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.



Alternate Warning


For the set with a three-wire grounding type AC plug

This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the grounding plug.



Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.



Always turn the set off when it is not to be used. When the set is left unattended and unused for long periods of time, unplug it from the wall outlet as a precaution against the possibility of an internal malfunction that could create a fire hazard.

Do not disconnect the antenna or the power cord during a heavy storm. Lightning may strike while you are holding the cable or cord, causing serious injury. Turn off your TV and wait for the weather to improve.

Object and Liquid Entry

Never push objects of any kind into the set through the cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.



Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

Do not place any objects, especially heavy objects, on top of the set. The object may fall from the set, causing injury.




Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.



If a snapping or popping sound from a TV set is continuous or frequent while the TV is operating, unplug the TV and consult your dealer or service technician. It is normal for some TV sets to make occasional snapping or popping sounds, particularly when being turned on or off.




Installation

Always use two or more people to lift or move the set. The set is heavy and the bottom surface is flat. Serious injury can result from trying to move the set by yourself alone, or from unsteady handling.

Install the set on a stable, level surface.

Water and Moisture

Do not use power-line operated sets near water — for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.



Accessories

Do not place the set on an unstable cart, stand, tripod, bracket, table, or shelf. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use




only a cart or stand recommended by the manufacturer for the specific model of TV. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.


Ventilation

The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Never cover the slots and openings with a cloth or other materials.



- Never block the slots and openings by placing the set on a bed, sofa, rug or other similar surface.



- Never place the set in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided.



- Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.



Power-Cord Protection

Do not allow anything to rest on or roll over the power cord, and do not place the set where the power cord is subject to wear or abuse.

Antennas

Outdoor Antenna Grounding


If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.

WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code (NEC) in USA and Section 54 of the Canadian Electrical Code in Canada provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Antenna Grounding According to the NEC

Antenna Grounding According to the National Electrical Code, ANSI/NFPA 70.

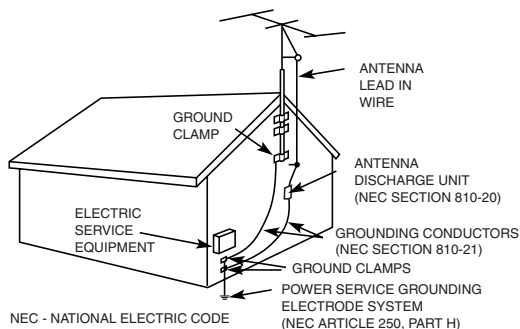

Lightning

For added protection for this television receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the receiver due to lightning and power-line surges.

Service


Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.




- If liquid has been spilled into the set or objects have fallen into the product.

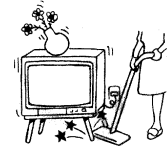


- If the set has been exposed to rain or water.



- If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.

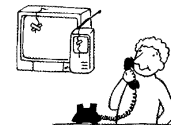

- If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.



- When the set exhibits a distinct change in performance — this indicates a need for service.

Servicing

Do not attempt to service the set yourself since opening the cabinet may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



Replacement Parts

When replacement parts are required, be sure the service technician certifies in writing that he has used replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.



Safety Check


Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition, and to so certify. When the set reaches the end of its useful life, improper disposal could result in a picture tube implosion. Ask a qualified service technician to dispose of the set.



Connecting Your TV

Read this section before setting up your TV for the first time. This section explains how to make the basic connections and how to connect optional equipment.

TV Rear Panel

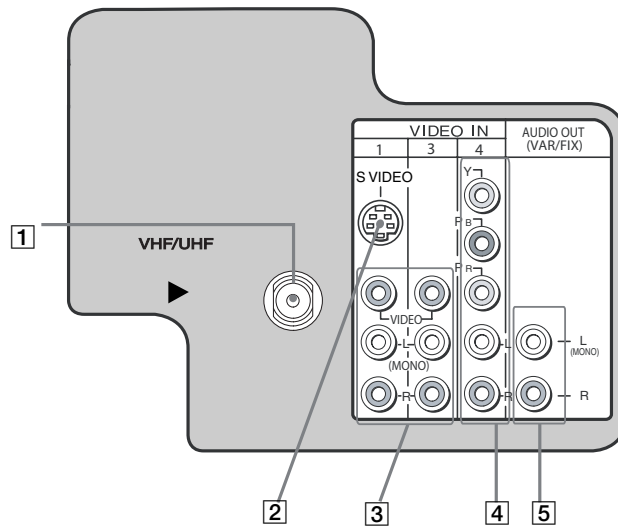


Jack	Description
1 VHF/UHF	This input connects to your VHF/UHF antenna or cable.
2 S VIDEO	This input connects to the S VIDEO OUT jack on your VCR or other video equipment that has S VIDEO. S VIDEO provides better picture quality than the VHF/UHF jacks or the video input jack. S VIDEO does not provide sound, so you still must connect the audio cables.
3 VIDEO/AUDIO L(MONO), R	This input connects to the AUDIO/VIDEO output jacks on your VCR or other video equipment. A third video input jack (VIDEO 2) is located on the front panel of the TV. These AUDIO/VIDEO input jacks provide better picture quality than the VHF/UHF jack.

4 Y, P_B, P_R/ L, R	This input connects to the component video Y, P _B , P _R , and AUDIO L, R jacks on your DVD player or digital set-top box (480i only).
5 AUDIO OUT (VAR/FIX) L(MONO), R	This jack connects to the Audio input jacks on your audio equipment. You can listen to your TV's audio through your stereo system.


Basic Connections

TV with Cable, Indoor, or Outdoor Antenna


Depending on the cable system available in your home, choose one of the connections below:

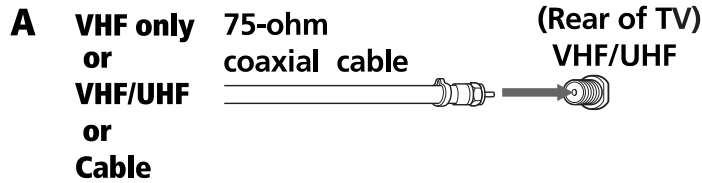

Use this to connect the TV to a cable system or an antenna with a 75-ohm cable (usually built into newer homes).

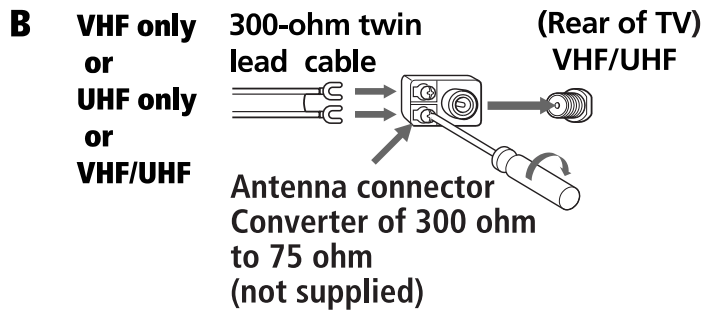


Use this to connect the TV to a dipole antenna, also known as a “rabbit ears” antenna (usually found in older homes).

 If you are connecting to an indoor or outdoor antenna, you may need to adjust the orientation of the antenna for the best reception.

Cable Box Connections

Some cable TV systems use scrambled or encoded signals that require a cable box to view all channels. If you subscribe to that kind of cable service, use this connection.


TV and Cable Box

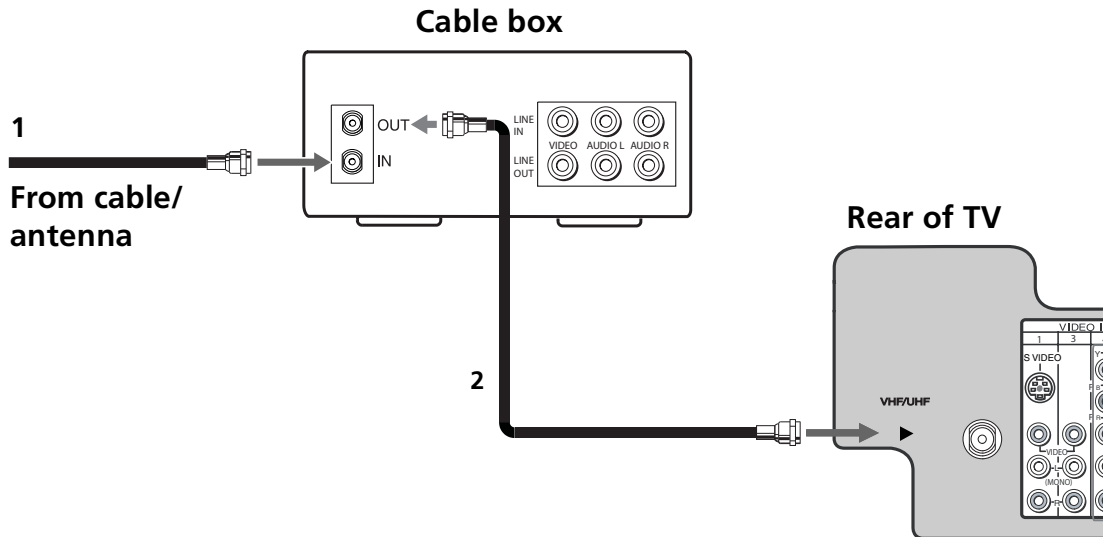

- 1** Connect the coaxial cable from your cable service to the IN jack on your cable box.
- 2** Connect a coaxial cable (not supplied) from the OUT jack on your cable box to the VHF/UHF jack on your TV.


Using your TV with this connection

This connection allows you to do the following:

- ❑ Program your Sony remote control to operate your cable box (see page 5).
- ❑ To activate your remote press  (FUNCTION button) to operate your cable box and then use the ⑩-⑨ buttons or CH+/- buttons to change the channels. To do this, first program your remote control, then use the Channel Fix feature to set your TV to channel 3 or 4 (see page 31).

Connecting Additional Equipment

Connecting a TV and VCR

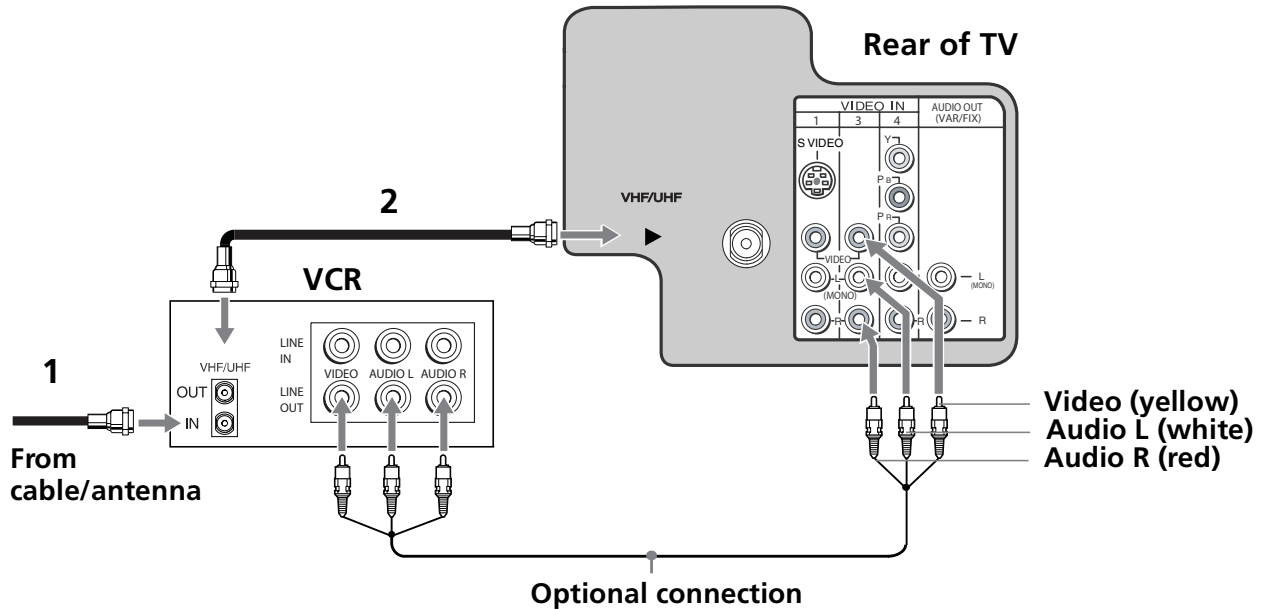



- 1 Connect the coaxial cable from your TV antenna or cable service to the IN jack on your VCR.
- 2 Connect a coaxial cable (not supplied) from the OUT jack on your VCR to the VHF/UHF jack on the TV.

Optional connection


- ❑ If your VCR is equipped with video outputs, you can get better picture quality by connecting audio/video cables (not supplied) from AUDIO/VIDEO OUT on your VCR to AUDIO/VIDEO IN on your TV.
- ❑ For better picture quality, use S VIDEO instead of the yellow video cable. S VIDEO does not provide sound, so you still must connect the audio cables.

Using your TV with this connection

This connection allows you to do the following:


- ❑ Program your Sony remote control to operate your VCR (see page 5).
- ❑ To activate your remote, press  (FUNCTION button) to operate your VCR. To do this, first program your remote control, then use the Channel Fix feature to set your TV to channel 3 or 4 (see page 31).
- ❑ Press  repeatedly to switch between VCR input (VIDEO input) and VHF/UHF (local channels).

Connecting a TV, VCR, and Cable Box

 **DIGITAL CABLE BOX USERS:** If you are connecting a digital cable box, you will need a special bi-directional splitter (5-900 Mhz minimum) that is designed to work with your digital cable box.

Use this connection if you subscribe to a cable system that scrambles some channels (pay channels), but not all of them. This setup allows you to:

- ❑ change channels through your cable box or VCR when you are receiving a scrambled signal
- ❑ change channels through your TV

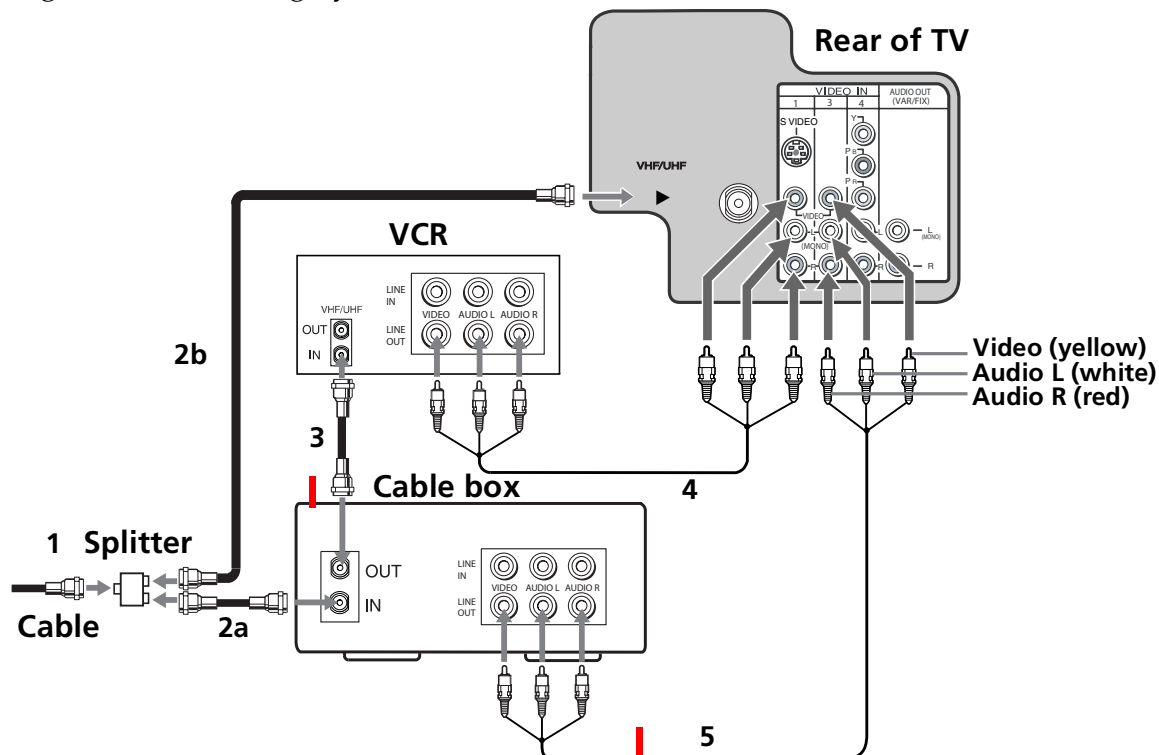




- 1** Connect the single input jack of the splitter (not supplied) to your incoming cable connection.
- 2** Using coaxial cables (not supplied), connect the two output jacks of the splitter (not supplied) to:
 - a)** the IN jack on your cable box
 - b)** the VHF/UHF jack on the TV
- 3** Using a coaxial cable (not supplied), connect the OUT jack on your cable box to the IN jack on your VCR.
- 4** Using the audio/video cables (not supplied), connect the AUDIO VIDEO OUT on your VCR to the AUDIO/VIDEO IN on your TV.
- 5** Using the audio/video cables (not supplied), connect the AUDIO VIDEO OUT on your cable box to the AUDIO/VIDEO IN on your TV.


Optional connection

- ❑ For better picture quality, use S VIDEO instead of the yellow video cable. S VIDEO does not provide sound, so you still must connect the audio cables.

Using your TV with this connection

- ❑ Program your Sony remote control to operate your VCR or cable box (see page 5).
- ❑ To activate your remote, press  (FUNCTION button) to operate your VCR or  (FUNCTION button) to operate your cable box. To do this, first program your remote control, then use the Channel Fix feature to set your TV to channel 3 or 4 (see page 31).
- ❑ Press  repeatedly to switch between VCR input (VIDEO input), VHF/UHF (local channels or unscrambled), or cable box (cable system or scrambled channels).

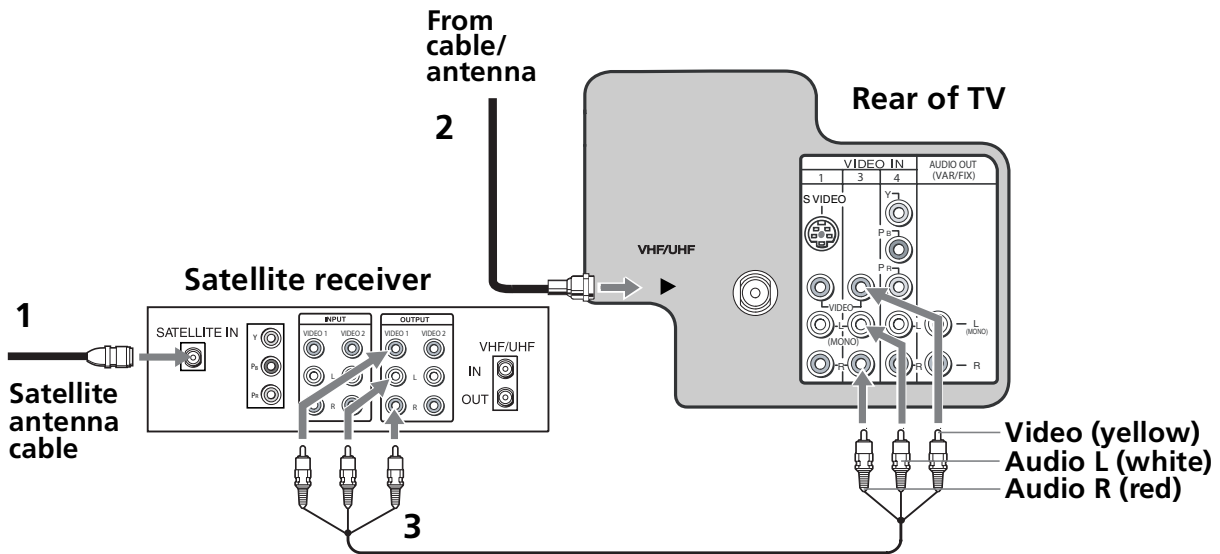

Connecting a TV and Satellite Receiver




- 1** Connect the cable from your satellite antenna to SATELLITE IN on your satellite receiver.
- 2** Connect the coaxial cable from your cable service or antenna to the VHF/UHF jack on your TV.
- 3** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your satellite receiver to AUDIO/VIDEO IN on your TV.

Using your TV with this connection

This connection allows you to do the following:

- ❑ Program your Sony remote control to operate your satellite receiver (see page 5).
- ❑ To activate your remote, press  (FUNCTION button) to operate your satellite receiver. See page 7 on how to operate other functions.
- ❑ Press  repeatedly to switch to satellite receiver input (VIDEO input).

Connecting a TV, VCR, Cable/Antenna, and Satellite Receiver using Composite Video (VIDEO/AUDIO L(MONO), R)

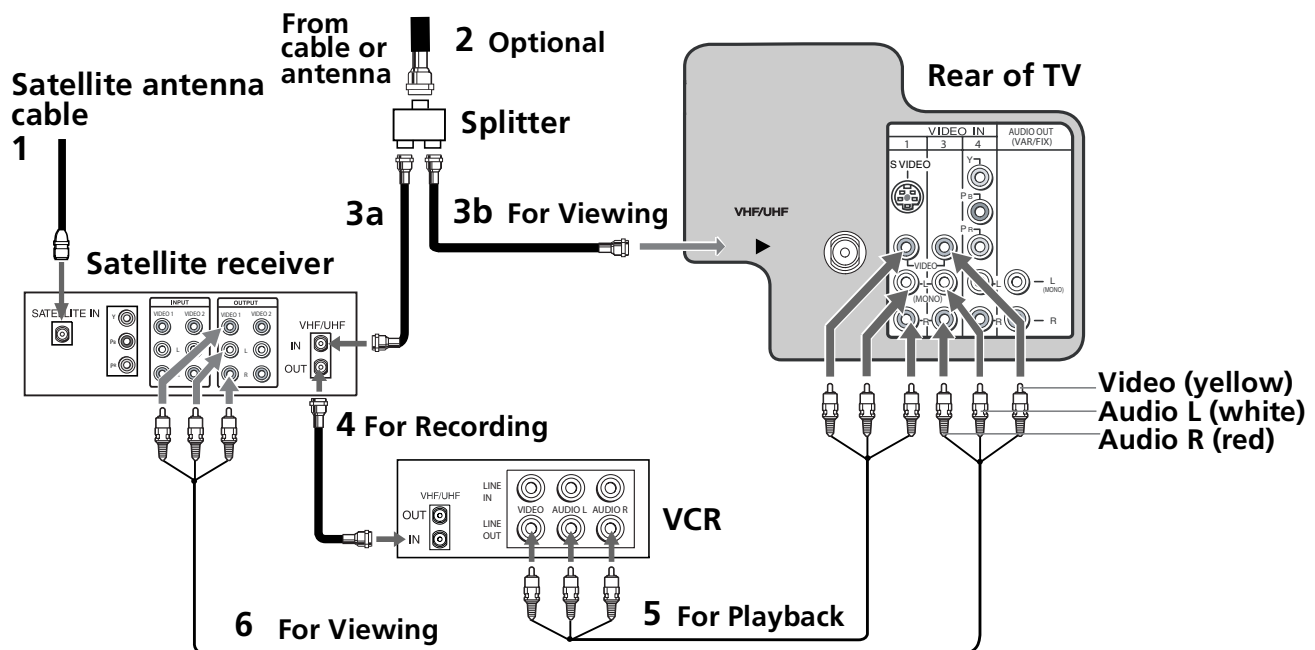


- 1** Connect the cable from your satellite antenna to SATELLITE IN on your satellite receiver.
- 2** Connect the single input jack of the splitter (not supplied) to your incoming cable/antenna (optional connection to view local channels or broadcast).
- 3** Using coaxial cables (not supplied), connect the two output jacks of the splitter (not supplied) to:
 - a)** the IN jack on your satellite receiver
 - b)** the VHF/UHF jack on the TV
- 4** Using a coaxial cable (not supplied), connect the OUT jack on your satellite receiver to the VHF/UHF IN on your VCR.
- 5** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your VCR to the AUDIO/VIDEO IN on your TV.
- 6** Using audio/video cables (not supplied), connect the AUDIO/VIDEO OUT on your satellite receiver to the AUDIO/VIDEO IN on your TV.

Using your TV with this connection

This connection allows you to do the following:

- Program your Sony remote control to operate your VCR or satellite receiver (see page 5).
- To activate your remote, press (FUNCTION button) to operate your VCR or (FUNCTION button) to operate your satellite receiver.
- Press repeatedly to switch between VCR input (VIDEO input), VHF/UHF (local channels or unscrambled), or your cable box (cable system or scrambled channels).

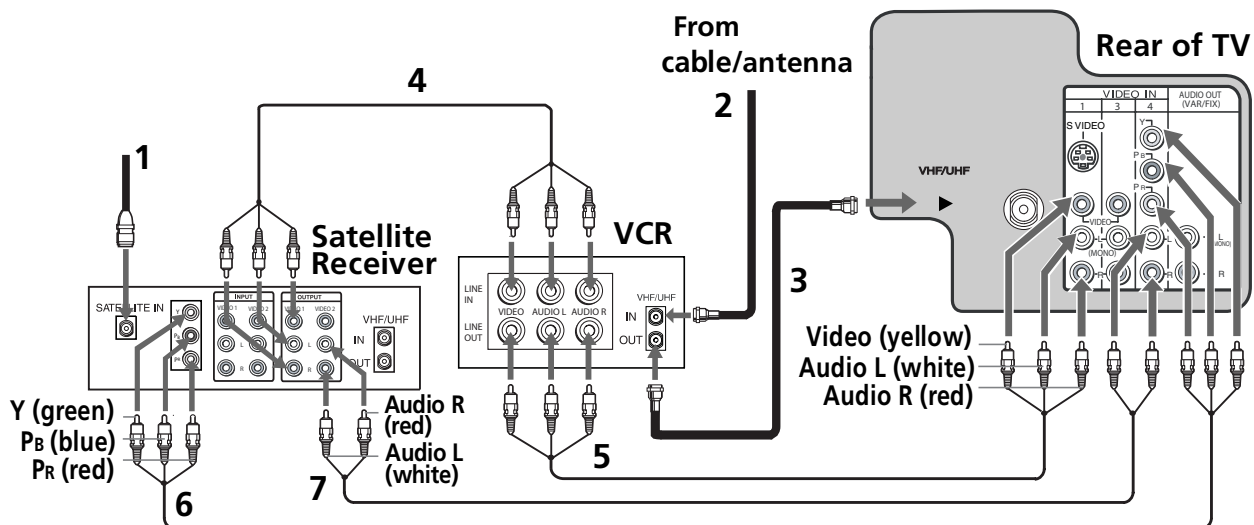


Connecting a TV, VCR, and Satellite Receiver using Component Video (Y, P_B, P_R)



- 1** Connect the coaxial cable from your satellite antenna to SATELLITE IN on the satellite receiver.
- 2** Connect the coaxial cable from your cable service or antenna to the IN jack on your VCR.
- 3** Using a coaxial cables (not supplied), connect the OUT jack on your VCR to the VHF/UHF jack on your TV.
- 4** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your satellite receiver to AUDIO/VIDEO IN on your VCR.
- 5** Using audio/video cables (not supplied), connect the AUDIO/VIDEO OUT on your VCR to AUDIO/VIDEO IN on your TV.
- 6** Using component video cables (not supplied), connect the Y, P_B, P_R OUT on your satellite receiver to Y, P_B, P_R IN on your TV.
- 7** Connect AUDIO OUT on your satellite receiver to AUDIO IN on your TV.


Using your TV with this connection

This connection allows you to do the following:

- Program your Sony remote control to operate your VCR or satellite receiver (see page 5).
- Turn on your VCR to enable your satellite receiver to work with this connection.
- To activate your remote, press  (FUNCTION button) to operate your VCR or  (FUNCTION button) to operate your satellite receiver.
- Press  repeatedly to switch between VCR input (VIDEO input), VHF/UHF (local channels or unscrambled), or your cable box (cable system or scrambled channels).

Connecting a DVD Player using Composite Video (VIDEO/AUDIO L(MONO),R)

Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your DVD player to AUDIO/VIDEO IN on your TV.

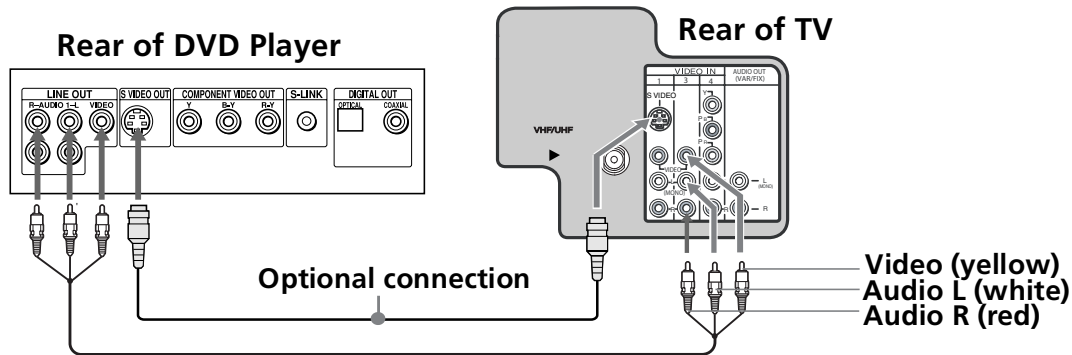


Optional connection


- ❑ For better picture quality, use S VIDEO instead of the yellow video cable. S VIDEO does not provide sound, so you still must connect the audio cables.

Connecting a DVD Player using Component Video (Y, P_B, P_R/R, L)

If your DVD player is equipped with component video outputs (Y, P_B, P_R), you can improve the picture quality by using component video cables (480i only).

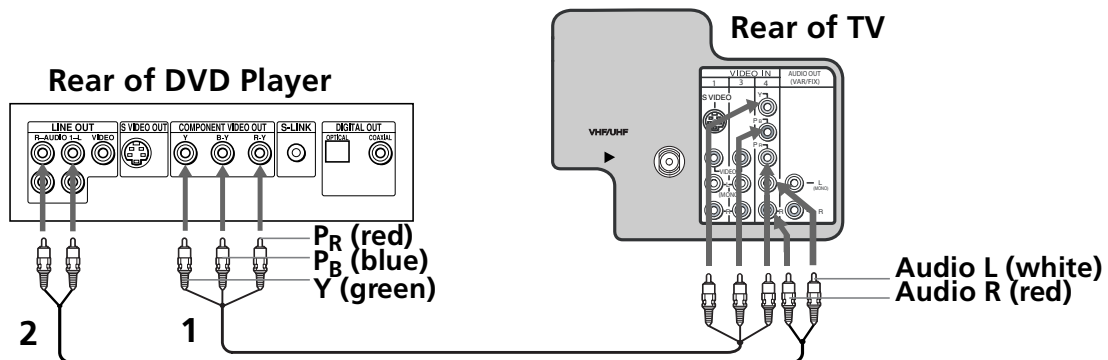



- 1 Using component video cables (not supplied), connect the Y, P_B, P_R OUT on your DVD player to Y, P_B, P_R IN on your TV.
- 2 Connect AUDIO OUT on your DVD player to AUDIO IN on your TV.


 The Y, P_B, P_R outputs on your DVD player are sometimes labeled Y, C_B, and C_R or Y, B-Y, and R-Y. If so, connect the cables to like colors.

Using your TV with this connection


This connection allows you to do the following:

- ❑ Program your Sony remote control to operate your DVD (see page 5).
- ❑ To activate your remote, press  (FUNCTION button) to operate your DVD.
- ❑ Press  repeatedly to switch to the DVD player's input (VIDEO input).

Connecting an Audio System


 If you are connecting a Home Theater, please refer to your Home Theater manual for additional connections.

- 1** Using audio/video cables (not supplied), connect AUDIO OUT on your TV to one of the unused line inputs (e.g. TV, AUX, TAPE2) on your stereo.
- 2** Set the Speaker option to Off. For more instructions, see "Using the Audio Menu" on page 29.
- 3** Open the Audio Out option on the Audio Menu and select Fixed to control the volume through the connected audio system. For more instructions, see "Using the Audio Menu" on page 29.

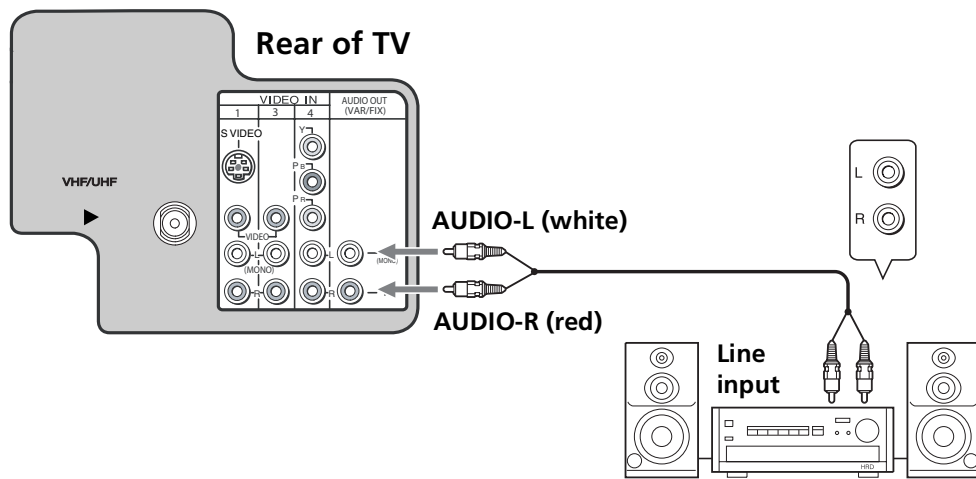


Connecting a Camcorder (for playback)

To connect your camcorder, you can use the Audio/Video inputs on either the front or rear panel of the TV. Using the audio/video cables (not supplied), connect the AUDIO/VIDEO OUT on your camcorder to the AUDIO/VIDEO IN on your TV.

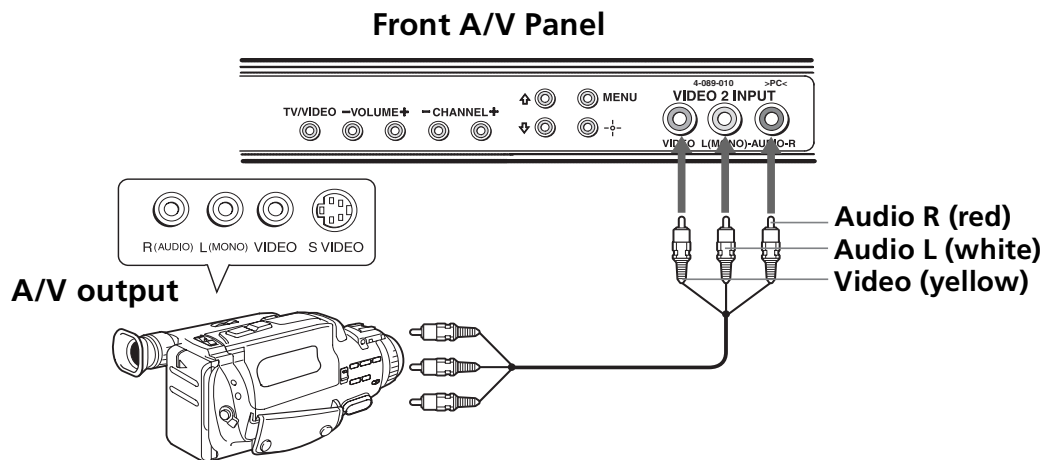


Connecting for Video Tape Editing (VCR and Camcorder)

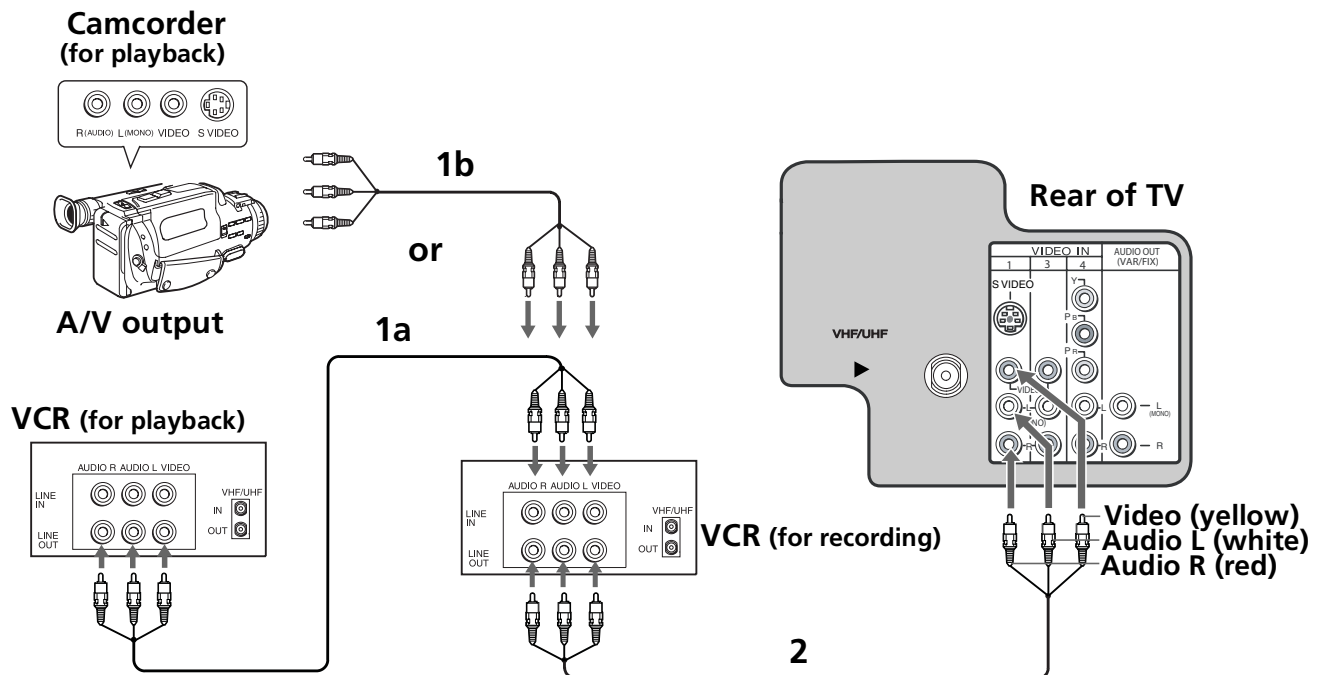

- 1** For video tape editing connect to the VCR the following sources (VCR or Camcorder):
 - a)** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your first VCR to AUDIO/VIDEO IN on your second VCR
 - b)** Using audio/video cables (not supplied), connect the AUDIO/VIDEO OUT on your Camcorder to the AUDIO/VIDEO IN on your second VCR
- 2** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on the second VCR to the AUDIO/VIDEO IN on your TV.

Using your TV with this connection

This connection allows you to do the following:

- Program your Sony remote control to operate your VCR (see page 5).
- To activate your remote, press  (FUNCTION button) to operate your VCR, see page 7 on how to operate other functions.

Other Information

Troubleshooting

If you have a problem with your TV, try the suggestions below. If the problem persists, see "Contacting Sony" at the end of this section.

General

Problem	Possible Remedies
I want to reset the TV to the factory settings	<input type="checkbox"/> Turn on the TV. While holding down the RESET button on the remote control, press POWER button on the TV front panel. The TV will turn itself off, then back on again. Release the RESET button.
The TV is dirty	<input type="checkbox"/> Clean the TV with a soft dry cloth. Never use strong solvents such as thinner or benzine, which might damage the finish of the cabinet.
I lost the parental control password	<input type="checkbox"/> In the password screen, enter the following master password: 4357. After using the master password, you must create a new password. You cannot use the master to unlock currently blocked channels.
There is a black box on the screen	<input type="checkbox"/> You have selected a text option in the Setup menu (page 40) and no text is available. To turn off this feature, select Off in the Caption Vision option. If you were trying to select closed captioning, select CC1-4 instead of Text1-4.
There was a blackout or power outage, and now the TV won't turn on and the timer LED is flashing	<input type="checkbox"/> Press the POWER button on your remote control or on the TV front panel.
Digital cable box does not work	<input type="checkbox"/> Be sure that you have not connected the digital cable box to the TV's TO CONVERTER jack. This jack is not compatible with digital cable boxes. <input type="checkbox"/> If you are connecting a VCR and digital cable box using a splitter, as described in page 14, you must use a special bi-directional splitter (5~900MHz minimum) that is designed to work with your digital cable box.

Remote Control

Problem	Possible Remedies
I cannot operate the remote control	<ul style="list-style-type: none"><input type="checkbox"/> Press TV (FUNCTION) when operating your TV.<input type="checkbox"/> Check the orientation of the batteries.<input type="checkbox"/> Batteries could be weak. Replace them (page 2).<input type="checkbox"/> Move the TV three to four feet away from fluorescent lights.
I cannot change channels with the remote control	<ul style="list-style-type: none"><input type="checkbox"/> Make sure you have not inadvertently switched your TV from the channel 3 or 4 setting if you are using another device to change channels.<input type="checkbox"/> If you are using another device to control channels, be sure that you have pressed the FUNCTION button for that device. For example, if you are using your VCR to control channels, be sure to press the VCR/DVD FUNCTION button (page 4).
I lost the remote control	<ul style="list-style-type: none"><input type="checkbox"/> You can use the front panel controls to access your menus, change channels, adjust the volume, or change video inputs (page 2). Contact your nearest Sony Dealer to order a replacement, please call our Sony Direct Accessory and Part Center at 1-800-488-7669 (U.S. residents only).


Programming the Remote Control

Problem	Possible Remedies
More than one code is listed	<ul style="list-style-type: none"><input type="checkbox"/> Try entering them one by one until you come to the correct code for your component.
I entered the wrong code number	<ul style="list-style-type: none"><input type="checkbox"/> If you enter a new code number, the code number you previously entered at that setting is erased.
I cannot operate a component with the remote control	<ul style="list-style-type: none"><input type="checkbox"/> Use the component's own remote control.
When I changed the batteries, the code numbers changed back to the factory settings	<ul style="list-style-type: none"><input type="checkbox"/> You must reprogram the remote control (page 5).

Video

Problem	Possible Remedies
No picture, no sound	<ul style="list-style-type: none">❑ Make sure the power cord is plugged in.❑ If a red light is flashing on the front of your TV for more than a few minutes, disconnect and reconnect the power cord. If the problem continues, call your local service center.❑ Check the TV/VIDEO setting: when watching TV, set it to TV; when watching video equipment, set it to VIDEO 1, 2, 3 or 4 (page 4).❑ Try another channel to rule out station trouble.
Poor or no picture, good sound	<ul style="list-style-type: none">❑ Adjust the Picture setting in the Video menu (page 28).❑ Adjust the Brightness setting in the Video menu (page 28).❑ Check the antenna and/or cable connections (page 11).
No color	<ul style="list-style-type: none">❑ Adjust the Color setting in the Video menu (page 28).
Only snow appears on the screen	<ul style="list-style-type: none">❑ Check the Cable setting in the Channel menu (page 31).❑ Check the antenna and/or cable connections (page 11).❑ Make sure the channel selected is currently broadcasting.
Dotted lines or stripes	<ul style="list-style-type: none">❑ Adjust the antenna.❑ Move the TV away from other electronic equipment. Some electronic equipment creates electrical noise, which can interfere with TV reception.
Double images or ghosts	<ul style="list-style-type: none">❑ Check your outdoor antenna or call your cable service.

Audio

Problem	Possible Remedies
Good picture, no sound	<ul style="list-style-type: none">❑ Press  so that Muting disappears from the screen (page 3).❑ Check your Audio settings. Your TV may be set to Auto SAP in the MTS feature (page 29).❑ Make sure the speaker option is set to On in the Audio Menu.❑ Adjust TV's volume.
Low or no audio (TV and Cable box)	<ul style="list-style-type: none">❑ Some cable boxes have volume level controls. Check and see if your cable box or cable box remote has a volume control.

Channels

Problem	Possible Remedies
I cannot receive higher number channels (UHF) when using an antenna	<ul style="list-style-type: none"><input type="checkbox"/> Make sure Cable is set to Off in the Channel menu (page 31).<input type="checkbox"/> Perform Auto Program to add channels that are not presently in the memory (page 23).
Cable stations don't seem to work	<ul style="list-style-type: none"><input type="checkbox"/> Make sure Cable is set to On in the Channel menu (page 31).<input type="checkbox"/> Perform Auto Program to add channels that are not presently in the memory (page 23).

Contacting Sony

Before calling our Customer Information Services Center, reset the TV to factory settings (see page 23). Please have your TV serial number ready. The number is located on the rear of your TV and on the front cover of this manual.

Our Customer Information Services Center phone number is 1-877-899-SONY (7669) (US residents only) or (416) 499-SONY (7669) (Canadian residents only).

FD Trinitron
WEGA[®]

Manual de instrucciones

KV-29FS120

KV-29FA310

Lea este manual antes de operar el producto.

ADVERTENCIA

Para evitar el riesgo de incendio o descarga eléctrica, no exponga el televisor a la lluvia o humedad.



Este símbolo señala al usuario la presencia de voltaje peligroso sin aislamiento en el interior del aparato de tal intensidad que podría presentar riesgo de descarga eléctrica.



Este símbolo indica al usuario que el manual que acompaña a este aparato contiene instrucciones importantes referentes a su funcionamiento y mantenimiento.

Nota para el instalador de CATV

Esta nota pretende llamar la atención del instalador del sistema CATV en relación con el artículo 820-40 de la NEC que proporciona las pautas para una adecuada conexión a tierra y, en particular, especifica que el cable de conexión a tierra debe estar conectado al sistema de toma de tierra del edificio lo más cerca posible de la entrada del cable.

PRECAUCIONES DE SEGURIDAD

- Utilice el televisor con ca (corriente alterna) como se menciona a continuación para todos los países excepto en donde se indique:
ca 120 V 60 Hz
ca 220 V 50/60 Hz (Chile, Perú, Bolivia)
- Una terminal del enchufe es más ancha que la otra para garantizar la seguridad y solo se podrá introducir en la toma de corriente de una manera (sólo los modelos con ca 120 V). Si no puede insertar completamente el enchufe en la toma, póngase en contacto con su proveedor.
- Si se introduce algún objeto sólido o líquido en el televisor, desconéctelo y haga que sea revisado por personal especializado antes de volver a utilizarlo.

PRECAUCION

PARA EVITAR DESCARGAS ELÉCTRICAS, INTRODUZCA EL ENCHUFE EN EL TOMACORRIENTE POR COMPLETO, CON EL CONTACTO ANCHO DEL ENCHUFE EN LA RANURA ANCHA DEL TOMACORRIENTE.

Al usar videojuegos, computadoras y productos similares con el televisor, mantenga los ajustes de brillo y contraste a un nivel moderado. Si una imagen inmóvil permanece en la pantalla durante un periodo prolongado con elevada intensidad de brillo o contraste, la imagen podría quedar grabada en la pantalla en forma permanente. Igualmente, ver continuamente el mismo canal de televisión podría dejar grabada en la pantalla el logotipo de la emisora. La garantía no cubre este tipo de anomalías, ya que se deben al mal uso del aparato.



Para reducir el riesgo de descarga eléctrica, no utilice el enchufe polarizado con un cable de extensión, un receptáculo ni otras tomas, a menos que las terminales estén bien insertadas y no queden expuestas.



Se advierte que cualquier cambio o modificación que no se apruebe de modo explícito en este manual podría anular su autorización para utilizar este equipo.

NOTIFICACION

Este aparato ha sido debidamente probado, comprobándose que cumple con los límites impuestos a dispositivos digitales Clase B de acuerdo con la Sección 15 de las normas de la FCC. Estos límites se establecieron para ofrecer protección razonable contra interferencias perjudiciales en las instalaciones residenciales. Este aparato genera, usa y puede emitir energía radioeléctrica. De no instalarse y utilizarse de acuerdo con las instrucciones correspondientes, podría producir interferencias perjudiciales en las radiocomunicaciones. No obstante, no puede garantizarse que no se produzcan estas interferencias en una instalación determinada. Si este aparato llega a interferir en la recepción de radio o televisión, lo que podrá comprobarse encendiendo y apagando el aparato, se recomienda al usuario intentar corregir la interferencia mediante una o más de las siguientes medidas:

- Reoriente o cambie de lugar las antenas receptoras.
 - Aumente la distancia que separa este aparato del receptor afectado.
 - Conecte el aparato en una toma de corriente de un circuito distinto al que esté conectado el receptor que está afectado.
 - Consulte con el distribuidor o solicite los servicios de un técnico capacitado en radio y televisión.
- Cualquier cambio o modificación que no se detalla expresamente en el presente manual podría invalidar su autorización para emplear este aparato.

Protección del televisor

- Para evitar el sobrecalentamiento interno, no obstruya los orificios de ventilación.
- No instale el televisor en un lugar con temperatura elevada, humedad, exceso de polvo o donde puedan producirse vibraciones.

Nota sobre Caption Vision

Este receptor de televisión proporciona pantalla de televisión con visualización de subtítulos de acuerdo con el punto § 15.119 del reglamento de la FCC.

El uso del televisor con finalidades distintas a la visualización privada de emisiones de programas en UHF o VHF o transmisiones vía cable dirigidas al público en general puede requerir la autorización de la compañía de emisión por cable y/o del propietario del programa.

Información para el propietario

Los números de serie y modelo están situados en la portada de este manual y en la parte posterior del televisor.

Marcas comerciales y derechos de autor

ENERGY STAR® es una marca registrada.



En calidad de compañía asociada a ENERGY STAR®, Sony ha determinado que este producto o modelo de producto cumple con las directrices de uso eficiente de energía de ENERGY STAR®.



Fabricado bajo licencia de SRS Labs, Inc. y los símbolos SRS son marcas registradas de SRS Labs, Inc.



Fabricado bajo licencia de Dolby Laboratories. "Dolby", "Pro Logic" y el símbolo de la doble-D son marcas comerciales de Dolby Laboratories.

Sony, FD Trinitron, WEGA®, ClearEdge VM, Intelligent Picture, Steady Sound, y Caption Vision y Dynamic Bass Response System son marcas comerciales de Sony.



Bajo licencia de BBE Sound, Inc. Licenciado de BBE Sound, Inc. sobre el número USP4638258, 5510752 y 5736897. BBE y el símbolo BBE son marcas registradas de BBE Sound, Inc.

Normas importantes sobre seguridad

Para su protección, lea detenidamente estas instrucciones y guarde este manual para futuras consultas. Lea cuidadosamente todas las advertencias y precauciones y siga las instrucciones inscritas en el televisor o descritas en el manual de instrucciones o de reparación.


ADVERTENCIA

Para protegerse contra daños personales, siga las precauciones de seguridad básicas durante la instalación, la utilización y el mantenimiento del televisor indicadas a continuación.

USO

Fuentes de alimentación

Este televisor solamente deberá alimentarse con el tipo de fuente de alimentación indicado en la etiqueta de serie/modelo. Si no está seguro sobre el tipo de red eléctrica de su hogar, consulte a su proveedor o a la compañía de suministro eléctrico local. En caso de un televisor diseñado para alimentarse con baterías, consulte su manual de instrucciones.




Conexión a tierra o polarización

Este aparato cuenta con cable eléctrico con clavija polarizada (con una terminal más ancha que la otra), o con tres terminales (la tercera es para la conexión). Siga las instrucciones indicadas a continuación:

Para los equipos con un enchufe de cable de alimentación de ca polarizado


El enchufe se introduce en la toma de corriente en una única dirección. Se trata de una característica de seguridad. Si no puede insertar completamente el enchufe en la toma, intente girar el enchufe. Si sigue teniendo problemas para insertar el enchufe, póngase en contacto con su electricista para que le instale una toma adecuada. No ponga a prueba la finalidad de seguridad del enchufe polarizado forzándolo.



Advertencia alternativa


Para los equipos con un enchufe de ca con tres cables de conexión de tierra

Este enchufe únicamente se acoplará a una toma de corriente de conexión a tierra. Se trata de una característica de seguridad. Si no puede insertar el enchufe en la toma, póngase en contacto con su electricista para que le instale una toma adecuada. No ponga a prueba la seguridad del enchufe de conexión a tierra.



Sobrecarga

No sobrecargue las tomas de pared, los cables de extensión ni los receptáculos más allá de su capacidad, puesto que podría producirse un incendio o una descarga eléctrica. Apague siempre el aparato cuando no lo utilice. Si no va a utilizar el aparato durante un tiempo prolongado, desconéctelo de la toma de pared como precaución ante la posibilidad de que se produzca un mal funcionamiento interno que pueda provocar un incendio.



No desconecte la antena ni el cable de alimentación en caso de tormenta. Los relámpagos podrían descargar mientras sujeta el cable y provocarle lesiones graves. Apague el televisor y espere que el tiempo mejore.



Introducción de objetos y líquidos

No introduzca objetos de ningún tipo a través de las ranuras del gabinete, ya que podrían tocar puntos de tensión peligrosa o provocar cortocircuitos de piezas, lo que podría resultar en incendios o descargas eléctricas. No derrame nunca ningún tipo de líquido sobre el televisor.



Accesorios

No utilice ningún accesorio no recomendado por el fabricante, ya que podría ser peligroso. No coloque ningún tipo de objetos, especialmente objetos pesados, encima del aparato. Podrían caerse del aparato y causar lesiones.




Limpeza

Antes de limpiar el televisor, desconéctelo de la alimentación. No utilice limpiadores líquidos ni aerosoles. Para limpiar el exterior del televisor, emplee un paño ligeramente humedecido en agua.



Si se produce un ruido continuo o intermitente en el interior del aparato de televisión mientras está en funcionamiento, desconecte el televisor y póngase en contacto con el proveedor o con el servicio de asistencia técnica. Es normal que algunos aparatos de televisión produzcan ocasionalmente este tipo de ruidos, especialmente cuando se conectan y desconectan.

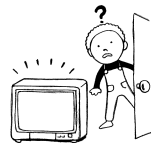


Instalación

Para levantar o mover el aparato siempre se deberá hacer entre dos o más personas. El aparato es pesado y la superficie inferior es plana. Si intenta mover el aparato sin ayuda o lo manipula de forma insegura, puede producirse lesiones graves. Instale el aparato sobre una superficie plana y estable.

Agua y humedad

No utilice aparatos de alimentación eléctrica cerca del agua — por ejemplo, cerca de una bañera, un lavabo, un fregadero o una lavadora, en un sótano húmedo, ni cerca de una piscina, etc.

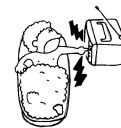

Colocación

No coloque el televisor sobre una mesita con ruedas, un pedestal, una mesa o un estante inestable. El televisor podría caer, causando daños serios a niños, adultos y al propio televisor. Utilice solamente la mesita de ruedas o soporte recomendado por el fabricante para el modelo específico. La combinación de un televisor y un mueble con ruedas deberá moverse con cuidado. Las paradas bruscas, la fuerza excesiva y las superficies desiguales pueden hacer que el aparato y el mueble volqueen.

Desconecte todos los cables del aparato antes de intentar moverlo.

No permita que niños o animales se suban encima del aparato o lo empujen. El aparato podría caerse y causar lesiones graves.




Ventilación

Las ranuras y aberturas en la parte posterior o inferior del televisor son para permitir la ventilación necesaria. Para asegurar la operación fiable del televisor y protegerlo contra el sobrecalentamiento, estas ranuras y aberturas no deberán cubrirse ni bloquearse nunca.

❑ No tape las ranuras ni aberturas con paños ni otros materiales.




❑ No bloquee las ranuras ni aberturas colocando el televisor sobre una cama, sofá, alfombra u otras superficies similares.



- ❑ No coloque el televisor en un lugar cerrado, como en un librero o un mueble empotrado, a menos que esté adecuadamente ventilado.



- ❑ No coloque el televisor cerca, ni sobre un radiador o una salida de aire caliente, ni expuesto a la luz solar directa.



Protección del cable de alimentación

No permita que ningún objeto quede sobre el cable de alimentación, ni coloque el televisor donde el cable pueda quedar sometido a desgaste o presión.

Conexión a tierra o polarización

Este aparato puede estar equipado con un enchufe de línea de corriente alterna polarizado (con una terminal más ancha que la otra). El enchufe sólo se puede introducir en la toma de corriente en una dirección. Se trata de una característica de seguridad. Si no puede insertar completamente el enchufe en la toma, intente girarlo. Si sigue teniendo problemas para introducir el enchufe, póngase en contacto con su electricista para que sustituya la toma obsoleta. No ponga a prueba la seguridad del enchufe polarizado.

Antenas


Conexión a tierra de una antena exterior

Para instalar una antena exterior, siga los procedimientos que se indican a continuación. Los sistemas de antenas exteriores no deben situarse cerca de líneas eléctricas o circuitos de alimentación o luz eléctrica, o bien donde pueda entrar en contacto con dichas líneas eléctricas o circuitos.

CUANDO INSTALE UN SISTEMA DE ANTENA EXTERIOR, EXTREME LAS PRECAUCIONES Y MANTÉNGALO ALEJADO DE DICHAS LINEAS ELECTRICAS O CIRCUITOS, DADO QUE EL CONTACTO PUEDE RESULTAR FATAL.

Asegúrese de que el sistema de antena tiene conexión a tierra para proporcionar protección contra los incrementos de voltaje y el aumento de las cargas estáticas. El apartado 810 del Código Eléctrico Nacional (NEC) en EE.UU. y el apartado 54 del Código eléctrico de Canadá proporcionan información relativa a la conexión a tierra adecuada del mástil y de la estructura de soporte, la conexión a tierra del cable de conexión a la unidad de descarga de la antena, el tamaño de los conductores de la conexión a tierra, la ubicación de la unidad de descarga de la antena, la conexión de los electrodos de conexión a tierra y los requisitos de los electrodos de conexión a tierra.

Conexión a tierra de la antena de acuerdo con el Código Eléctrico Nacional, ANSI/NFPA 70

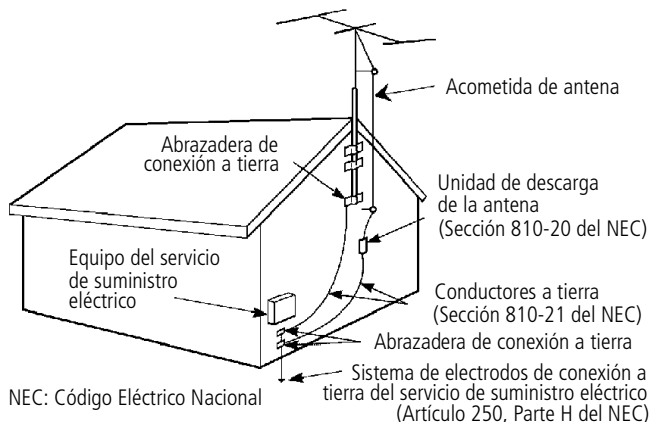

Descargas Eléctricas


Para mayor protección del receptor de televisión durante una tormenta con descarga eléctrica o cuando no se utiliza durante largos periodos de tiempo, desconéctelo de la toma de pared y desconecte la antena. Con ello evitará que los rayos y los incrementos de voltaje dañen el receptor.

Reparación


Daños que requieren reparación

Desconecte el aparato de la toma de pared y haga que sea revisado por personal calificado cuando se produzcan las siguientes condiciones:

- ❑ Si el cable de alimentación o el enchufe están dañados o deshilachados.




- ❑ Si se ha vertido líquido en el interior del aparato o si se han caído objetos en el interior del producto.

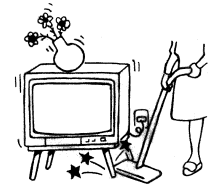


- ❑ Si el aparato se ha expuesto a lluvia o agua.



- ❑ Si el aparato se ha caído y ha sufrido golpes excesivos o si se ha dañado la unidad.

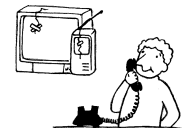

- ❑ Si el aparato no funciona con normalidad al seguir las instrucciones del manual. Ajuste solamente los controles que se especifican en el manual de instrucciones. El ajuste inadecuado de otros controles puede provocar daños y a menudo requerirá mucho trabajo por parte de un técnico calificado para restablecer el funcionamiento normal del aparato.

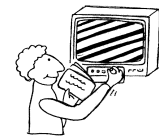

- ❑ Si el aparato muestra un cambio de rendimiento significativo, debe repararse.

Asistencia técnica

No intente reparar por sí mismo el aparato ya que al abrir el gabinete se vería expuesto a tensiones peligrosas y otros riesgos. Solicite los servicios de personal de reparación calificado.



Piezas de reemplazo

Si necesita piezas de reemplazo, asegúrese de que el técnico certifique por escrito que ha utilizado piezas de reemplazo especificadas por el fabricante con las mismas características que las piezas originales. El uso de piezas no autorizadas puede provocar incendios, descargas eléctricas y otros peligros.




Comprobación de seguridad

Después de realizar cualquier reparación del aparato, solicite al técnico de la reparación que realice comprobaciones rutinarias de seguridad (como especifica el fabricante) para determinar si el aparato se encuentra en condiciones seguras de funcionamiento y certificarlo. Cuando el aparato llega al final de su vida útil, debe desecharse adecuadamente para evitar una implosión del tubo de la imagen. Consulte a un técnico de reparación calificado para depositar el aparato.



Conexión de equipo adicional

Conexión de un Televisor y una Videgrabadora

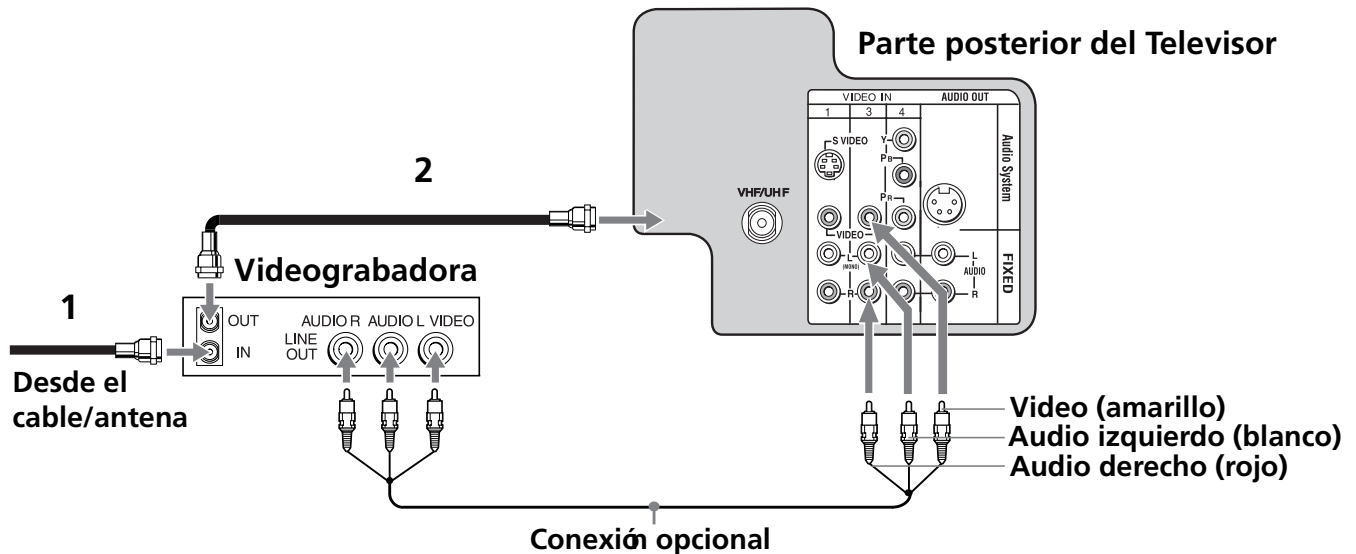



- 1** Conecte el cable coaxial de la antena o del sistema de cable (sistema de televisión por pago) a la toma de la videgrabadora.
- 2** Conecte el cable coaxial (no incluido) de la toma OUT de la videgrabadora a la toma VHF/UHF del televisor.


Conexión opcional

- ❑ Si la videgrabadora dispone de salidas de video, puede obtener una mejor calidad de imagen conectando los cables de audio/video (no incluidos) desde la salida AUDIO/VIDEO OUT de la videgrabadora a la toma AUDIO/VIDEO IN del televisor.
- ❑ Para obtener una mejor calidad de imagen, utilice S VIDEO en lugar del cable amarillo de video. Como S VIDEO no proporciona sonido, debe mantener conectados los cables de audio.

Utilizando su televisor con estas conexiones


Esta conexión le permite hacer lo siguiente:

- ❑ Programar su control remoto Sony para operar su videgrabadora (ver página 7).
- ❑ Para activar su remoto presione  (del area de FUNCTION) para operar su videgrabadora (ver página 5). Para hacer esto, primero programe su control remoto, entonces use la función de Fijar Canal para programar su televisor al canal 3 o 4 (ver página 34).
- ❑ Presione  repetidas veces para cambiar entre la toma de la videgrabadora (VIDEO input) y VHF/UHF (canales locales).

 Receptor de satélite y el servicio de cable son sistemas de televisión de pago.

Conexión de un Televisor y Decodificador


Algunos sistemas de televisión por cable usan señales codificadas que requieren un decodificador para poder ver todos los canales. Si está suscrito a ese tipo de sistema de televisión por pago, utilice esta conexión. Si algunos de sus canales están codificados, tome en consideración la posibilidad de utilizar la conexión del decodificador y cable.

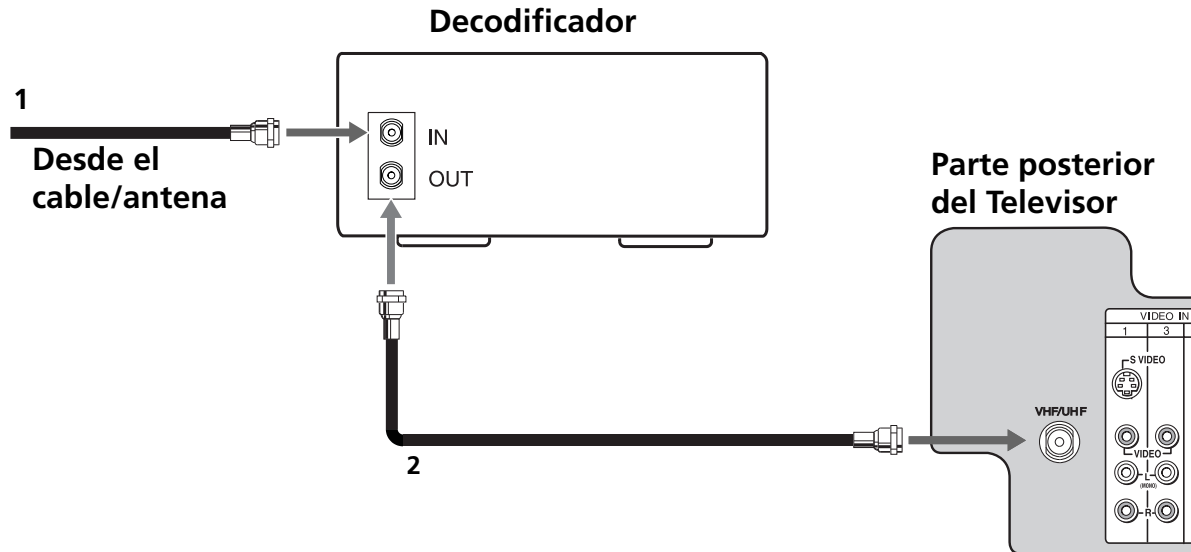


- 1** Conecte el cable coaxial de su sistema de televisión por pago a la toma IN del Decodificador.
- 2** Conecte un cable coaxial (no incluido) desde la toma OUT del decodificador a la toma VHF/UHF del televisor.

Utilizando su televisor con estas conexiones

Esta conexión le permite hacer lo siguiente:


- Programar su control remoto Sony para operar su decodificador (ver página 5).
- Para activar su remoto presione  (del área de FUNCTION) para operar su decodificador; use los botones del **0-9** o el botón CH+/- para cambiar los canales. Para hacer esto, primero programe su control remoto, entonces use la función de Fijar Canal para programar su televisor al canal 3 o 4 (ver página 34).

 Receptor de satélite y el servicio de cable son sistemas de televisión de pago.


Conexión de un Televisor, una Videgrabadora y un Decodificador

Utilice esta conexión si está suscrito a un sistema de televisión de pago que codifique algunos canales pero no todos. Esta configuración le permite utilizar el control remoto para:

- ❑ Cambiar el canal con el decodificador o la videgrabadora mientras recibe una señal codificada.
- ❑ Cambiar el canal con el televisor.

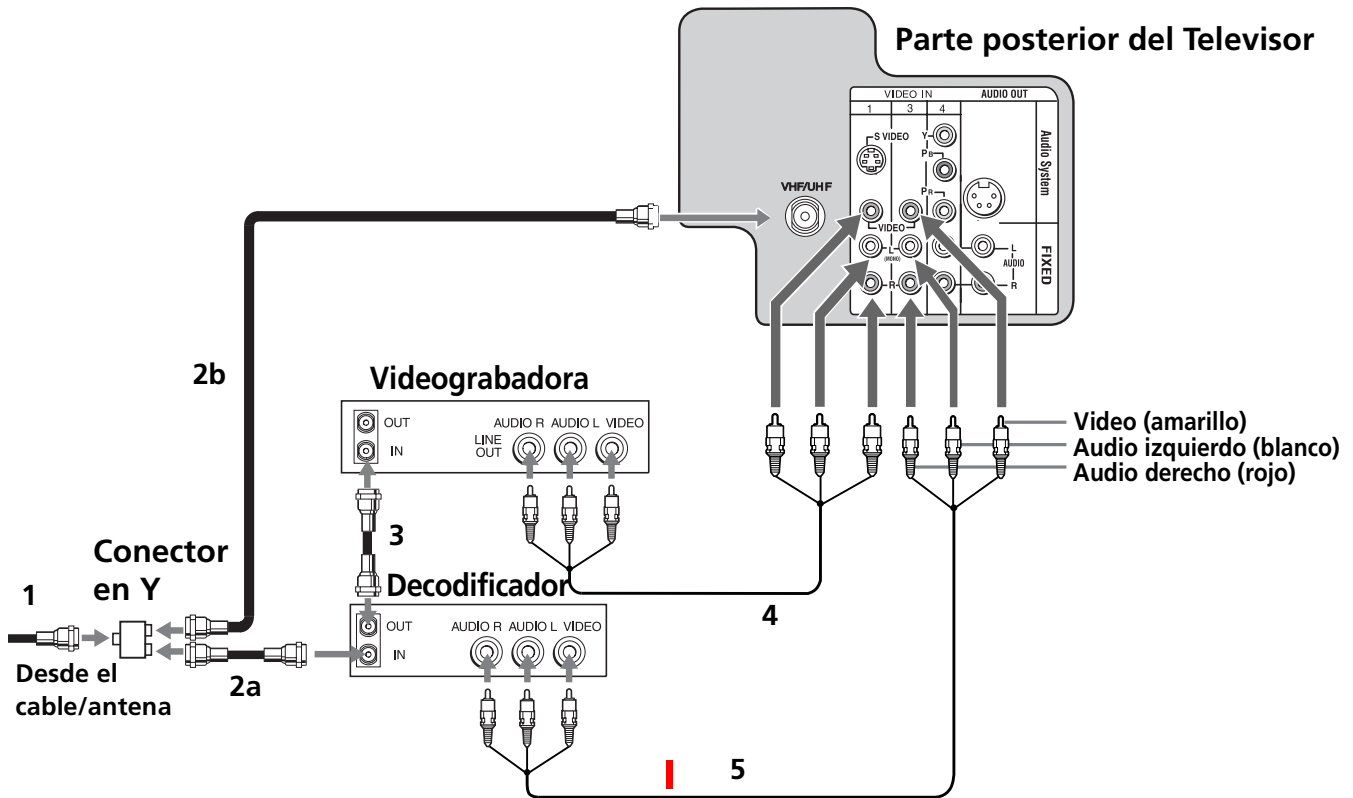

- 1** Conecte la toma de entrada del conector en Y (no incluido) a su conexión de entrada del sistema de cable.
- 2** Con un cable coaxial (no incluido), conecte las dos tomas de salida del conector en Y a:
 - a)** La toma IN del decodificador.
 - b)** La toma VHF/UHF del televisor.
- 3** Conecte la toma OUT del decodificador a la toma IN de la videgrabadora con un cable coaxial (no incluido).
- 4** Utilice los cables de AUDIO/VIDEO (no incluidos), conecte el AUDIO/VIDEO OUT de su videgrabadora al AUDIO/VIDEO IN de su televisor.
- 5** Utilice los cables de AUDIO/VIDEO (no incluidos), conecte el AUDIO/VIDEO OUT de su caja de cable al AUDIO/VIDEO IN de su televisor.




 Receptor de satélite y el servicio de cable son sistemas de televisión de pago.

Conexión opcional


- ❑ Para obtener una mejor calidad de imagen, utilice S VIDEO en lugar del cable amarillo de video, siempre y cuando la videograbadora tenga salida de S-VIDEO. Como S VIDEO no proporciona sonido, debe mantener conectados los cables de audio.

Utilizando su televisor con estas conexiones

Estas conexiones le permiten hacer lo siguiente:

- ❑ Para usar el decodificador para cambiar canales, programe el televisor al canal 3 o 4. Use la función de fijar canal para asegurar que no cambie de canal accidentalmente (ver página 34).
- ❑ Programar su control remoto Sony para operar su videograbadora o decodificador (ver página 5).
- ❑ Para activar su control remoto presiona  (del área de FUNCTION) para operar su videograbadora o  (del area de FUNCTION) para operar su decodificador.
- ❑ Presione  varias veces para cambiar entre la toma de la videograbadora, (VIDEO input), VHF/UHF (canales locales o canales codificados) o su decodificador (sistema de cable o canales codificados).

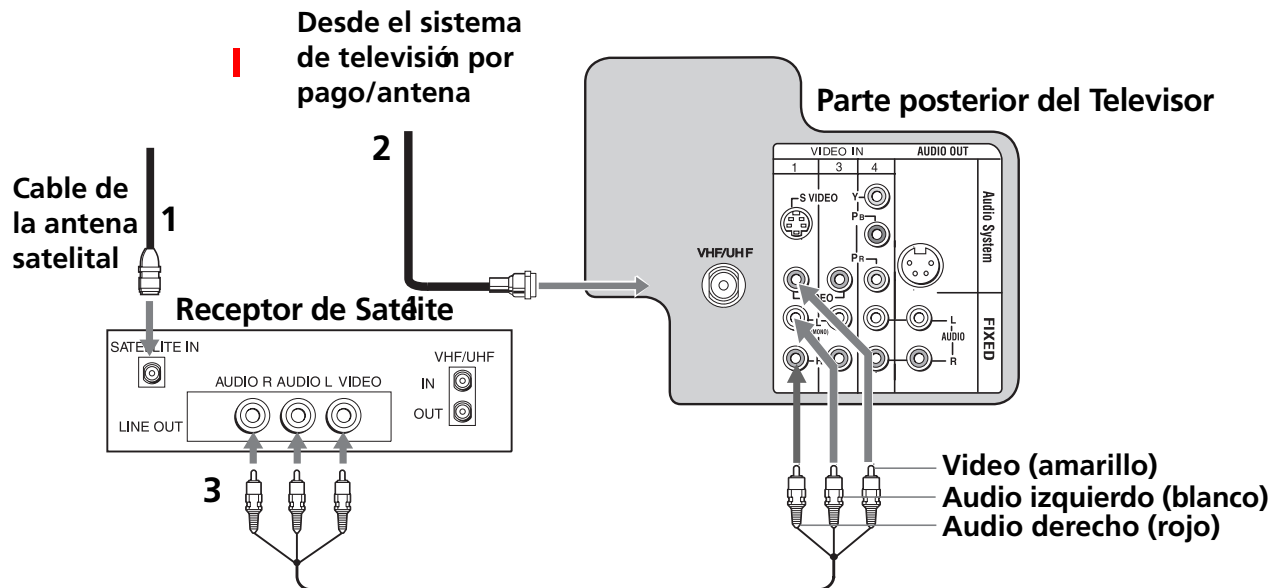

Conexión de un Televisor y un Receptor de Satélite




- 1** Conecte el cable de la antena por satélite a la toma de SATELLITE IN del receptor de satélite.
- 2** Conecte el cable coaxial del servicio de cable o antena a la toma VHF/UHF del televisor.
- 3** Use cables de audio/video (no incluidos) para conectar las tomas AUDIO/VIDEO OUT del receptor de satélite a la toma de AUDIO/VIDEO IN del televisor.


Utilizando su televisor con estas conexiones

Esta conexión le permite hacer lo siguiente:

- Programar su control remoto Sony para operar su receptor de satélite (ver página 5).
- Para activar su control remoto para operar su receptor de satélite presiona  (del área de FUNCTION) (ver página 8).
- Presione  repetidas veces para cambiar entre la toma del receptor de satélite (VIDEO input).

 Receptor de satélite y el servicio de cable son sistemas de televisión de pago.

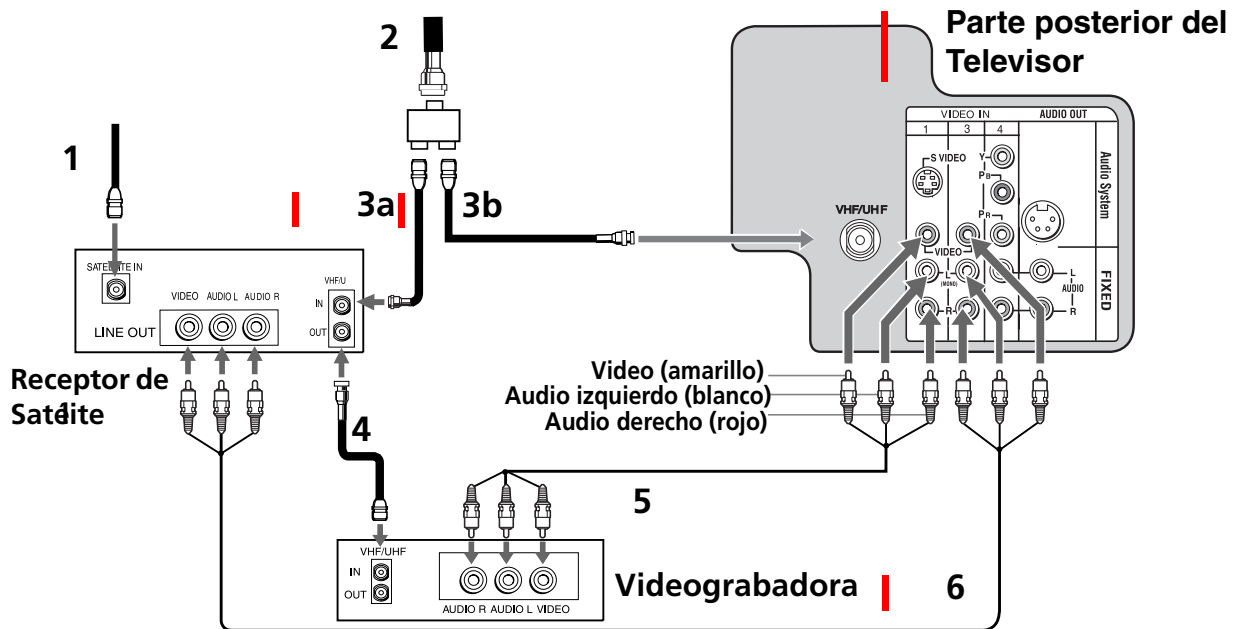


Conexión de un Televisor, Videgrabadora y un Receptor de Satélite usando Video Compuesto (entradas de Video/Audio L,R)




- 1** Conecte el cable de la antena por satélite a la entrada SATELLITE IN del receptor de satélite.
- 2** Conecte el cable coaxial del sistema de cable o antena a la toma IN de la videgrabadora.
- 3** Con un cable coaxial (no incluido), conecte las dos tomas de salida del conector en Y (no incluido) a:
 - a)** La toma IN del receptor de satélite
 - b)** La toma VHF/UHF de la videgrabadora
- 4** Con un cable coaxial (no incluido), conecte la toma OUT del receptor de satélite al VHF/UHF IN de su videgrabadora.
- 5** Con un cable de audio/video (no incluidos), conecte la toma de AUDIO/VIDEO OUT de su videgrabadora a la toma AUDIO/VIDEO IN de su televisor.
- 6** Con un cable de audio/video (no incluido), conecte a la toma de AUDIO/VIDEO OUT de su receptor de satélite a la toma AUDIO/VIDEO IN de su televisor.


Utilizando su televisor con estas conexiones

Esta conexión le permite hacer lo siguiente:



- Programar su control remoto Sony para operar su videgrabadora o receptor de satélite (ver página 5).
- Para que el receptor de satélite trabaje con esta conexión su videgrabadora debe estar encendida.
- Para operar su videgrabadora con el control remoto presione  o  (del área de FUNCTION) botón para operar su receptor de satélite, (ver página 8).
- Presione  varias veces para cambiar la toma de la videgrabadora (VIDEO input), VHF/UHF (canales locales o canales codificados) o su decodificador (sistema de televisión por pago o canales codificados).

 Receptor de satélite y el servicio de cable son sistemas de televisión de pago.

Conexión de un Televisor, Videgrabadora y un Receptor de Satélite usando Video Componente (entradas Y, PB, PR/Audio L,R)

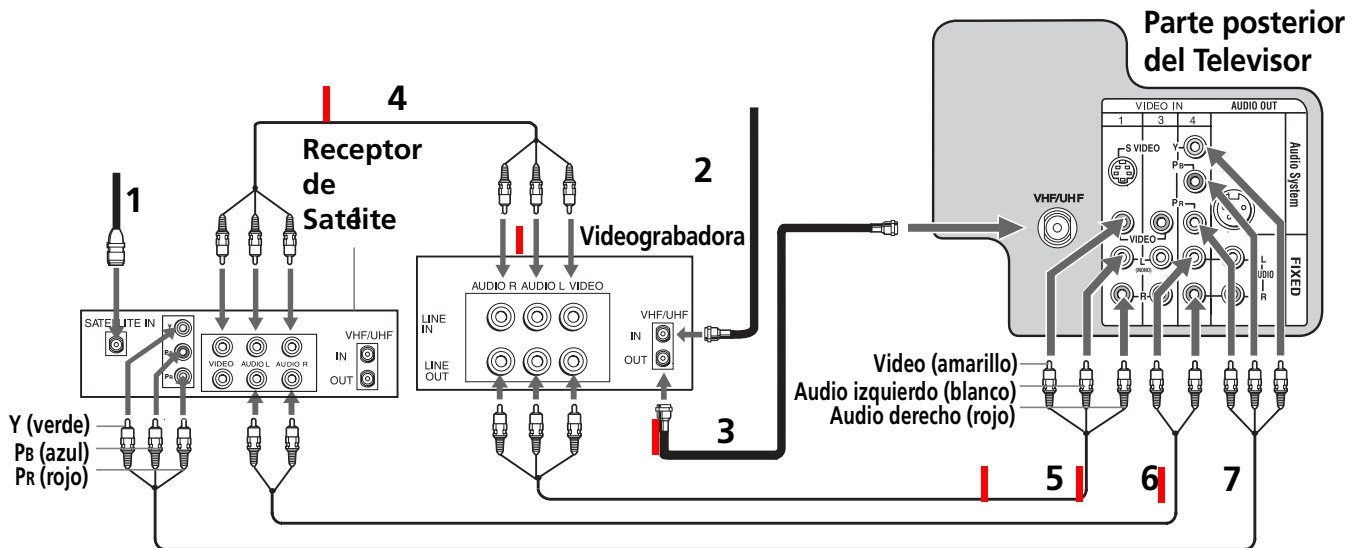





- 1** Conecte el cable de la antena por satélite a la entrada SATELLITE IN del receptor de satélite.
- 2** Conecte el cable coaxial del sistema de cable o antena a la toma IN de la videgrabadora.
- 3** Conecte la toma OUT de la videgrabadora a la toma VHF/UHF del televisor con un cable coaxial (no incluido).
- 4** Use cables de audio/video (no incluidos) para conectar las tomas de AUDIO/VIDEO OUT del receptor de satélite a la toma de AUDIO/VIDEO IN de la videgrabadora.
- 5** Conecte las tomas AUDIO/VIDEO OUT de la videgrabadora a las tomas AUDIO/VIDEO IN del televisor con cables de Audio/Video (no incluidos).
- 6** Conecte Y, PB, PR OUT de su receptor de satélite a Y, PB, PR IN del televisor con cables de componentes de video (no incluidos).
- 7** Conecte la toma AUDIO OUT del receptor de satélite a la toma AUDIO IN del televisor.

 Para ver las imágenes desde el receptor de satélite o la videgrabadora, seleccione la entrada de video a la que esté conectado el receptor de satélite o la videgrabadora presionando  en el control remoto.

Utilizando su televisor con estas conexiones


Esta conexión le permite hacer lo siguiente:

- ❑ Programar su control remoto Sony para operar su videgrabadora o receptor de satélite (ver página 5).
- ❑ Para que el receptor de satélite trabaje con esta conexión su videgrabadora debe estar prendida.
- ❑ Para operar su videgrabadora con el control remoto presiona  o  (del area de FUNCTION) botón para operar su receptor de satélite, (ver página 8).
- ❑ Presione  varias veces para cambiar la toma de la videgrabadora (VIDEO input), VHF/UHF (canales locales o canales codificados) o su decodificador (sistema de televisión por pago o canales codificados).

 Receptor de satélite y el servicio de cable son sistemas de televisión de pago.


Conexión de un Reproductor de DVD

Use cables de audio/video (no incluidos) para conectar las tomas de AUDIO/VIDEO OUT del reproductor de DVD a la toma de VIDEO IN del televisor.

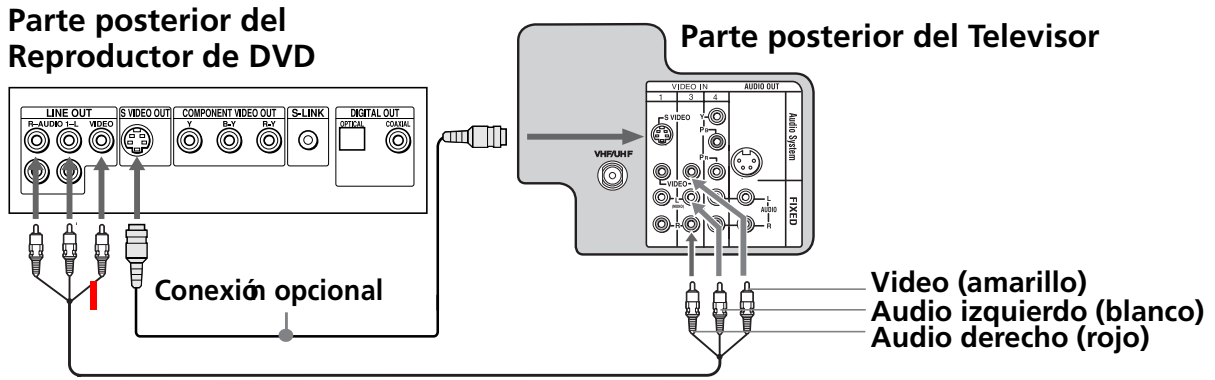


Conexión opcional

- ❑ Para obtener una mejor calidad de imagen, utilice S VIDEO en lugar del cable amarillo de video. Como S VIDEO no proporciona sonido, debe mantener conectados los cables de audio.
- ❑ Si el reproductor de DVD tiene salidas de video para componentes (Y, P_B, P_R), puede optimizar la calidad de imagen con cables de video para componentes (480i únicamente).

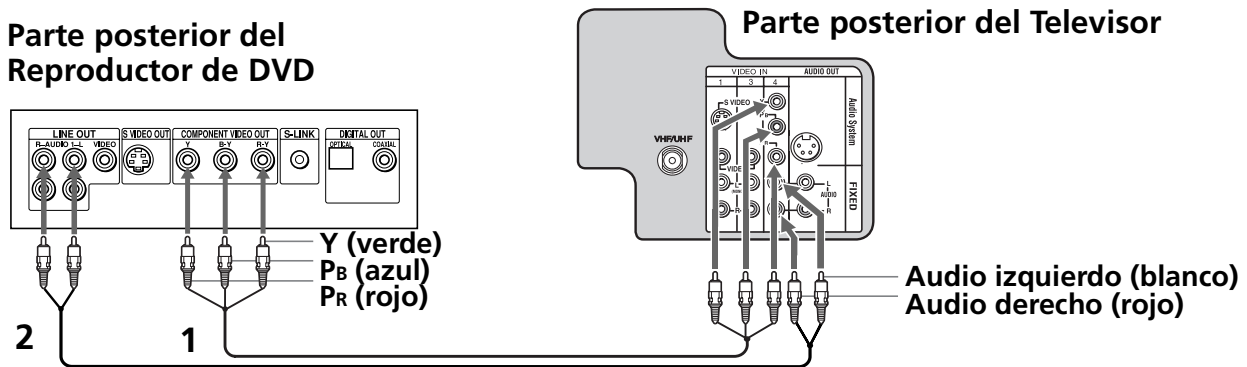



- 1** Conecte Y, P_B, P_R OUT de su reproductor de DVD a Y, P_B, P_R IN del televisor con cables de componentes de video (no incluidos).
- 2** Conecte la toma AUDIO OUT del reproductor de DVD a la toma AUDIO IN del televisor.


 Las salidas Y, P_B, P_R del reproductor de DVD en ocasiones están marcadas Y, C_B y C_R o Y, B-Y, y R-Y. En tal caso, conecte los cables según el color de las tomas.

Utilizando su televisor con estas conexiones


Esta conexión le permite hacer lo siguiente:

- ❑ Programar su control remoto Sony para operar su reproductor de DVD (ver página 5).
- ❑ Para activar su control remoto presiona  (del área de FUNCTION) para operar su DVD, (ver página 7).
- ❑ Presione  varias veces para cambiar la toma del DVD (VIDEO input).

Conexión de un sistema de Audio


 Si conecta un sistema de Home Theater vea el manual de éste para conexiones adicionales.

- 1 Usando los cables de audio/video (no incluidos), conecte el AUDIO OUT de su televisor a una de las tomas no usadas (TV, AUX, TAPE2) en su estéreo.
- 2 Ajuste el equipo de sonido a la entrada de línea seleccionada. Consulte "Uso del Menú de Audio" en la pagina 31 para obtener más instrucciones sobre la configuración del audio.

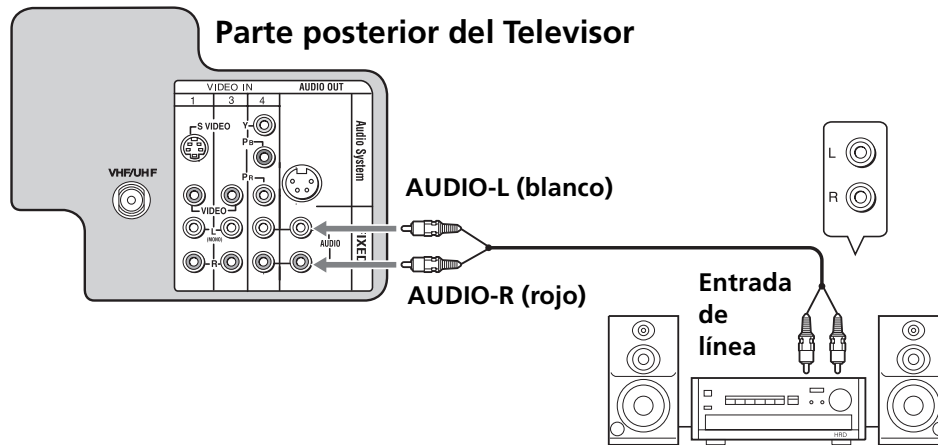

Conexión de una Cámara de Video

Para conectar su videocámara usted puede usar la toma del panel frontal del televisor o la toma del panel posterior del televisor Audio/ Video. Usando los cables de AUDIO/ VIDEO OUT (no incluido), conecte el AUDIO/VIDEO OUT de su videocámara a la toma de AUDIO/ VIDEO IN en su televisor.

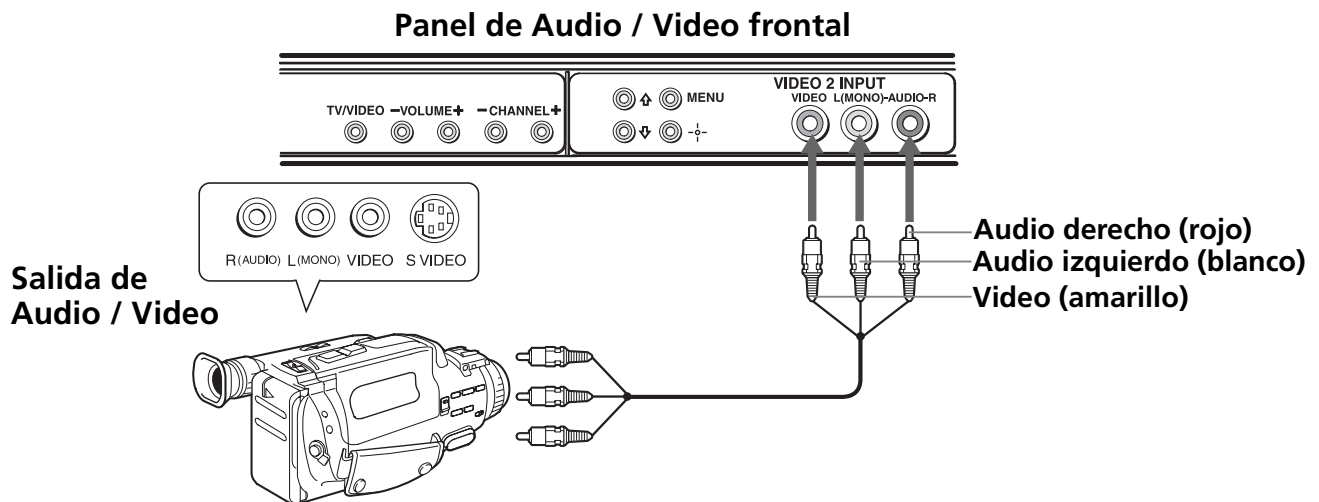

Conexión opcional

- Para obtener una mejor calidad de imagen, use S VIDEO en lugar del cable amarillo de video. Como S VIDEO no proporciona sonido, debe mantener conectados los cables de audio.


Conexión para editar Videocintas (videograbadora y cámara de video)

Salida de AUDIO/VIDEO




Camara

Videograbadora

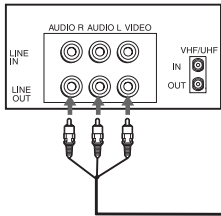

Parte posterior del Televisor

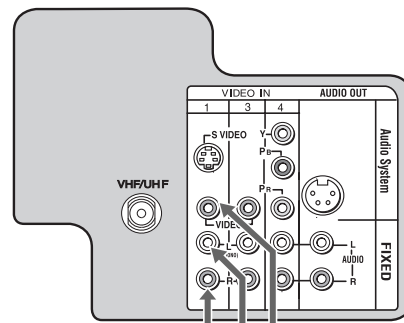

Video (amarillo)
Audio izquierdo (blanco)
Audio derecho (rojo)

1a


1b


Videograbadora 2

- 1 Para editar una videocinta conecte a la videograbadora las siguientes aparatos (videograbadora o cámara de video).
 - a) Con un cable de audio/video (no incluido) conecte AUDIO/VIDEO OUT de su cámara de video al AUDIO/VIDEO IN de su videograbadora (para grabar).
 - b) Con un cable de audio/video (no incluido) conecte AUDIO/VIDEO OUT de la videograbadora (para reproducir) al AUDIO/VIDEO IN de su videograbadora (para grabar).
- 2 Con un cable de audio/video (no incluido) conecte AUDIO/VIDEO OUT de su videograbadora (para grabar) al AUDIO/VIDEO IN de su televisor.
- 3 Con un cable de audio/video (no incluido) conecte AUDIO/VIDEO OUT de su videograbadora (para grabar) al AUDIO/VIDEO IN de su televisor.

Utilizando su televisor con estas conexiones

Esta conexión le permite hacer lo siguiente:

- Programar su control remoto Sony para operar su videograbadora (ver página 5).
- Para activar su control remoto presione  para operar su videograbadora (ver página 5 para operar otras funciones).

 Receptor de satélite y el servicio de cable son sistemas de televisión de pago.

Información Adicional

Solución de problemas

Si tiene problemas con el televisor, intente seguir las indicaciones que se sugieren a continuación. Si el problema persiste, consulte con su proveedor Sony más cercano.

General

Problema	Posibles Soluciones
Hace falta restablecer los ajustes de fábrica	<input type="checkbox"/> Encienda el televisor, mientras mantenga oprimido el botón RESET del control remoto, oprima el botón de POWER (encendido/apagado) del panel frontal del televisor (el televisor se apagará). Suelte el botón RESET . Encienda el televisor.
El televisor está sucio	<input type="checkbox"/> Limpie el televisor con un paño suave y seco. Nunca use solventes fuertes como diluyentes o bencina, puesto que pueden dañar el acabado de la unidad.
Aparece un cuadro negro en la pantalla	<input type="checkbox"/> Está seleccionada una opción de texto en el menú de Ajustes (página 37) y no hay texto disponible. Para desactivar esta función, seleccione No en la opción Caption Vision (subtítulos). Si desea ver subtítulos, escoja CC1-4 en lugar de Text1-4.


Control Remoto

El Control Remoto no funciona	<input type="checkbox"/> Al operar su televisor oprima TV (FUNCTION). <input type="checkbox"/> Vea si instaló las baterías correctamente. <input type="checkbox"/> Las baterías pueden estar bajas. Sustitúyalas (página 2). <input type="checkbox"/> Aleje el televisor por lo menos 1 metro de cualquier lámpara fluorescente.
No se puede cambiar el canal con el control remoto	<input type="checkbox"/> Asegúrese de que no ha cambiado el televisor del canal 3 o 4 con otro dispositivo para cambiar canales. <input type="checkbox"/> Si está usando otro aparato para cambiar los canales, no olvide presionar el botón FUNCTION correspondiente a ese aparato. Por ejemplo, si está usando su grabadora para controlar los canales, asegúrese de presionar los botones VCR/DVD FUNCTION (página 3).
Perdió el control remoto	<input type="checkbox"/> Puede utilizar los botones del panel frontal de audio y video para acceder a los menús (página 2). Póngase en contacto con su proveedor Sony más cercano para solicitar uno de repuesto.
Más de un código ésta listado	<input type="checkbox"/> Introdúzcalos por separados hasta que encuentre el código correcto para su equipo.
Se desprogramó el control remoto cuando cambió las baterías	<input type="checkbox"/> Debe programar de nuevo el control remoto (página 5).

Video

No hay imagen ni sonido	<ul style="list-style-type: none"><input type="checkbox"/> Asegúrese de que el cable de alimentación está conectado.<input type="checkbox"/> Si hay luz roja que parpadea en la parte frontal del televisor durante unos minutos, desconecte y vuelva a conectar el cable de alimentación para restaurar el televisor. Si el problema persiste llame al servicio técnico local.<input type="checkbox"/> Compruebe los ajuste de TV/VIDEO; si ve la televisión, póngalo en TV; si ve imágenes de un aparato de video, póngalo en VIDEO 1,2,3 o 4 (página 3).<input type="checkbox"/> Intente ver otro canal para descartar algún problema en la emisora.
Imagen de mala calidad, sin Imagen, buen sonido	<ul style="list-style-type: none"><input type="checkbox"/> Ajuste el contraste en el menú de video (página 30).<input type="checkbox"/> Ajuste el brillo en el menú de video (página 30).<input type="checkbox"/> Compruebe las conexiones de la antena o de televisión por pago (página 11).
Imagen pobre en color y nitidez	<ul style="list-style-type: none"><input type="checkbox"/> Ajuste color en el menú de video (página 30).<input type="checkbox"/> Ajuste nitidez en el menú de video (página 30).<input type="checkbox"/> Asegúrese en el menú de video que la opción de "Intelligent Pic" se encuentre en la posición de "No" (página 30).
Sin color	<ul style="list-style-type: none"><input type="checkbox"/> Ajuste color en el menú de video (página 30).
Sin señal	<ul style="list-style-type: none"><input type="checkbox"/> Compruebe el ajuste de Cable en el menú de Canal (página 32).<input type="checkbox"/> Compruebe las conexiones de la antena o de televisión por pago (página 11).<input type="checkbox"/> Asegúrese de que el canal seleccionado esté emitiendo señal.
Líneas de puntos o rayas	<ul style="list-style-type: none"><input type="checkbox"/> Ajuste la antena.<input type="checkbox"/> Aparte el televisor de cualquier otro equipo electrónico. Algunos equipos electrónicos crean ruido eléctrico que puede interferir con la recepción del televisor.
Imágenes dobles o fantasmas	<ul style="list-style-type: none"><input type="checkbox"/> Revise la antena exterior o llame al servicio técnico de televisión por pago.

Audio

- | | |
|---------------------------------|---|
| Buena imagen, sin sonido | <ul style="list-style-type: none"><input type="checkbox"/> Presione  para que desaparezca Muting de la pantalla (página 3).<input type="checkbox"/> Compruebe los ajustes de Audio. Es posible que el televisor esté ajustado en Auto SAP o Bocinas se encuentre en la posición No (página 32). |
|---------------------------------|---|

Canales

- | | |
|--|--|
| No se reciben canales con un número alto (UHF) cuando se utiliza una antena | <ul style="list-style-type: none"><input type="checkbox"/> Asegúrese de que Cable está en la posición No en el menú de Canal (página 33).<input type="checkbox"/> Ejecute auto programación para añadir canales que actualmente no estén en la memoria (página 25). |
| Parece que no funcionan las emisoras de cable | <ul style="list-style-type: none"><input type="checkbox"/> Asegúrese de que Cable esté en la posición Si en el menú de Canal (página 33).<input type="checkbox"/> Ejecute Auto programación para añadir canales que actualmente no estén en la memoria (página 25). |

Si después de leer este manual de instrucciones, tiene más preguntas relacionadas con el uso del televisor Sony, póngase en contacto con su proveedor Sony más cercano para recibir asistencia técnica.


KV-29FA310

¡MUY IMPORTANTE!


Guía Rápida de Conexión 3.1 Audio System (bocina central y subwoofer externo)*

- ✎ • Desconecte el televisor antes de conectar el 3.1 Audio System.
- No se debe conectar en la terminal indicada del televisor ningún otro aparato diferente al 3.1 Audio System; esto podría provocar un mal funcionamiento.
- El 3.1 Audio System no debe ser conectado a ningún otro aparato.


1 Introduzca el perno de soporte del 3.1 Audio System en el orificio guía que se encuentra en la parte superior del televisor.

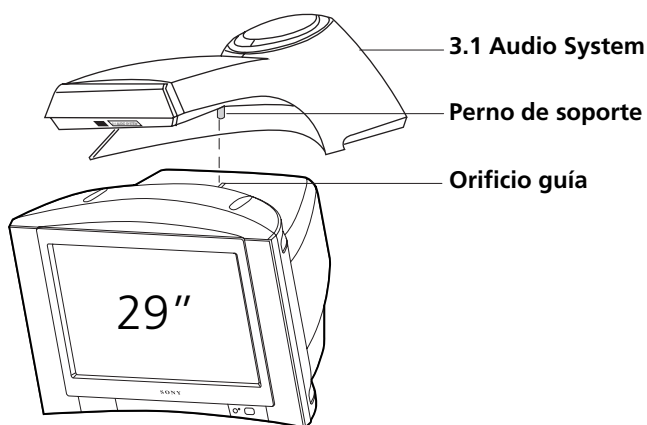

2 Conecte el cable del 3.1 Audio System en la terminal indicada que está en la parte posterior del televisor.

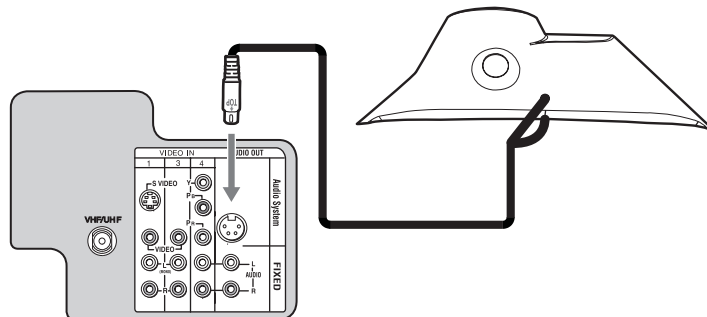

3 Conecte el televisor al tomacorriente.

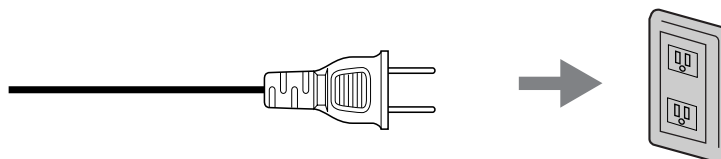

✎ Use sólo el cable suministrado, de otro modo su televisor no funcionará bien.

* 29" es equivalente a 73,66 cm

* Ver glosario